



These instructions and the images herein are proprietary. Any unauthorized reproduction is prohibited.

SDP-ABS-EARLY

ABS PLASTIC SLIDER DOOR PANELS FOR 1980-84 VANAGON

The SDP-ABS-EARLY for Vanagon is CNC-machined to fit the slider door interior panel on 1980-84 models. Made from nearly-indestructible, 3mm thick, ABS plastic, this panel can be run as-is (they look awesome), painted with a high-quality plastic paint, or upholstered. Each panel features recessed cutouts for locating optional fasteners and door pulls. These cutouts are scribed onto the back side of the panel with easy-to-follow lines.

See the diagram on the back of this page for more details. Use the indicated bit size to drill the additional mounting holes for your door accessory options. Each hole may then need to be filed slightly for clearance. **It is only necessary to cut the holes for your particular door accessory options.**

Panel Installation:

1. Place the panel over the door, aligning the mounting hole cutouts.
2. Screw in each Panel Fastener snugly using a Phillips-head screwdriver. Slight inward pressure can be used, but forcing the clips all the way in will make the clip hard to remove.

Be careful not to over-tighten and do not push the clips in without turning them.

GoWesty Camper Products • 1119 Los Olivos Ave, Los Osos, CA 93402 • 888-469-3789 • www.gowesty.com



These instructions and the images herein are proprietary. Any unauthorized reproduction is prohibited.

SDP-ABS-EARLY

ABS PLASTIC SLIDER DOOR PANELS FOR 1980-84 VANAGON

The SDP-ABS-EARLY for Vanagon is CNC-machined to fit the slider door interior panel on 1980-84 models. Made from nearly-indestructible, 3mm thick, ABS plastic, this panel can be run as-is (they look awesome), painted with a high-quality plastic paint, or upholstered. Each panel features recessed cutouts for locating optional fasteners and door pulls. These cutouts are scribed onto the back side of the panel with easy-to-follow lines.

See the diagram on the back of this page for more details. Use the indicated bit size to drill the additional mounting holes for your door accessory options. Each hole may then need to be filed slightly for clearance. **It is only necessary to cut the holes for your particular door accessory options.**

Panel Installation:

1. Place the panel over the door, aligning the mounting hole cutouts.
2. Screw in each Panel Fastener snugly using a Phillips-head screwdriver. Slight inward pressure can be used, but forcing the clips all the way in will make the clip hard to remove.

Be careful not to over-tighten and do not push the clips in without turning them.


GoWesty Camper Products • 1119 Los Olivos Ave, Los Osos, CA 93402 • 888-469-3789 • www.gowesty.com



These instructions and the images herein are proprietary. Any unauthorized reproduction is prohibited.

SDP-ABS-EARLY

ABS PLASTIC SLIDER DOOR PANELS FOR 1980-84 VANAGON

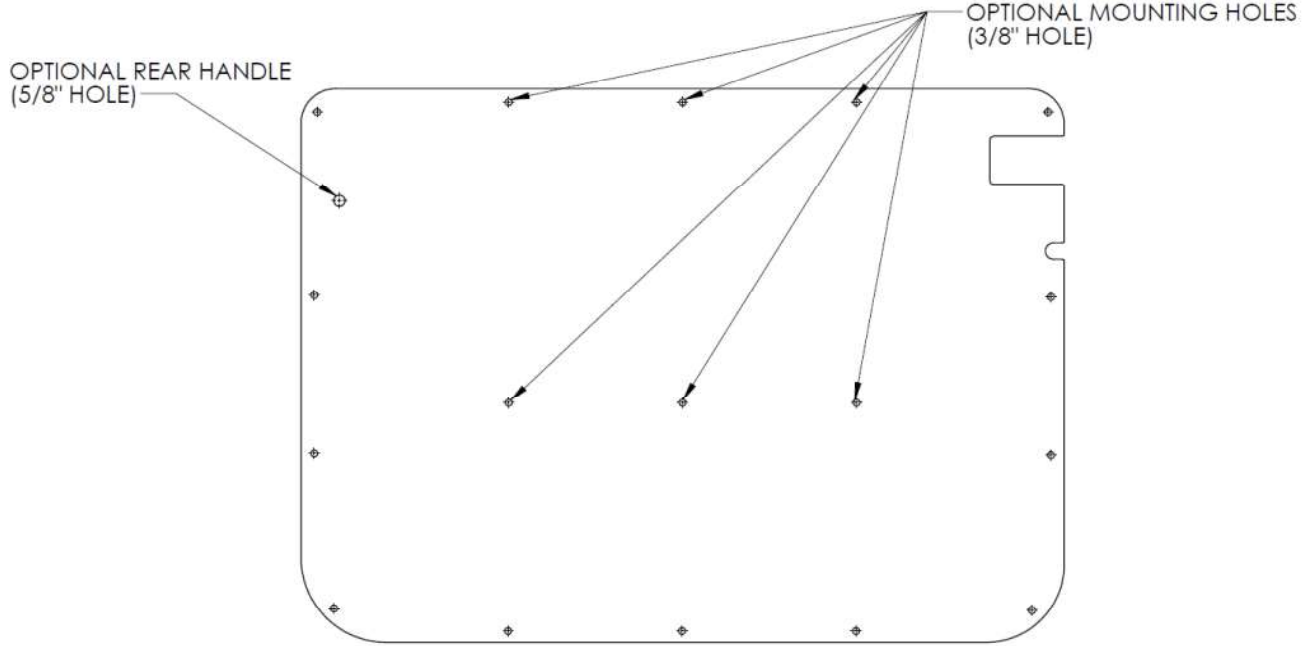


GoWesty Camper Products • 1119 Los Olivos Ave, Los Osos, CA 93402 • 888-469-3789 • www.gowesty.com



These instructions and the images herein are proprietary. Any unauthorized reproduction is prohibited.

SDP-ABS-EARLY

ABS PLASTIC SLIDER DOOR PANELS FOR 1980-84 VANAGON

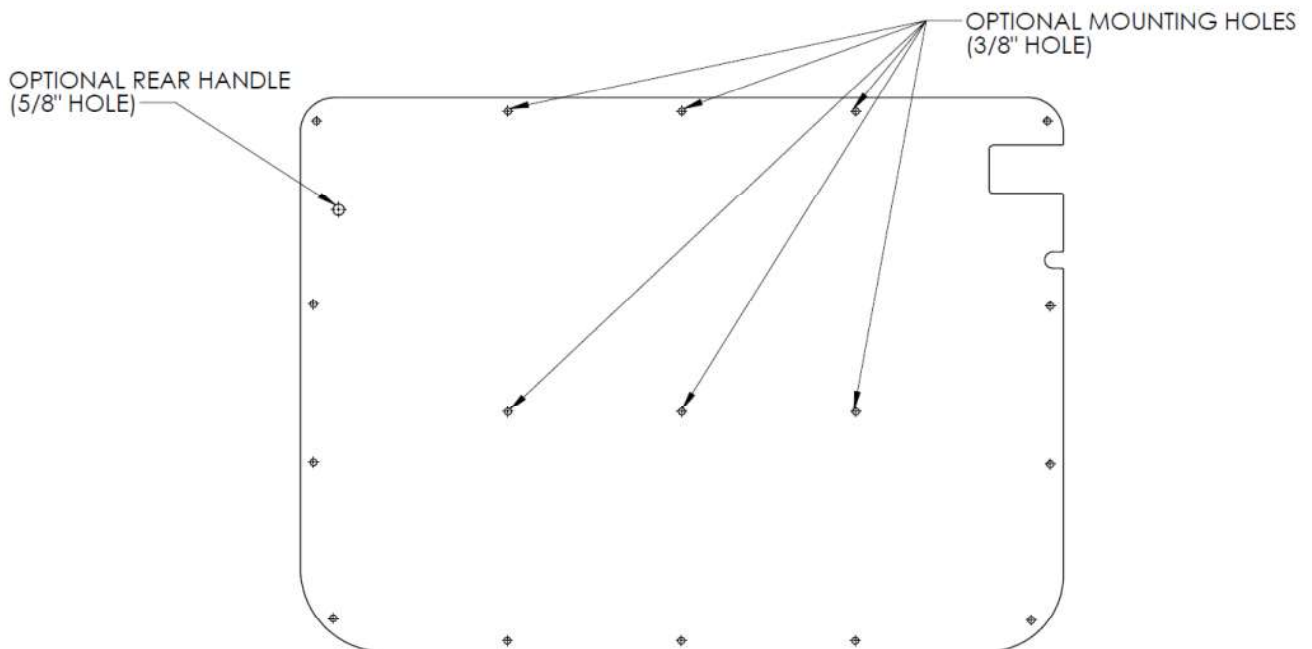

GoWesty Camper Products • 1119 Los Olivos Ave, Los Osos, CA 93402 • 888-469-3789 • www.gowesty.com