



These instructions and the images herein are proprietary. Any unauthorized reproduction is prohibited.

WOOD INTERIOR PANELS

WOOD-BUNDLE, for '80-'91 Westfalia Campers

INSTRUCTIONS:

Start by applying a finish to your panels. These wood panels are shipped raw and unfinished so you can apply a finish that matches your vehicle. **Avoid handling these panels until you've given them a coating of your preferred finish.** Raw wood will quickly pick up grease from your fingertips or water stains from moisture.

These panels are made to be a universal fit regardless of vehicle options. Use the appropriately-sized hole-saw, rotary tool or saw to cut the necessary recessed sections located on the back of each panel. Each cutout may then need to be filed slightly for clearance. **Be sure to only cut the sections for your particular options. Not all recesses will need to be cut out.** See the diagrams on the following pages for a description of each recessed section.

With your panels finished and cut to match your vehicle's options, install the panels using the included fasteners.

Notes:

- *The speaker hole is sized for late-model stock speakers. Early-model stock speakers will require a larger (4") hole.*
- *Complete rear seat removal is not required.*
- *These wood panels will bend slightly to fit the contours of the body. While installing the fasteners, you may need to press firmly on the panel so that it meets the vehicle's body.*

Fasteners:

When securing the panel, push all the clips through the panel and into the body of the van. You can then secure the panels by simply pressing in the screws on the clips – these usually don't need to be turned to secure the fasteners.




These instructions and the images herein are proprietary. Any unauthorized reproduction is prohibited.


WOOD INTERIOR PANELS

WOOD-BUNDLE, for '80-'91 Westfalia Campers

FRONT PANEL

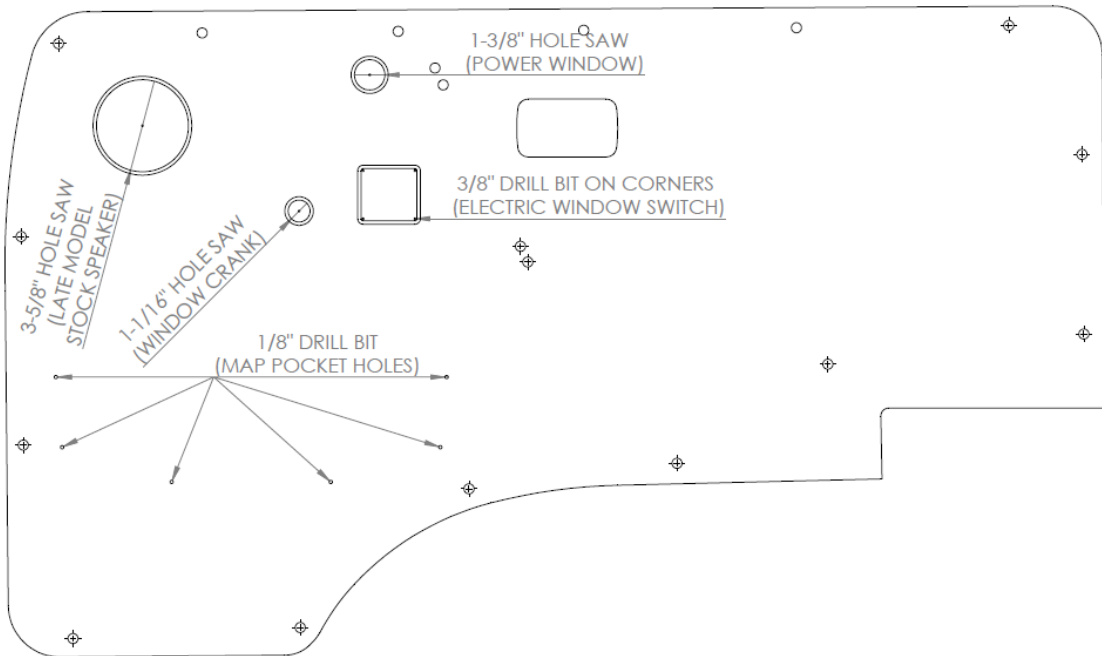

SLIDER DOOR PANEL

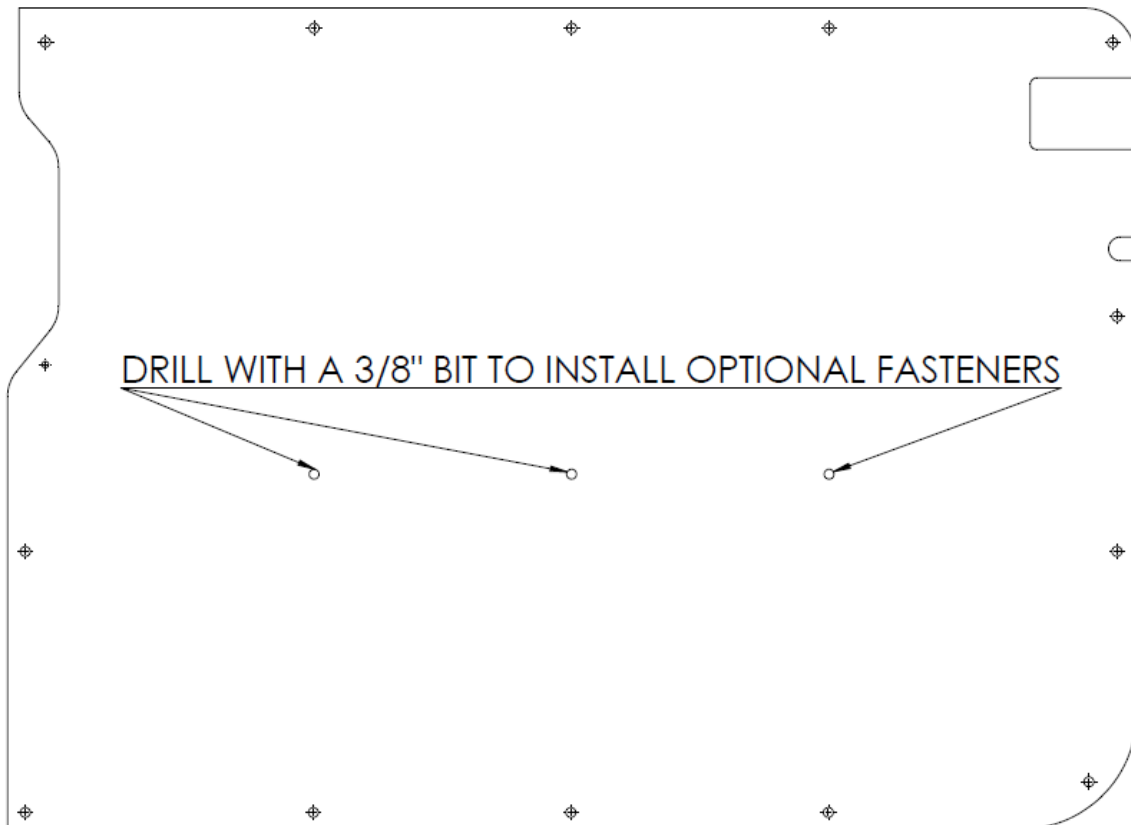




These instructions and the images herein are proprietary. Any unauthorized reproduction is prohibited.


WOOD INTERIOR PANELS

WOOD-BUNDLE, for '80-'91 Westfalia Campers

FRONT HALF OF REAR QUARTER PANEL

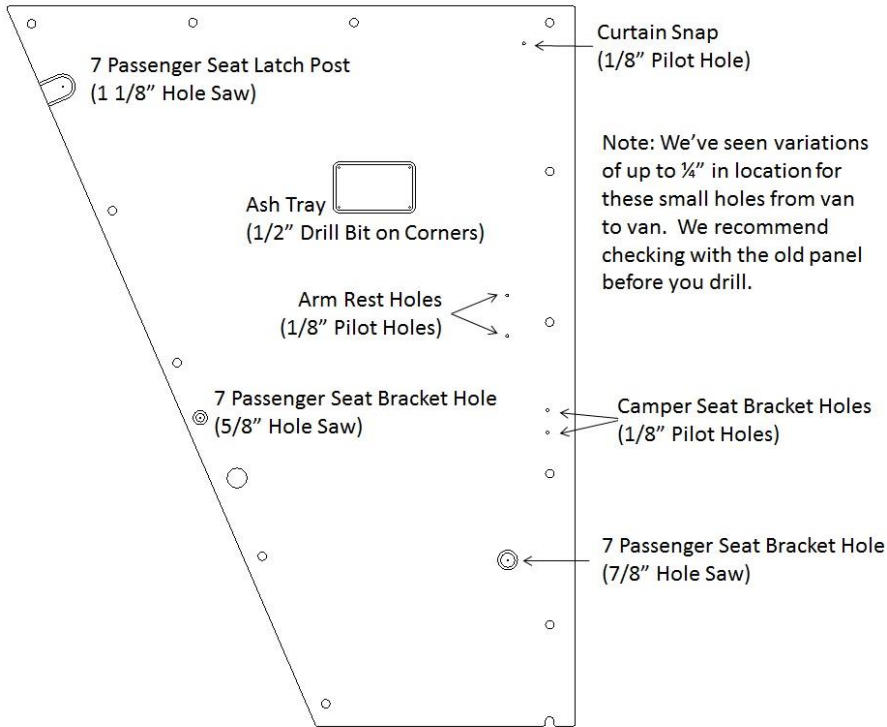

REAR HALF OF QUARTER PANEL

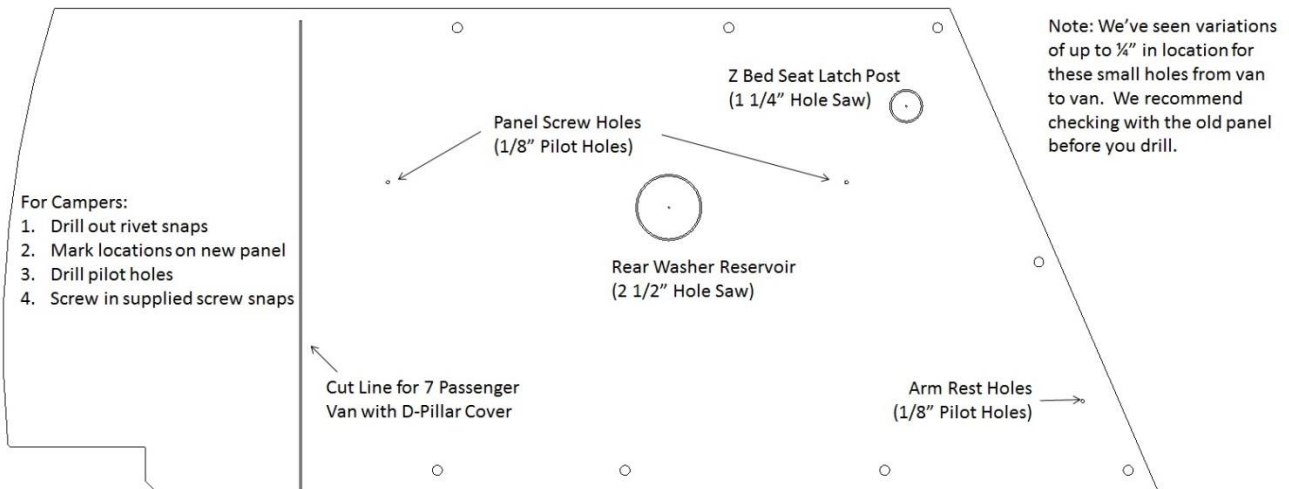




These instructions and the images herein are proprietary. Any unauthorized reproduction is prohibited.

WOOD INTERIOR PANELS

WOOD-BUNDLE, for '80-'91 Westfalia Campers

HATCH PANEL

Some Vanagons, starting in 1990, have an interior latch release for the hatch. If you have this interior latch release, use your old hatch panel as a guide to locate and create this cutout.

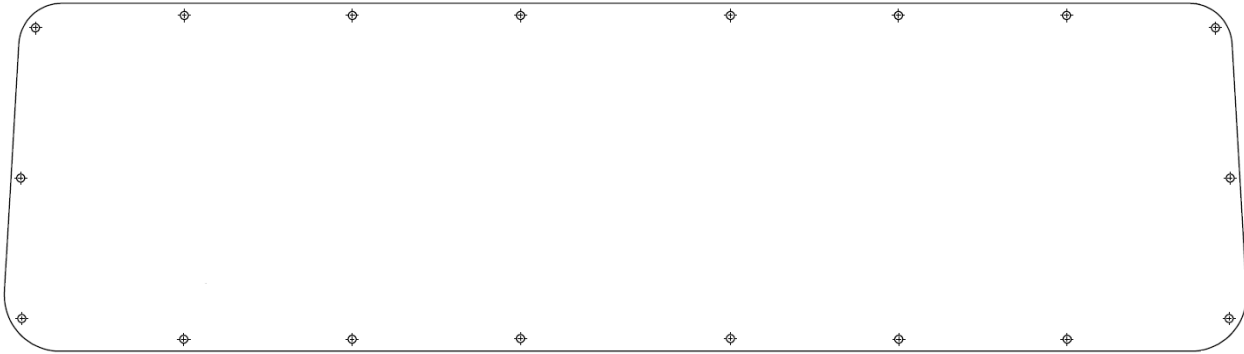

KICK PANELS

These panels are optional, and can be installed using the included double-sided tape. These make a great mounting surface to relocate your speakers!

