



## 308036-HD-PC/308036-HD-MB 308036-HD-BN

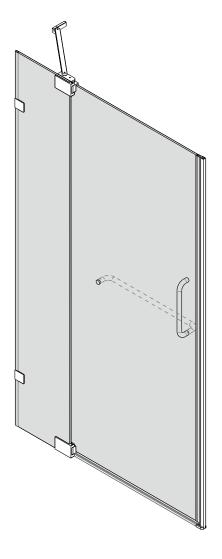

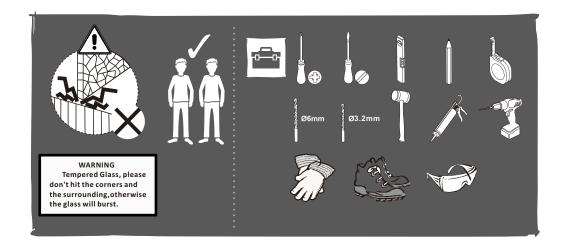



## General Information

Please inspect the product immediately upon receipt for transit damage, missing packs/parts or manufacturing fault. Damage reported later cannot be accepted. Please handle the product with care avoiding knocks and shock loading to all sides and edges of the glass.

### Notes: Safety glass can not be re-worked.

Please read these instructions carefully before start of installation.

Special care should be taken when drilling walls to avoid hidden pipes or electrical cables. Note: This product is heavy and may require two people to install.


#### **Aftercare instructions**

After use, your shower should be cleaned with soap and water. This is particularly important in hard water districts where insoluble lime salts may be deposited and allowed to build up. Cleaners of a gritty or abrasive nature should not be used. Care should be taken to avoid contact with strong chemicals such as organic solvents and strippers.

Glass cleaners can be used but with caution, if in doubt contact the manufacturer of the cleaner in question.

Please keep these instructions for aftercare and customer service details.



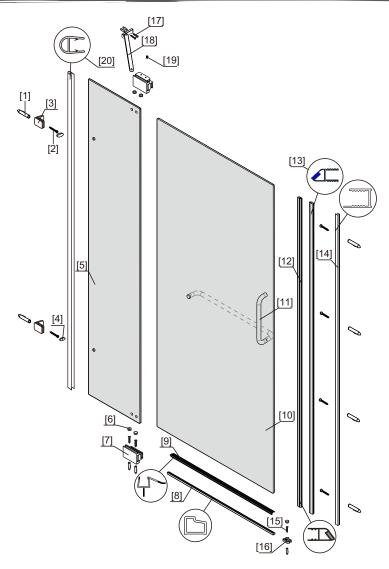


- [1] 11xWall Plugs
- [2] 4xScrews ST4x35
- [3] 2xWall Connectors
- [4] 2xScrew Cover Caps
- [5] 1xFixed Panel
- [6] 5xScrew Cover Caps
- [7] 2xHinges L&R
- [8] 1xAluminum Seal
- [9] 1xWater Deflector
- [10] 1xDoor Panel


- [11] 1xHandle Set
- [12] 1xMagnetic Seal
- [13] 1xMagnetic Seal
- [14] 1xWall Profile
- [15] 1xScrew ST4x25
- [16] 1xCover Cap L/R
- [17] 2xScrews ST4x35 [18] 1xBracket
- [19] 1xScrew M5x16
- [20] 1xDoor Side Gasket

# Box Contents:

1xInstallation Instruction.	<b>→</b>		
[1] 1xWall Plugs.	-		00000000000
[2] 4xScrews ST4x35.	-		0 0 0 0
[3] 2xWall Connectors. [4] 2xScrew Cover Caps.	-		A A 00
[5] 1xFixed Panel.	-		<u></u>
[6] 5xScrew Cover Caps.	<b>-</b>		88888
[7] 2xHinges L&R.	<b>→</b>		
[8] 1xAluminum Seal.	<b>→</b>		
[9] 1xWater Deflector.	-	7	
[10] 1xDoor Panel	<b>→</b>		
[11] 1xHandle Set.	<b>→</b>		
[12] 1xMagnetic Seal.	-	<b>I</b>	
[13] 1xMagnetic Seal.	-		
[14] 1xWall Profile.	-		
[15] 1xScrew ST4x25.	<b>→</b>		<b>⊗</b>
[16] 1xCover Cap L/R.	-		<b>%</b> / <b>@</b>
[17] 2xScrews ST4x35.	-		
[18] 1xBracket. [19] 1xScrew M5X16.	-		· ·
[20] 1xDoor Side Gasket.	-	D	
Wrenchs.	-		<i>) ]</i>






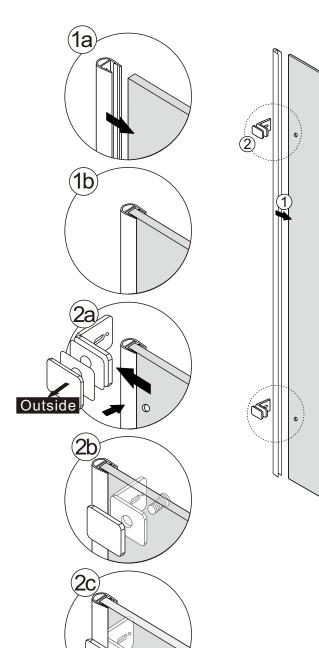

Outside




[1]	×2
[2]	x2(ST4x35)
[4]	<i>⊘</i> x2

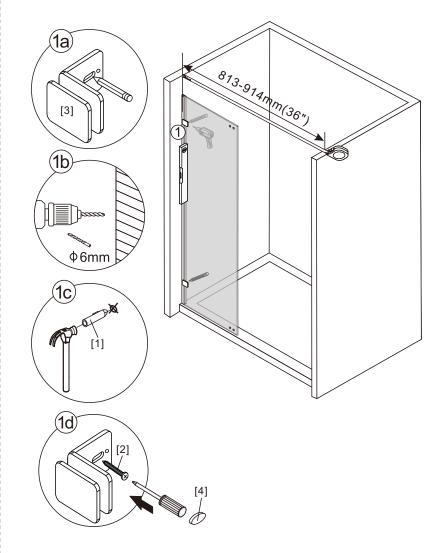



x2(ST4x35)


[7] x1/1(L/R)


1a [5] Outside

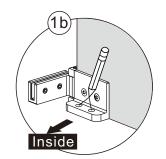


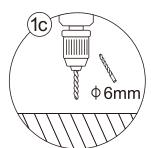


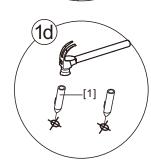


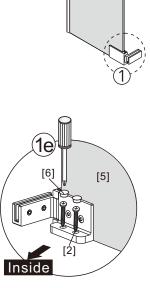




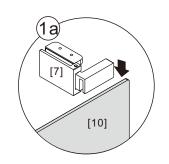


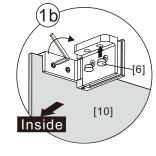


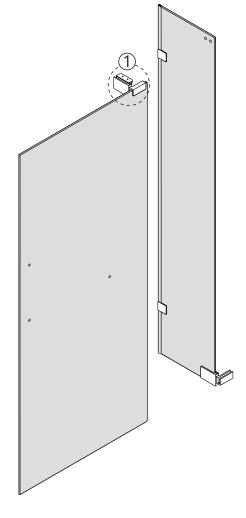










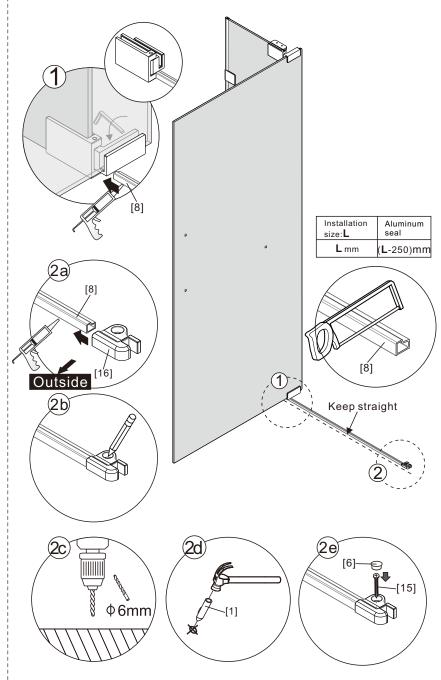


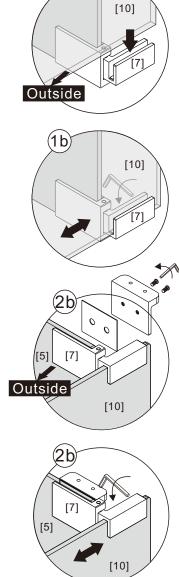


(1a)

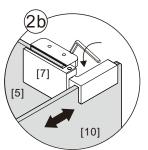




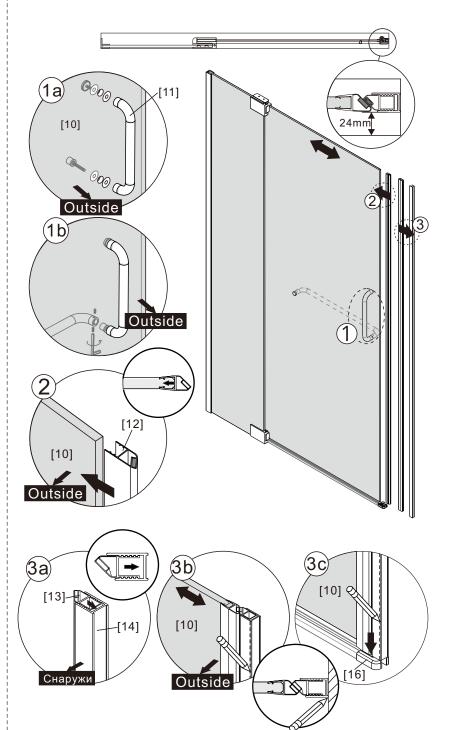






VINNOVA

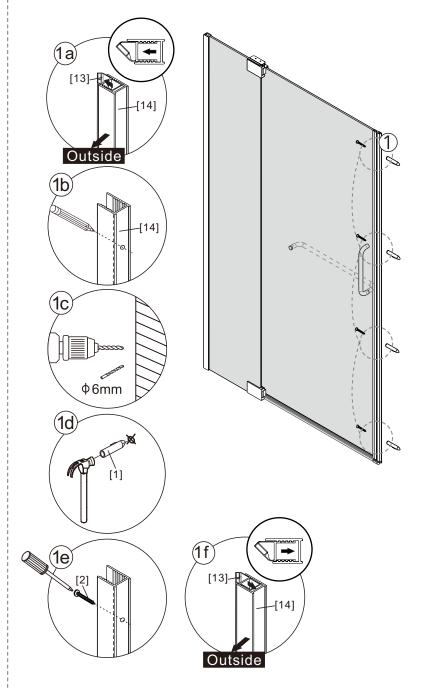



09



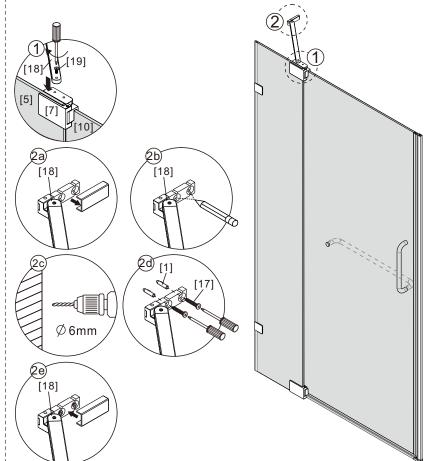

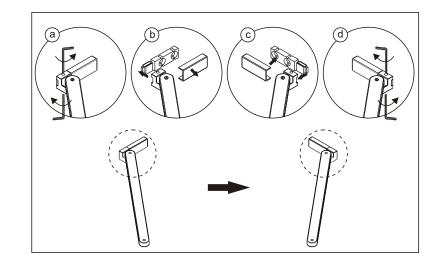


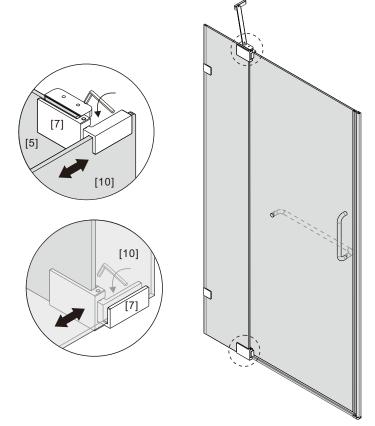


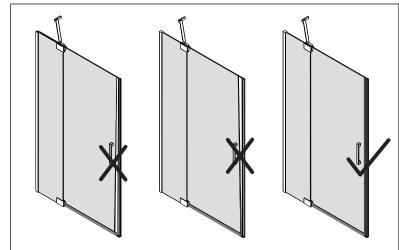



VINNOVA FASHION BATHEROOM LIFE





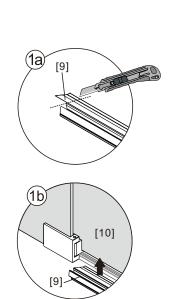

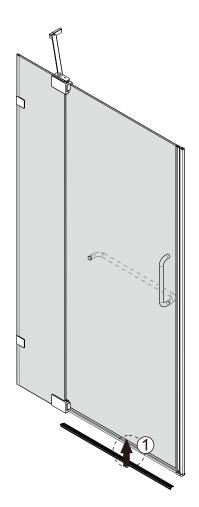

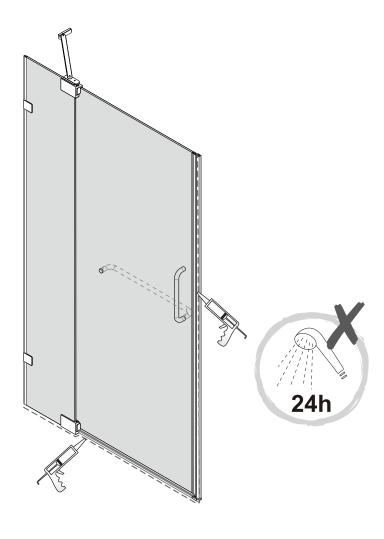

 Do not use the shower enclosure for at least 24 hours in order to allow the silicone sealant to cure fully.