


ANCHORAGE

INSTALL GUIDE

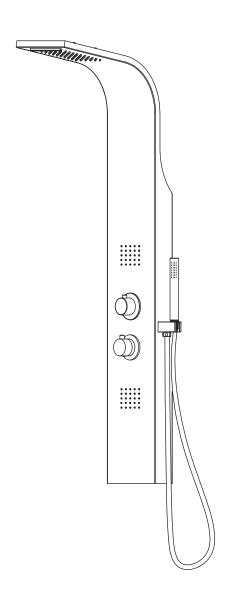

Model# SP-AZ038

PERFECTION IS OUR TRADITION™

TABLE OF CONTENTS

Parts List Pg. 1
Before You Start Pg. 2
Spec Drawing Pg. 3
Installation Pg. 4
Care & Maintenance Pg. 9
Warranty Pg. 10
Registration Final Page

YOUR REVIEWS MATTER!




The ANZZI™ Family thanks you for your purchase and hopes you enjoy your very own ANZZI product for years to come! In the meantime let us know about your experience? We would love to hear your thoughts from the packaging to the quality and function of the product.


Leave a review on www.ANZZI.com/reviews and let everyone know how satisfied you are with ANZZI!

Also, we humbly request submitting as many pictures as possible along with your review. Millions of shoppers will want to know about your experience with our products. Don't just tell but show, too!

PARTS LIST

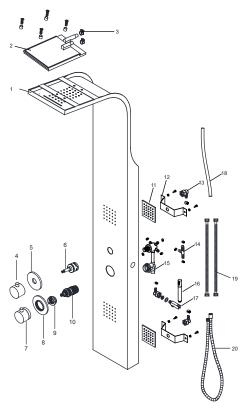


Component no.	Component	Material
1	body	s/s
2	nead shower with water fal	ABS
3	clip	s/s
4	knob	zinc
5	knob plate cover	brass
6	function cartridge	ABS
7	handle	zinc
8	handle plate cover	brass
9	valve cap	ABS
10	thermostatic cartridge	ABS
11	bodyjets	brass
12	fixing bar	s/s
13	one way joint	ABS
14	three way joint	ABS
15	faucet	brass
16	hand shower	ABS
17	hand shower holder	ABS
18	pvc hose	PVC
19	braided hose	s/s
20	flexible hose	s/s

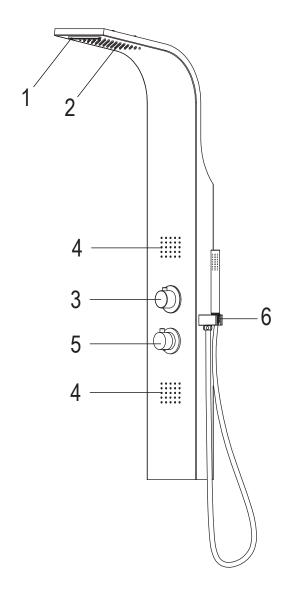


- 1. Waterfall
- 2. Shower Head
- 3. Diverter
- 4. Body Jets
- 5. Mixer
- 6. Hand Shower

BEFORE YOU START

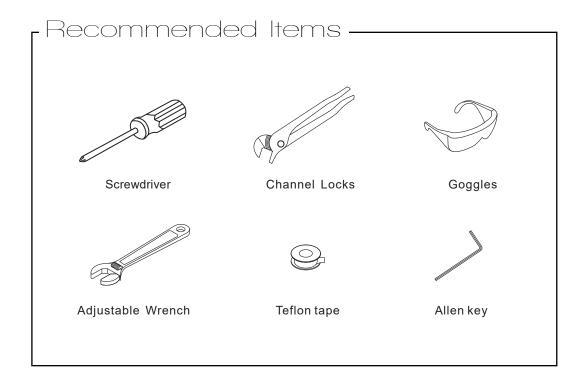

ATTENTION: Please read all instructions thoroughly including all warnings, attentions and notes before beginning installation.

SPEC DRAWING

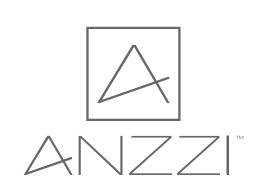

Perfection is our Tradition™

ANCHORAGE

SP-AZ038

Material: Stainless Steel

Finish: Brushed

Handles: 2 Jets:


Shower: 4.095" x 5.827"

Sprayer: 60" reach Weight: 15.18 lbs Height: 51.18"
Supply: 1/2" connections

Flow: 1.8 gpm


Features

Heavy Rain™ Showerhead Acu-Stream™ high pressure body jets Euro-Grip™ hand held sprayer Rhino Alloy™ certified materials

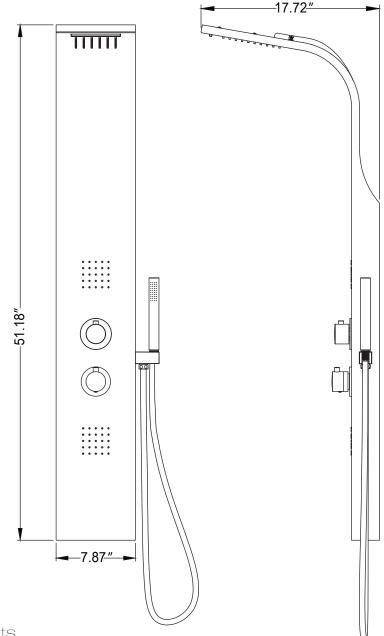

INSTALLATION (SETUP)

Figure A

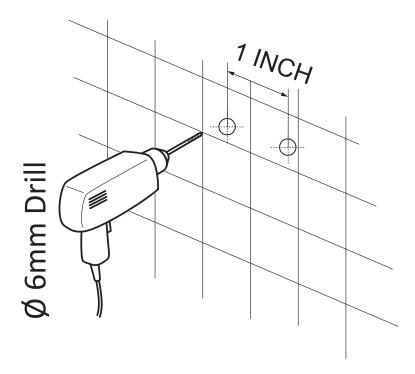



IMPORTANT Before drilling any holes for the shower panel brackets, ensure there are no hidden cables or pipelines aligned with the desired drilling position.

Step A Drill the two holes for the top bracket 1" apart at the desired height.

Step A.2 Drill the two holes for the bottom bracket 1" apart at approximately 45" below the top bracket.

INSTALLATION (SETUP)

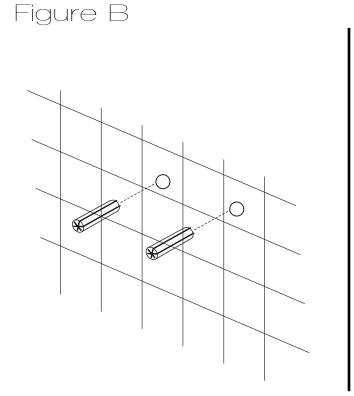


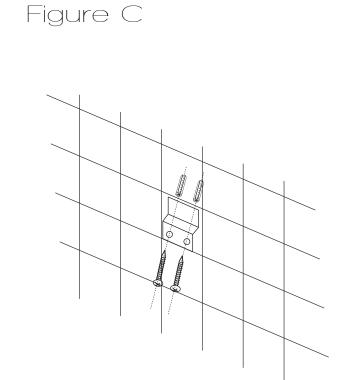

- Step B Insert the wall anchors into the pre-drilled holes as shown in Figure B.
- Place the shower panel brackets aligned with the drilled holes and using a Philips screw-Step C driver tighten the screws to secure the brackets.

INSTALLATION (HANDSHOWER)


Figure 1

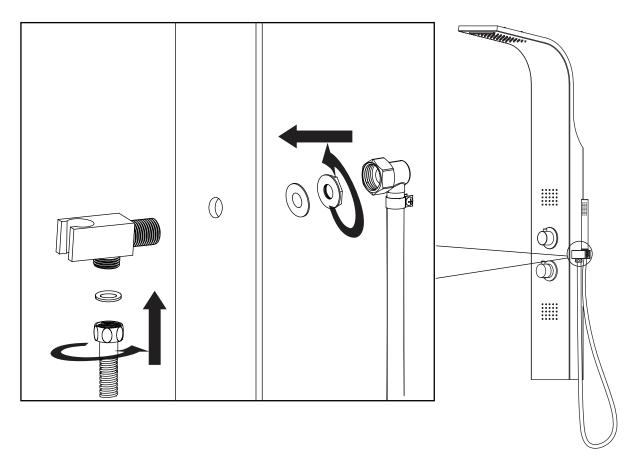

- **Step 1A** Insert the shower wand holder through the pre-drilled hole on the shower panel.
- **Step 1B** Install the water supply hose for the shower wand onto the holder, as shown.
- **Step 1C** Make sure all O-rings are inserted to prevent leakage.
- **Step 1D** Once the shower panel is fully installed and hung on the bracket, you can install the shower wand hose to the holder connection.

INSTALLATION (HANDSHOWER)


Figure 2

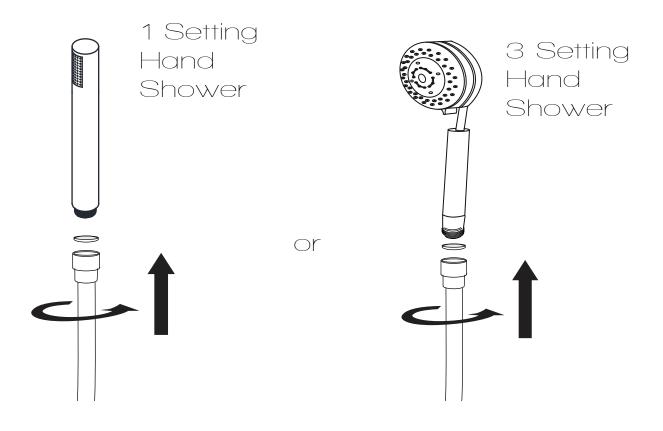

Step 2A Finally, install the shower wand to the hose, as shown.

INSTALLATION (WALL MOUNTING)

Figure 4

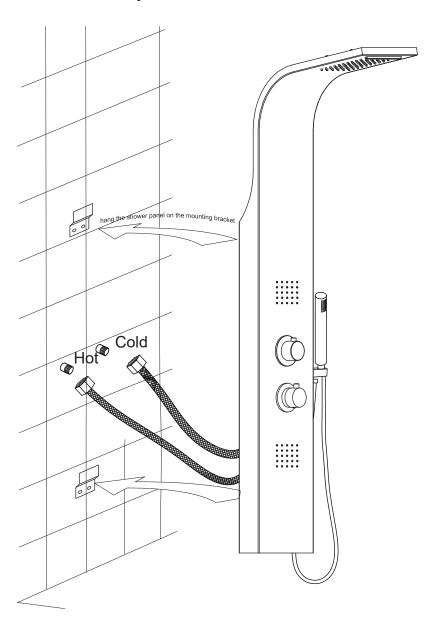

- **Step 4A** Screw the cold and hot water hoese from the shower panel to the supply lines in the wall.
- **Step 4B** Carefully hang the shower panel on the secured mounting brackets as shown in Figure 4.

CARE AND MAINTENANCE

ANZZI™ products are crafted with superior quality standards and workmanship and are engineered to stand the test of time. However, that does not mean the product can be neglected and will need some care and cleaning.

It is recommended to use regular soap and hot water along with a non-abrasive cloth or sponge to regularly clean the product. This avoids any nasty build up or deposits which would be tougher to remove.

If you feel the use of stronger cleaning solutions or chemicals is necessary always test the cleaning solution or chemical on an inconspicuous area before applying to the entire surface.


Wipe all surfaces clean and rinse completely with water immediately after applying cleaner. Rinse and dry any overspray that lands on nearby surfaces.

DO NOT ALLOW THE CLEANER TO SOAK.

Following these simple principles will ensure you ANZZI™ product will remain as lustrous and stunning as the day it was first received. ENJOY!

Sincerely,

La Familia ANZZI™

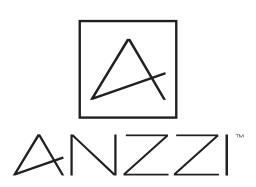

Perfection is our Tradition™

