


# Installation

Installation should be performed by a licensed contractor.

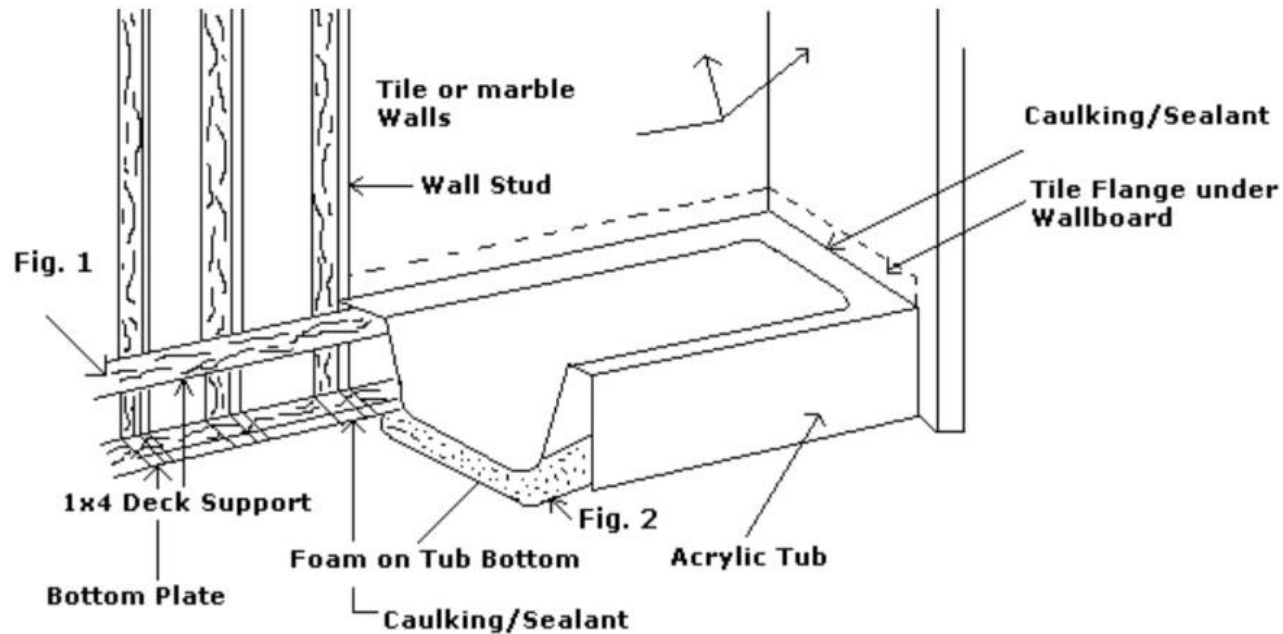

(1) Level tub as shown in Fig. 1 and nail a 1" x 4" around three walls on underside of bathtub deck so the tub deck will sit on top of the 1" x 4"s. It is **very IMPORTANT** to install the nailer, which will stabilize the tub deck. Without the nailer to sit on, your tub deck will warp and break the silicone allowing water to leak onto the floor, rotting your frame structure.

(2) All of our tubs come with a pre installed foam bottom that is pre-leveled. This bottom must sit flat on the floor not raised above it. This gives the bottom of the tub the support it needs to prevent damages to the acrylic laminate and good solid support of the tub. If it is raised above the floor you will need to mix mortar in a garbage bag and set it under the tub to give the bottom full support, while still having the 1" x 4" deck supports.

**IMPORTANT!!!**  
**BOTTOM OF TUB MUST BE SUPPORTED**  
**WITH FOAM, MORTAR OR OTHER LIKE**  
**MATERIALS OTHERWISE**  
**WARRANTY WILL BE VOIDED**

All products need to be tested for proper drainage and/or leaks prior to final installation by your installer.

Whirlpool system, Air massage system, or vibrosonic system requires a 20Amp GFCI dedicated circuit and an access panel.