



# Savannah Standing Shower– CTC205

## Parts Identification & Assembly Instructions



Economy Shower Hardware  
(Cold water Only)



Platinum Shower Hardware  
(Hot & Cold)  
(Full stainless steel with hand held shower)

### Optional Shower Hardware


| Part # | Qty | Description                                     |
|--------|-----|---|
| SV-01  | 1   | Savannah Shower Wall Assembly                   |
| SV-02  | 7   | Shower Floor Boards - 40" (102cm)               |
| SV-03  | 2   | Front/Back Floor Support - 40" (102cm)          |
| SV-04  | 4   | Floor Joists – 38 ½" (100cm)                    |
| SV-05  | 1   | Wall Assembly Top Cover – 5 ½" x 42" (14x107cm) |
| H1     | 2   | Stainless Steel Angle Bracket                   |

| Qty | Hardware                |
|-----|-------------------------|
| 60  | 1 ½" (38mm) Wood Screws |
| 16  | 2 ½" (64mm) Wood Screws |
| 8   | 1 ½" (38mm) Lag Screws  |



# Savannah Standing Shower– CTC205

## Parts Identification & Assembly Instructions

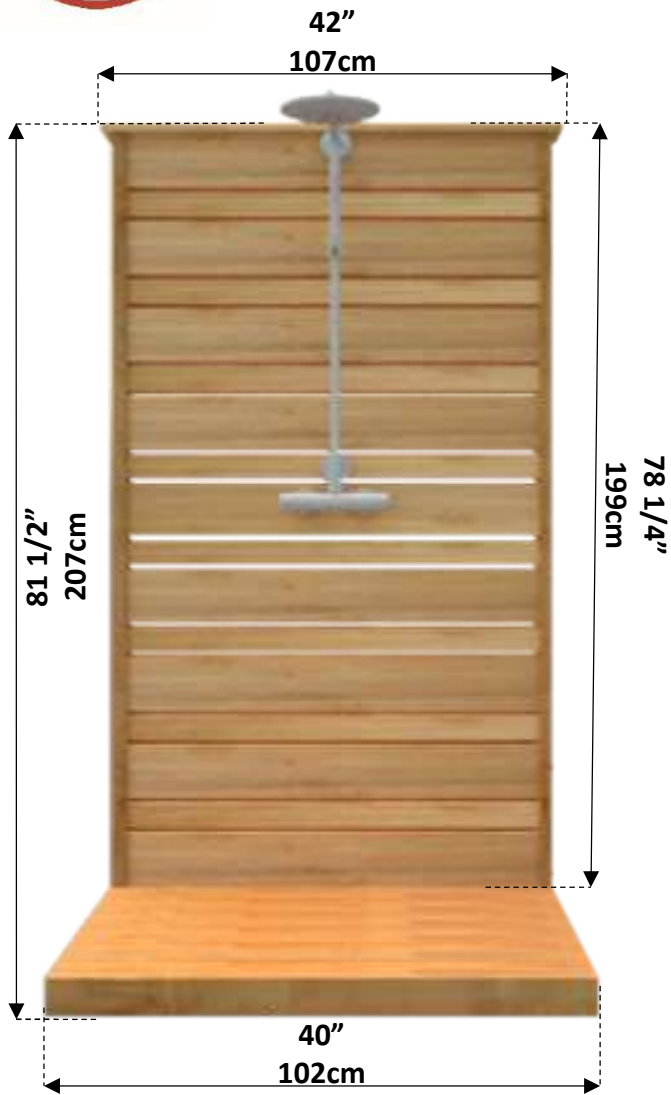

Packaging  
86"x45"x12" 165 lbs  
218cmx114cmx30cm 75kgs





# Savannah Standing Shower– CTC205


## Parts Identification & Assembly Instructions



1. To start the assembly of your Savannah shower, unpack the contents of the crate with the help of a friend. All parts are located inside of the back wall assembly as in (Fig. 1)




(Fig. 1)

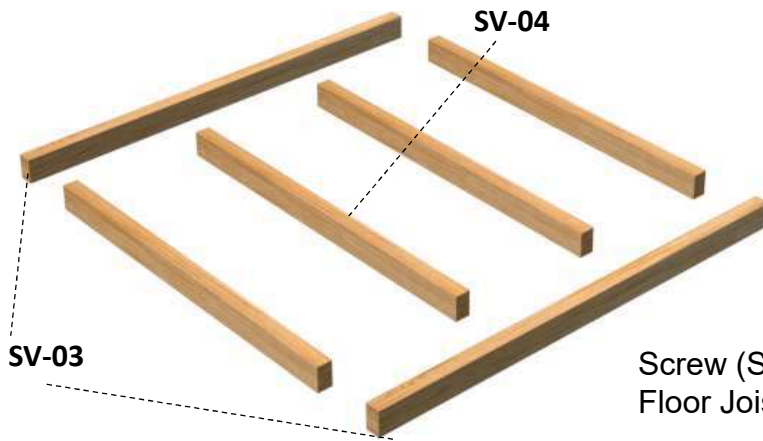


### 2. Floor Assembly

Screw (SV-03) Front Back Floor Supports to (SV-04) Floor Joists using the provided 2 ½" (64mm) screws.

3. Once the base is assembled as in (Fig.3), use 1 ½" (38mm) screws to fasten the (SV-02) Shower Floor Boards to each of (SV-04) Floor Joists spacing floor boards evenly.

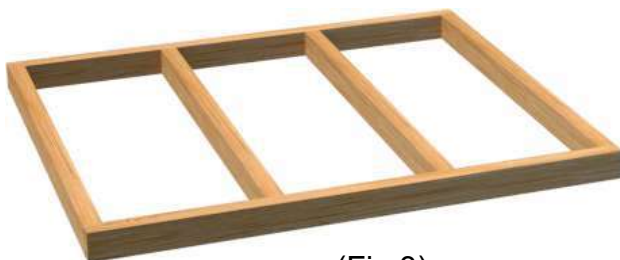

(Fig.3)

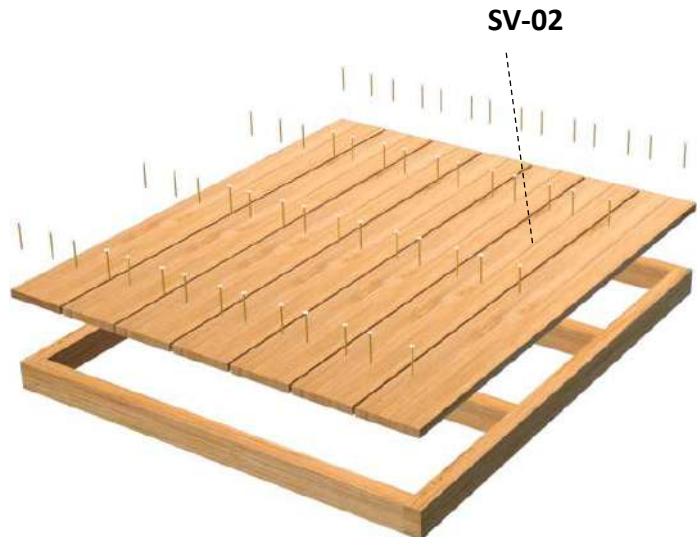




## Savannah Standing Shower– CTC205 Parts Identification & Assembly Instructions



4. Position (SV-01) Shower Wall Assembly flush onto the back of the assembled base.


Secure (H1) Angle Brackets to either side of the wall assembly with the provided 1 ½" (38mm) lag screws.  
(Fig.4)

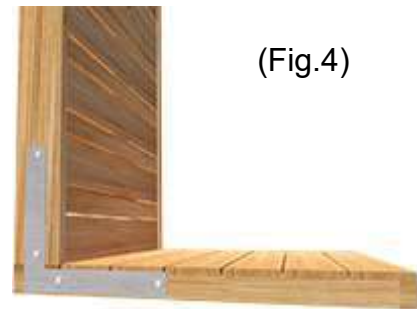

(Fig.4)

5. Assemble (TC-05) Shower Head Assembly to the back wall of the shower as per the manufacturers instructions.

6. Locate the Wall Assembly Top Cover (SV-05) and secure to the Wall Assembly (SV-01) with provided 1 ½" (38mm) screws  
(Fig.5)

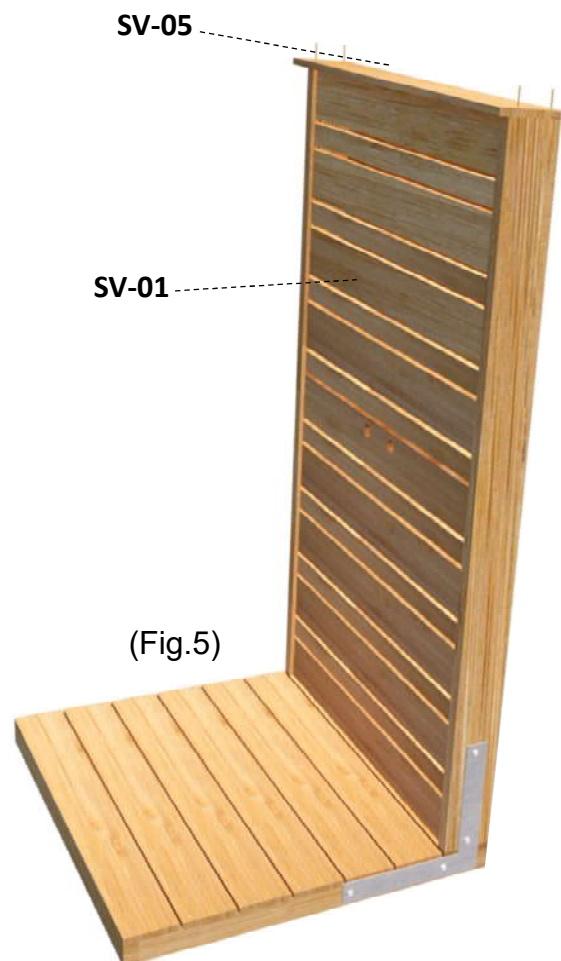

(Fig.5)