

# SVANGE

## Medicine Cabinet Installation & User Guide






#### WARNING


- All fittings must be installed in accordance with current IEE wiring regulations. If in doubt, consult a qualified electrician.
- Switch off the electrical supply at the main circuit board BEFORE installation and maintenance.
- Suitable for Bathroom Zones 2, 3 and non bathroom/dry areas. See diagram below.

- NOT suitable for above baths or Zone 1 nor for installation in Saunas, Steam Rooms or Shower Cubicles.
- DO NOT connect to a plug and socket outlet. Suitable for indoor use only.
- DO NOT fix to damp or conductive surfaces.
- Site well away from curtains and fabrics.
- Never cover the mirror.
- Switch off after use.

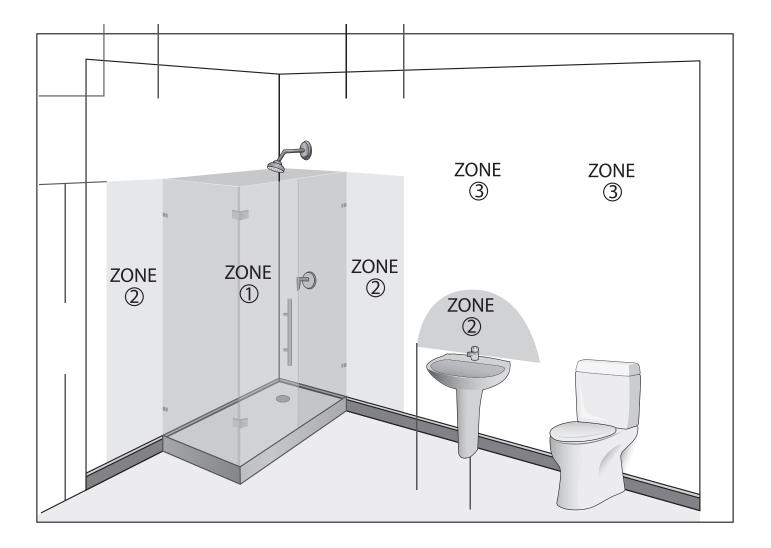



## **PARTS LIST**

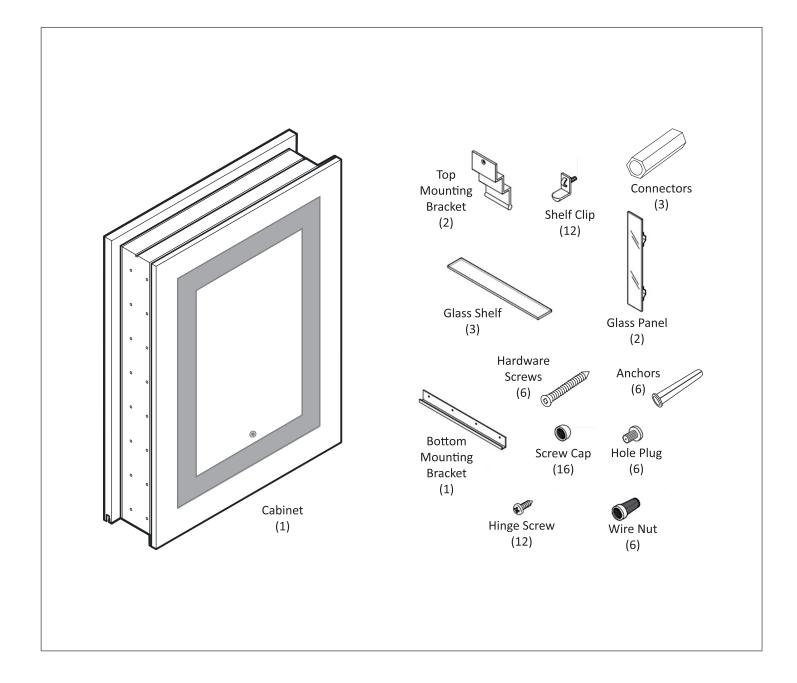




#### **IMPORTANT—BEFORE YOU BEGIN**

- Inspect the product immediately upon receipt for transit damage or missing parts.
- Handle the product with care and protect against knocks to all sides and edges of the glass.
- Make sure that you have all the tools you need to complete the job. (SEE BELOW)
- Ensure there are no hidden pipes or cables in the wall before drilling.

 If drilling holes in ceramic tiles use a piece of masking tape on the tile to stop the drill bit from slipping.

#### **Aftercare Instructions**

- Clean using a soft dry cloth only when turned off.
- Never use cleaning agents or abrasive materials.
- Do not allow moisture to come into contact with lamps.

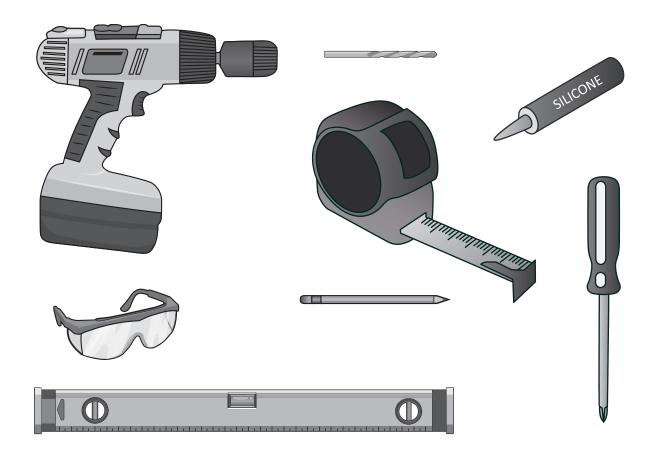

#### **TOOLS USED**



## **ELECTRICAL WIRE INFORMATION**

#### **Svange Electrical Connection**

The LED Driver inside Svange Cabinet already has converted the electric to 110 volts. You are able to connect lead coming out the back of the mirror directly to your electrical connection box.


#### The Lead Contains 3 Wires:

**COPPER WIRE (GREEN)** = *GROUND WIRE...*Connect to *GROUND WIRE* in your box, or to the box as a ground.


**WHITE (or BROWN)** = *NEUTRAL WIRE...*Connect to the *WHITE NEUTRAL WIRE* in your box.

**BLACK (or BLUE)** = HOT WIRE...Connect to the BLACK HOT WIRE in your box.

The Svange wires will be connected to your 110 Volt electric box. This should be placed in the wall, behind your Svange Cabinet. The suggested method for placement is towards the center, however there is flexibility with the lead wire.

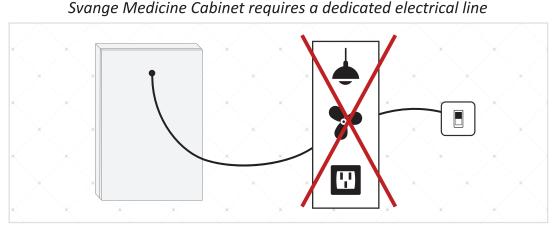

Install optional outside switch to control the defogger Refer to how to use quide for more information

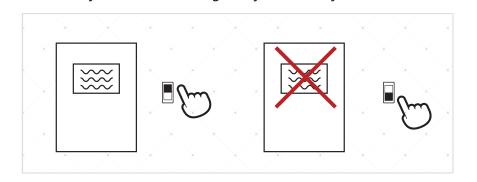



You CANNOT use an outside dimmer with the mirror






#### **RECESS MOUNT INSTALLATION**

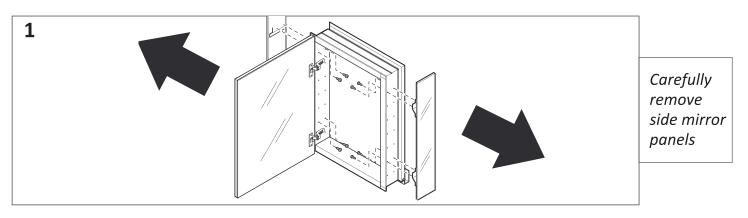


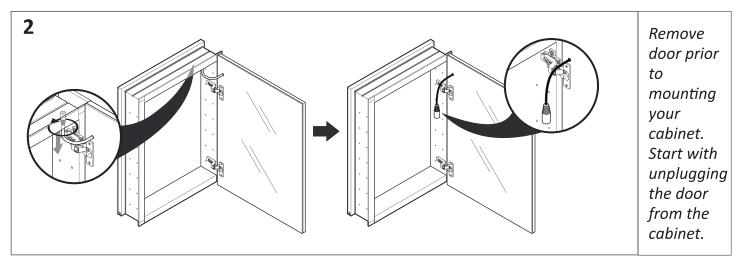


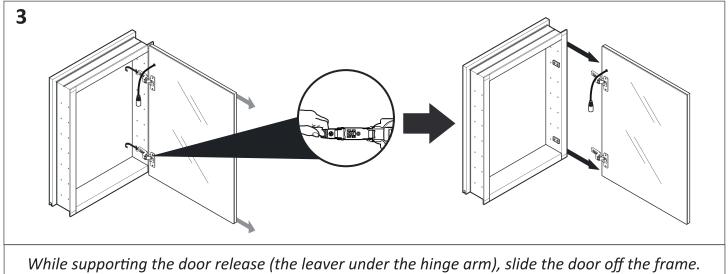




## CONNECTING CABINETS (OPTIONAL RECESS MOUNTING)

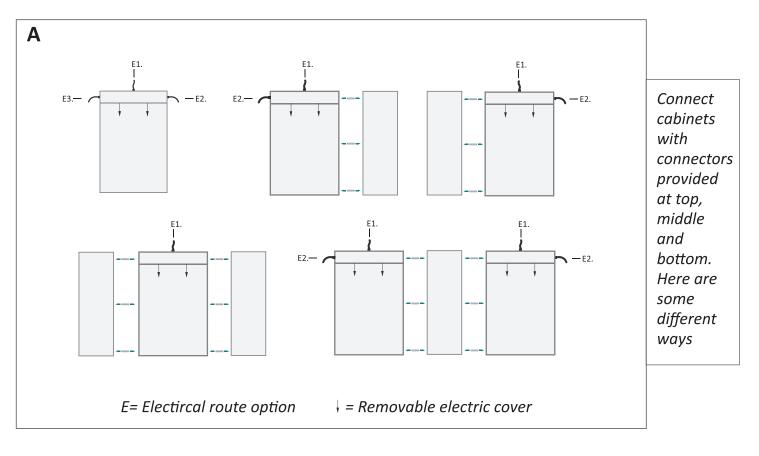

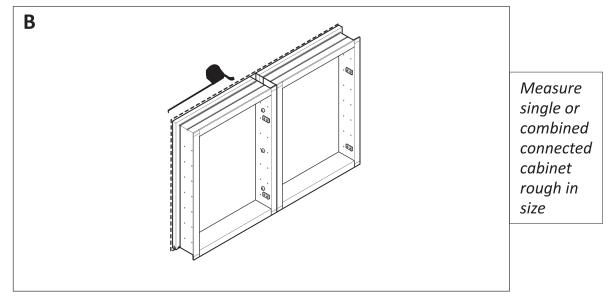


Krugp

#### **ELECTICAL PREPARATION**

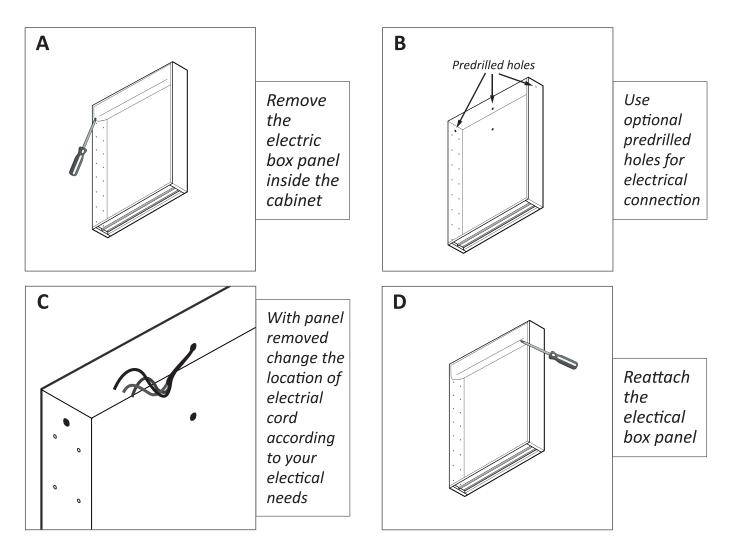




## **RECESS MOUNT INSTALLATION CONTINUED**

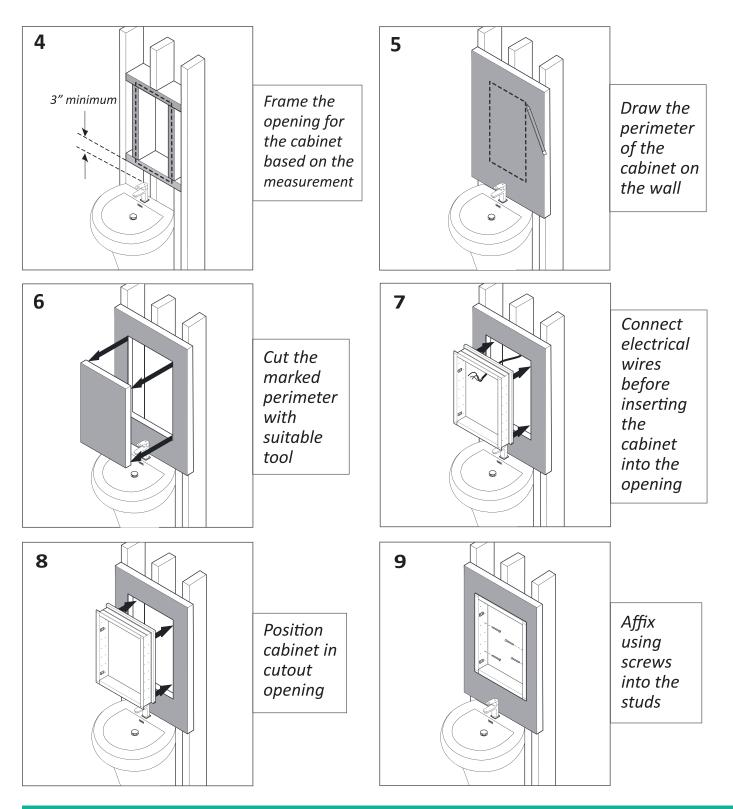




#### SURFACE MOUNT INSTALLATION

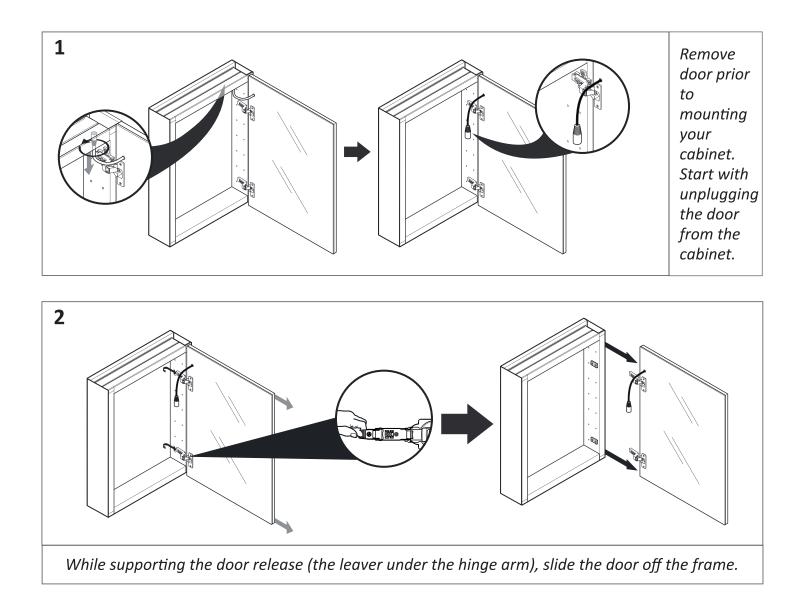




## SURFACE MOUNT INSTALLATION CONTINUED

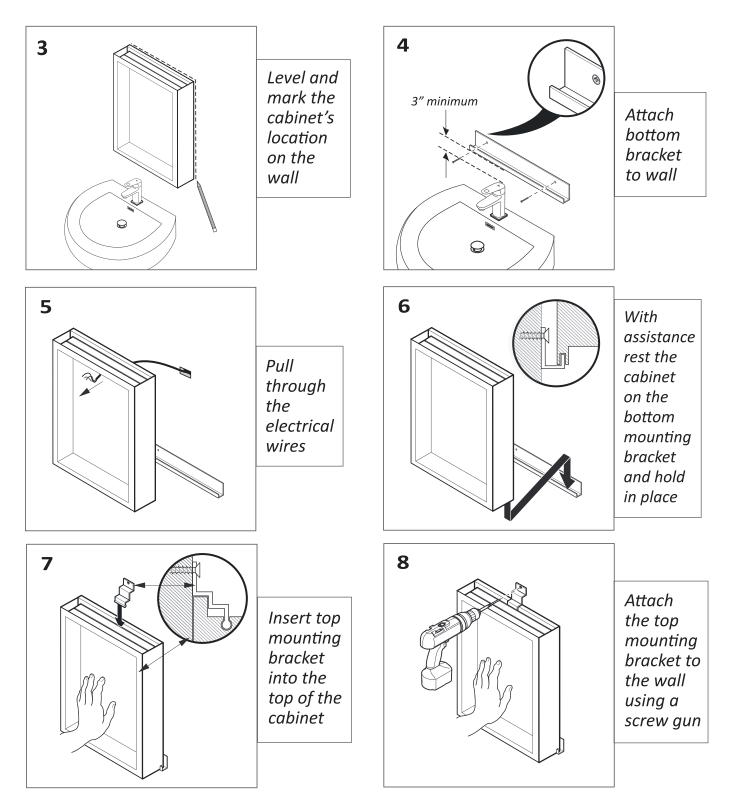




## **MOUNTING BRACKETS** (FOR SURFACE MOUNT INSTALLATION)

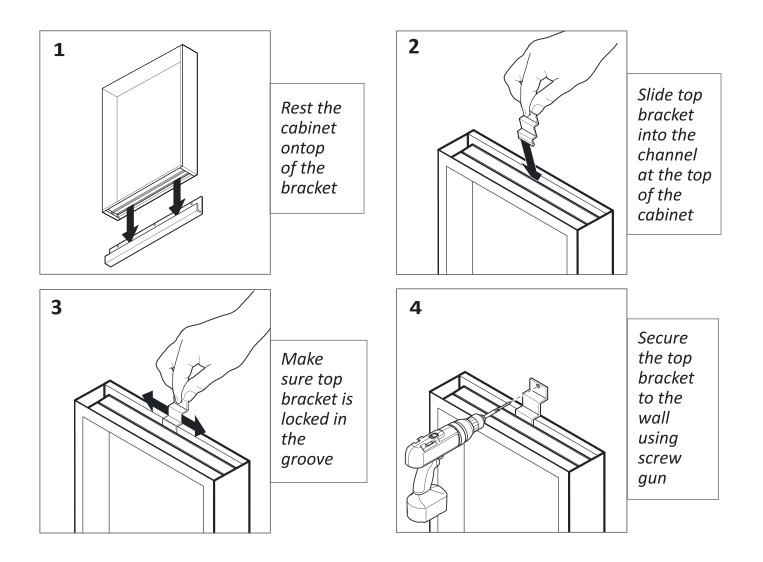





#### FINAL ASSEMBLEY(BOTH)

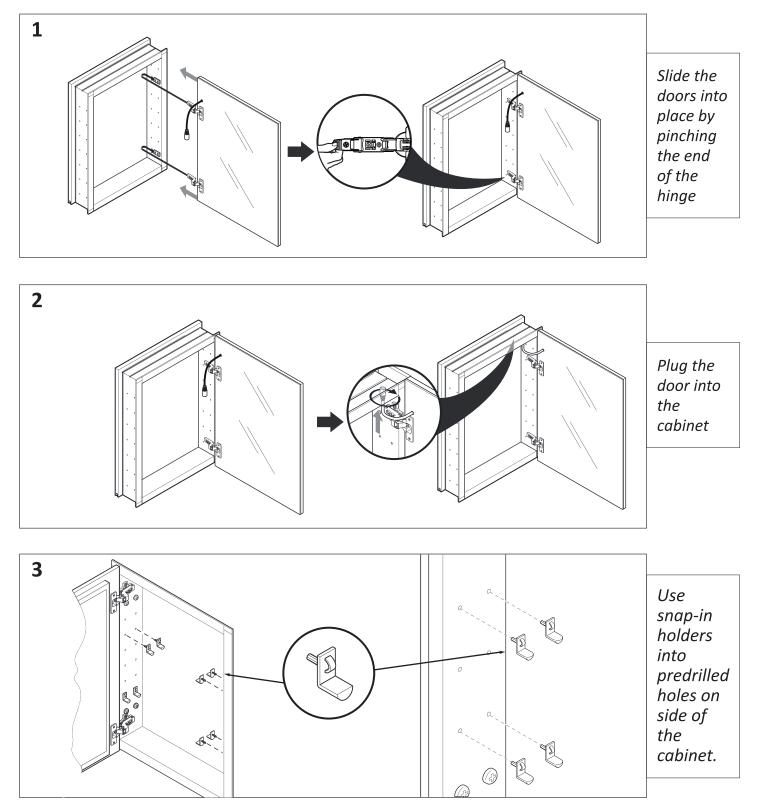




#### FINAL ASSEMBLEY CONTINUED

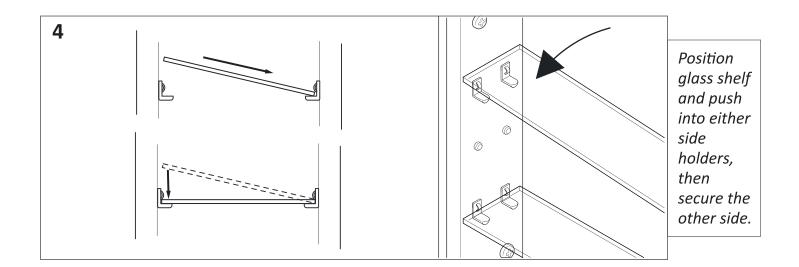

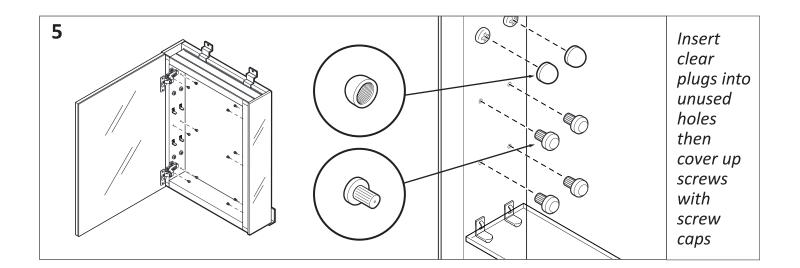



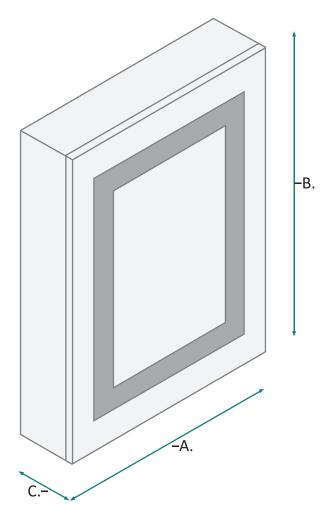


- A Cabinet's Width
- **B** Cabinet's Height
- **C** Cabinet's Depth

MODELS	А	В	С
SVANGE 2436L	24	36	4.75
SVANGE 2436R	24	36	4.75
SVANGE 1236L	12	36	4.75
SVANGE 1236R	12	36	4.75
SVANGE 1836L	18	36	4.75
SVANGE 1836R	18	36	4.75


Note: All dimensions & specifications are approximate and subject to change without notice.

15


ВАСК

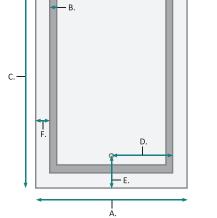

FRONT

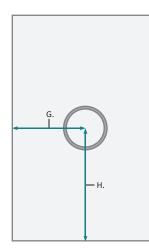

INTERIOR

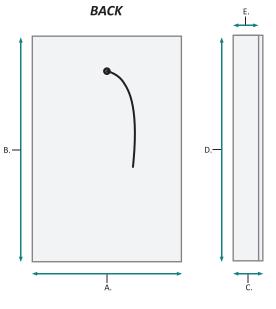

#### FRONT & INSIDE

MODELS	А	В	С	D	E	F	G	н
SVANGE 2436L	24	1-1/4	36	12	6-1/4	2-1/2	11	17-1/2
SVANGE 2436R	24	1-1/4	36	12	6-1/4	2-1/2	11	17-1/2
SVANGE 1236L	24	1-1/4	36	12	6-1/4	2-1/2	N/A	N/A
SVANGE 1236R	24	1-1/4	36	12	6-1/4	2-1/2	N/A	N/A
SVANGE 1836L	24	1-1/4	36	12	6-1/4	2-1/2	N/A	N/A
SVANGE 1836R	24	1-1/4	36	12	6-1/4	2-1/2	N/A	N/A

#### BACK & SIDE

MODELS	A	В	С	D	E	ELECTRIC CURRENT	WATTAGES
SVANGE 2436L	23	35-1/2	4-3/4	36	3-1/2	0.00A	0W
SVANGE 2436R	23	35-1/2	4-3/4	36	3-1/2	0.00A	0W
SVANGE 1236L	23	35-1/2	4-3/4	36	3-1/2	0.00A	0W
SVANGE 1236R	23	35-1/2	4-3/4	36	3-1/2	0.00A	0W
SVANGE 1836L	23	35-1/2	4-3/4	36	3-1/2	0.00A	0W
SVANGE 1836R	23	35-1/2	4-3/4	36	3-1/2	0.00A	0W

Krugp

SIDE



### **USE AND MAINTENANCE**

- The interior is constructed of mirrored glass and aluminum. Use only a damp cloth to clean. Ammonia or vinegar-based cleaners can damage mirrors.
- When cleaning, spray the cloth, not the mirror, or surrounding surfaces. Do not use abrasive cleansers on any part of the light fixture.

#### LIMITED LIFETIME WARRANTY

Subject to the terms and conditions specified herein, Krugg Reflections USA LLC, ("KRUGG") hereby extends a limited lifetime warranty (this "Limited Warranty") to original Purchasers (as defined below) of the Krugg LED Medicine Cabinet (the "Product") with respect to certain specified components of the Product. Specifically, KRUGG, by this Limited Warranty, warrants that, for the durations specified herein, Products purchased directly from KRUGG or KRUGG's authorized retailers will be free of defects in the material and workmanship of the Product's electrical components, glass, mirrors, and certain mechanical components, which defects would cause the Product to substantially fail to function when subject to normal use.

### **ONE-YEAR LIMITED COMMERCIAL WARRANTY**

Subject to the terms and conditions specified herein, Krugg Reflections USA LLC, ("KRUGG") hereby extends a limited one-year warranty (this "Limited Warranty") to Commercial Purchasers (as defined below) of the Krugg LED Medicine Cabinet (the "Product") with respect to certain specified structural components of the Product. Specifically, KRUGG, by this Limited Warranty, warrants that, for a one-year period, Products purchased directly from KRUGG or KRUGG's authorized retailers will be free of defects in the material and workmanship of the Product's electrical components, glass, mirrors, and certain mechanical components, which defects would cause the Product to substantially fail to function when subject to normal use.