

CRAFTMADE

LIGHTING

MODINA #38002-CH / 38002-ESP

PLEASE READ AND SAVE FOR FUTURE REFERENCE.


CAUTION

1. Turn off the main power at the circuit breaker before installing the fixture in order to prevent possible shock.
2. All electrical connections must be in accordance with local and National Electrical Code (N.E.C.) standards. If you are unfamiliar with proper electrical wiring connections, obtain the services of a qualified electrician.

GENERAL

Remove all parts and hardware from the box and make sure that none are missing by referencing the illustrations provided.

Bulbs Required (included): 2 Medium Base 60 Watt Max.

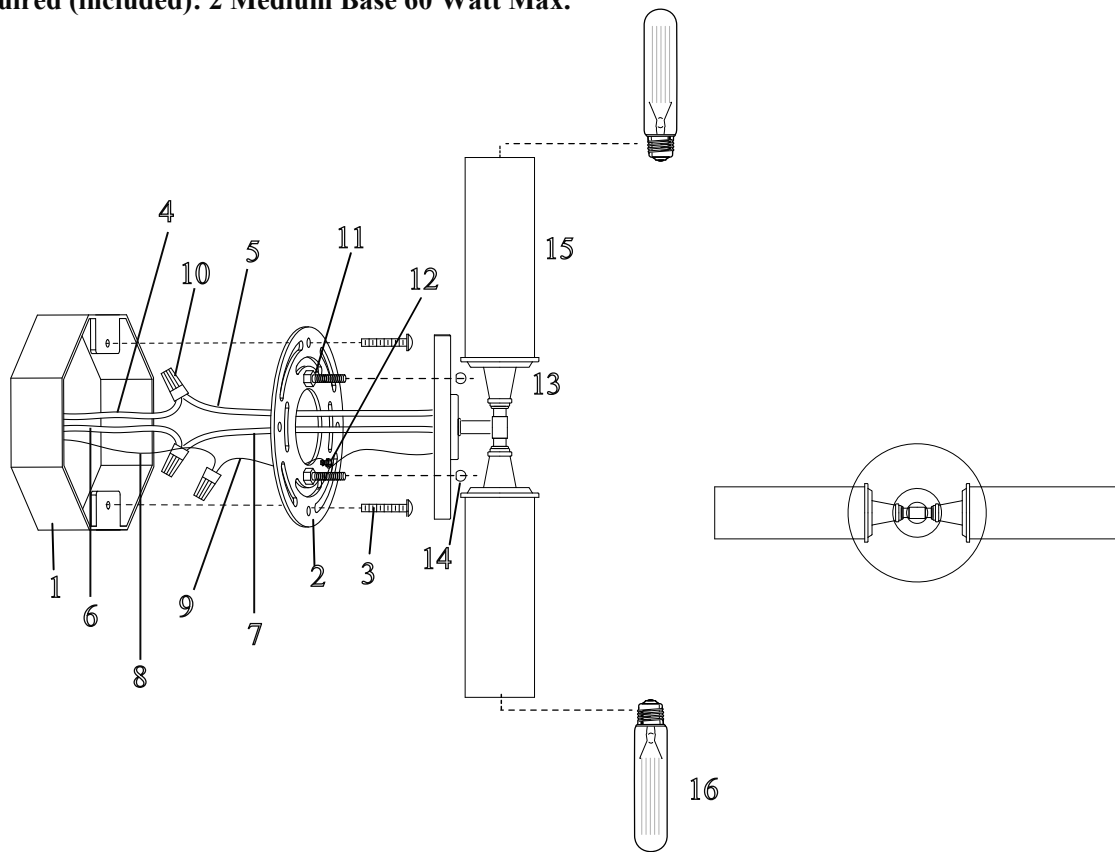

2-LIGHT LINEAR WALL SCONCE

- | | |
|------------------------------------------------------------------|------------------------------------------------|
| 1. OUTLET BOX (not included) | 10. WIRE CONNECTORS |
| 2. MOUNTING PLATE | 11. FIXTURE SCREWS and HEX NUTS (pre-attached) |
| 3. OUTLET BOX SCREWS and WASHERS
(pre-attached to outlet box) | 12. GROUND SCREW (pre-attached) |
| 4. BLACK SUPPLY WIRE (not included) | 13. FIXTURE |
| 5. SMOOTH (or BLACK) FIXTURE LEAD WIRE | 14. DECORATIVE NUTS (pre-attached) |
| 6. WHITE SUPPLY WIRE (not included) | 15. GLASS SHADES |
| 7. RIBBED (or WHITE) FIXTURE LEAD WIRE | 16. BULBS (included) |
| 8. SUPPLY GROUND WIRE (not included) | |
| 9. FIXTURE GROUND WIRE | |