

How To Install

Select Your Honeycomb/Cellular Blind

IMPORTANT

This PDF is interactive. Choose the product that best fits your order, PDF will guide you to the proper installation guide. For control options refer to our “How to Operate” document.

Visual Guides 

Roller Shade Selections



Cordlock



Continuous Loop



Motorized & Cordless

How To Install

Honeycomb/Cellular Blind


WARNING

*According to the Window Covering Manufacturers Association Inc., all labels must not be removed from the product.

*To comply with child safety standards, all tension devices must be installed.

[Click](#) for Tension Device Guide

Items Needed

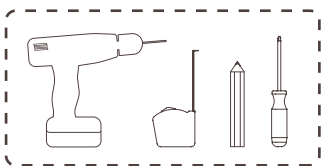

Need Assistance?



Contact a City Shade Associate for help with Installing.

(877)-224-8974

support@cityshadecompany.com

www.cityshadecompany.com

Installing Brackets

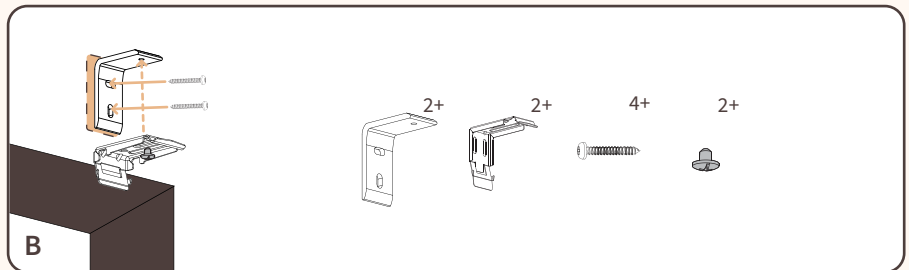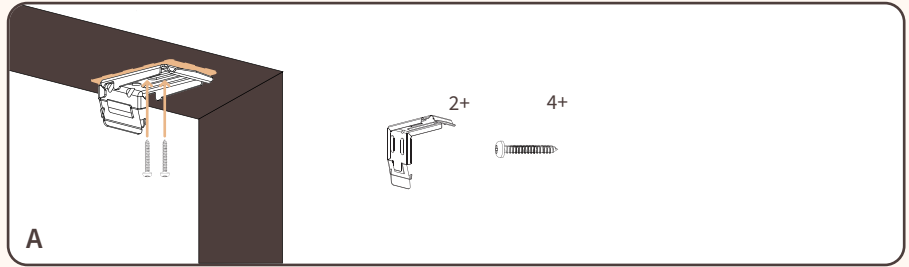


A. Inside Mount: Install brackets minimum 2" from the side frame.

B. Outside Mount: Measure the total width of shade, then center over the window frame. Install the spacers before brackets minimum of 2" in from each end. Once Spacers are attached, install brackets to spacers with one screw per bracket. We recommend installing blind 3" above window frame.

Brackets must be securely attached to the mounting surface. If the screws provided do not hit wood studs you'll have to use a different fastener which can be found at any hardware store.

NOTE: Keep the blind up during installation.

Installing Shade

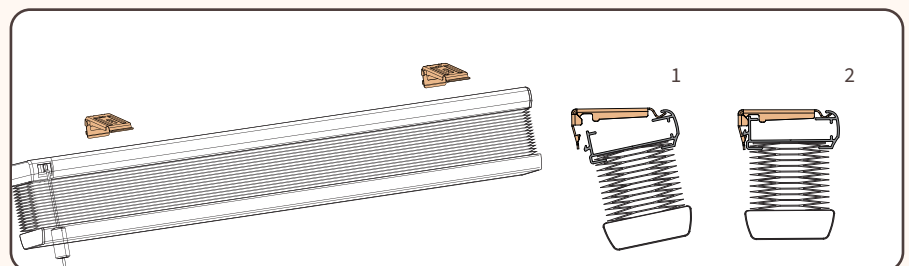

Begin with sliding shade in back end lowered with back end lowered enough for lip of bracket to make contact with lip on top of cassette. Once contact is made beg in to lift back end up until you hear a click.

Then place stability block on chain side between mount and wall.

How To Install

Honeycomb/Cellular Blind


WARNING

*According to the Window Covering Manufacturers Association Inc., all labels must not be removed from the product.

*To comply with child safety standards, all tension devices must be installed.

[Click](#) for Tension Device Guide

Items Needed

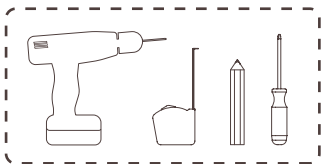

Need Assistance?



Contact a City Shade Associate for help with Installing.

(877)-224-8974

support@cityshadecompany.com

www.cityshadecompany.com

Installing Brackets

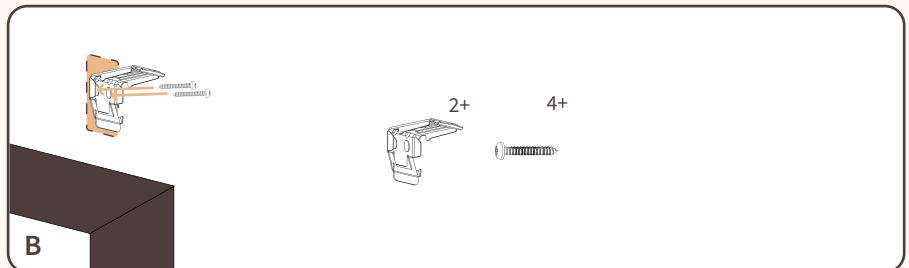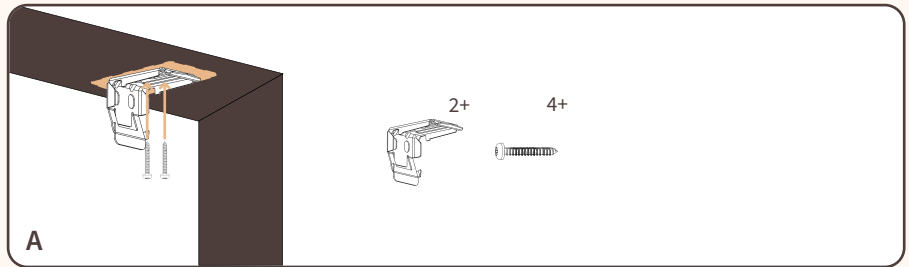


A. Inside Mount: Install brackets minimum 2" from the side frame.

B. Outside Mount: Measure the total width of blind, then center over the window frame. Install brackets minimum of 2" in from each end. We recommend installing blind 3" above window frame.

Brackets must be securely attached to the mounting surface. If the screws provided do not hit wood studs you'll have to use a different fastener which can be found at any hardware store.

NOTE: Keep the blind up during installation.

Installing Shade

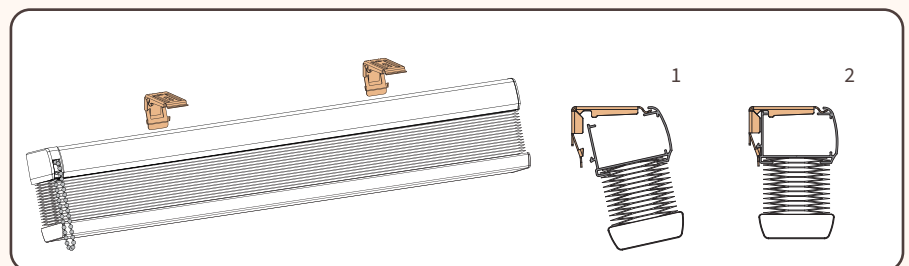

Begin with sliding shade in back end lowered with back end lowered enough for lip of bracket to make contact with lip on top of cassette. Once contact is made begin to lift back end up until you hear a click.

Then place stability block on chain side between mount and wall.

How To Install


Honeycomb/Cellular Blind

WARNING

*According to the Window Covering Manufacturers Association Inc., all labels must not be removed from the product.

*To comply with child safety standards, all tension devices must be installed.

Items Needed

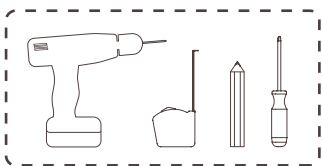

Need Assistance?



Contact a City Shade Associate for help with Installing.

(877)-224-8974

support@cityshadecompany.com

www.cityshadecompany.com

Installing Brackets

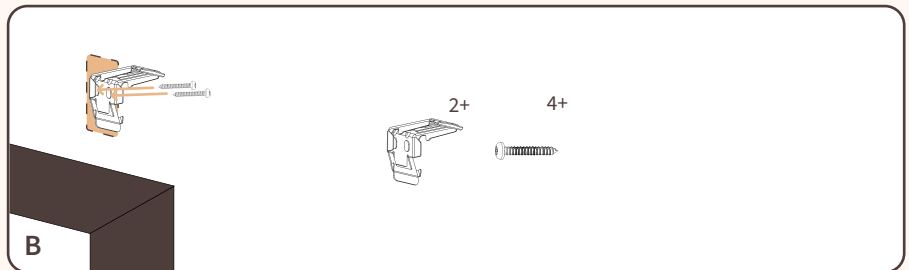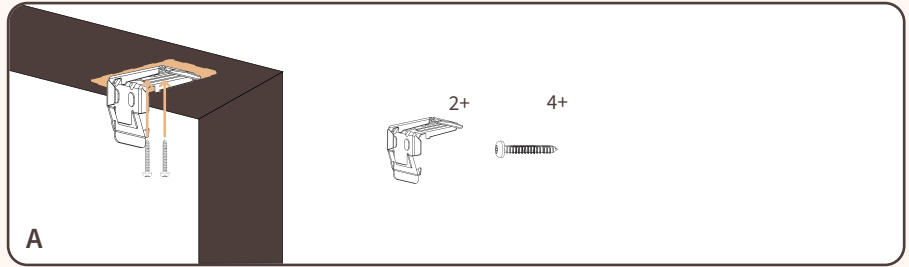


A. Inside Mount: Install brackets minimum 2" from the side frame.

B. Outside Mount: Measure the total width of blind, then center over the window frame. Install brackets minimum of 2" in from each end. We recommend installing blind 3" above window frame.

Brackets must be securely attached to the mounting surface. If the screws provided do not hit wood studs you'll have to use a different fastener which can be found at any hardware store.

NOTE: Keep the blind up during installation.

Installing Shade

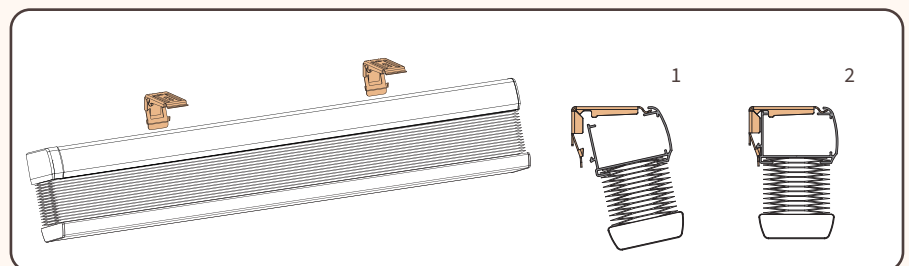

Begin with sliding shade in back end lowered with back end lowered enough for lip of bracket to make contact with lip on top of cassette. Once contact is made begin to lift back end up until you hear a click.

Then place stability block on chain side between mount and wall.

How To Operate

Cordless Standard & TDBU

WARNING

*According to the Window Covering Manufactures Association Inc., all labels must not be removed from the product.

*To comply with child safety standards, all safety tension devices must be installed.

Need Assistance?


Contact a City Shade Associate for help with Installing.

(877)-224-8974


support@cityshadecompany.com

www.cityshadecompany.com

Cordlock Standard

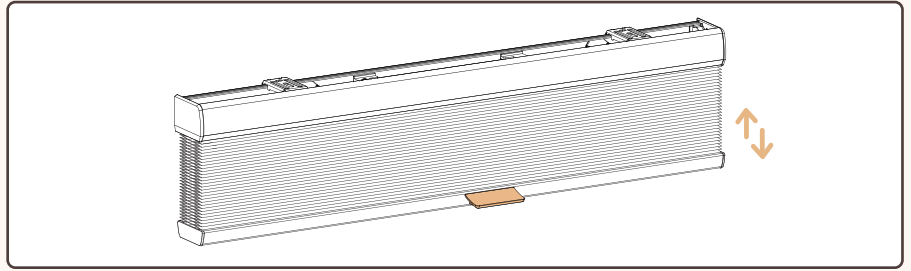

Lower/Raise: To lower your shade, pull down on the back of the chain. To raise your shade, pull down on front of the chain to lower.

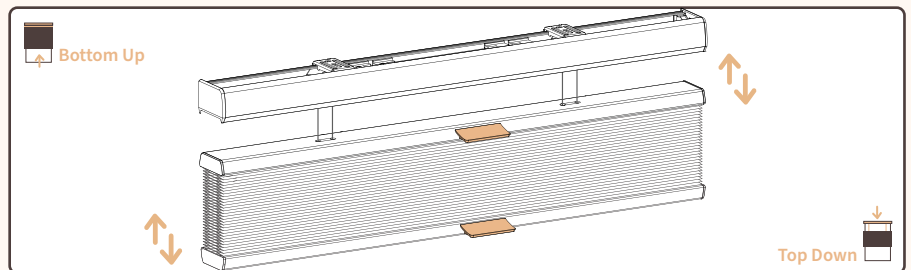


Bottom:

Lower/Raise: By the handle, lift the bottom up or down to raise or lower shade.

Top:

Lower/Raise: By the handle, lift the bottom up or down to raise or lower shade.

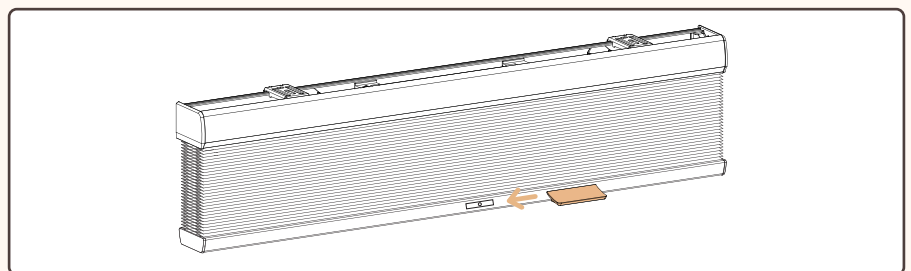

Attaching lift handle:

Simply slide the handle from right to left over the attached mounting bracket.



How To Install

Safety Tension Device

WARNING



*Young children can strangle in the loop of pull cords, chains and tapes, and cords that operate window coverings.

*To avoid strangulation and entanglement, keep cords out of the reach of young children. Cords may become wrapped around a child's neck

*Do not tie cords together. Make sure cords do not twist together and form a loop.

Need Assistance?


Contact a City Shade Associate for help with Installing.

(877)-224-8974

support@cityshadecompany.com

www.cityshadecompany.com

Installing Tension Bracket

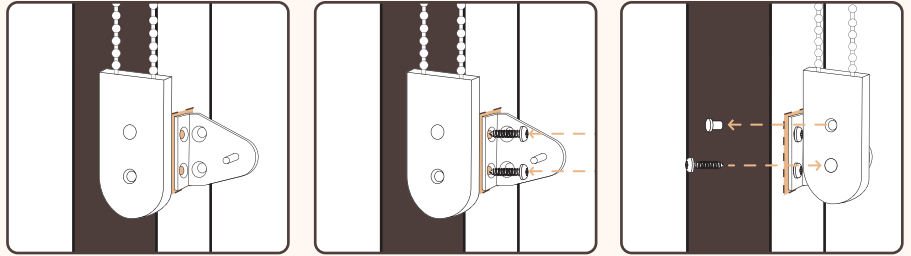

Step 1: Pull tension device down to where there is very little slack. Mark the area where the bracket sits.

Step 2: When placed in the correct spot, use two screws to secure bracket.

Step 3: Place tension device on to bracket, secure with a screw and remove stopper from top hole.