




Door bottom

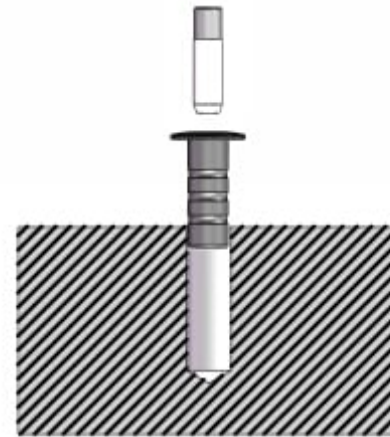

Floor

1. Determine location for door stop
2. Drill hole for magnet. Measure 70mm from end of door, mark centre line for drill location. Drill 24mm (15/16") hole with spade bit, 25mm (1") deep.
3. Drill 2 x 3mm diameter holes for striker screws, use striker plate as guide
4. Place magnet into hole, fit striker plate
5. Drill 14mm (9/16") hole 40mm deep, apply silicone to sleeve & insert into hole
6. Once dry, drop pin into sleeve