
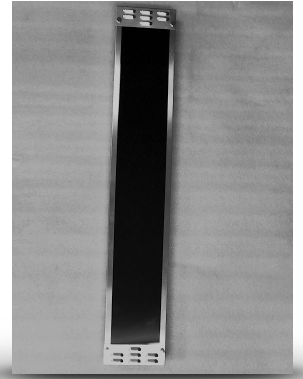


Full Spectrum Heater Installation Guide


Step 1:

Locate the wooden bracket and full spectrum heater

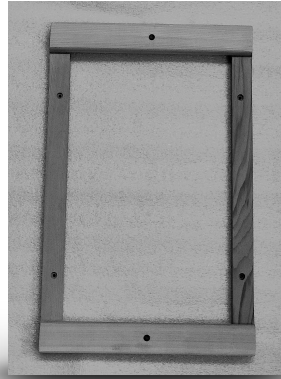

Step 2:

Align the holes from the wooden bracket to the holes on the back of the full spectrum heater.

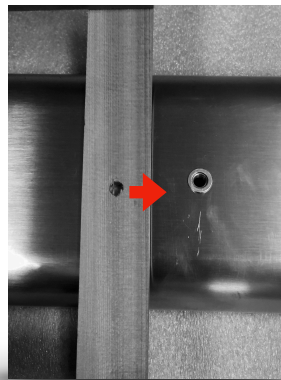

Step 3:

Screw on the bolt



Step 4:

Place 2 full spectrum heaters on the front wall besides the door

