

hello plumber.

Installing concrete basins is a little different to ceramic. Please carefully read instructions prior to install to avoid any issues.

GENEROUSLY APPLY CLEAR SILICON WITHOUT GAPS:



around the waste



where the basin
meets the benchtop

24HRS

please allow silicon
24 hrs to dry
before
water testing

DO NOT

place tools, taps
and mixers in/near
basin during install
to avoid damage

**INSTALL VIDEO: [NOODCO.CO.AU/SINKS-INFO/#INSTALL](https://www.noodco.co.au/sinks-info/#install)
SUPPLIED WITH SINK: BASIN INSTALLATION GUIDE**

FIXING DOWN BASIN + SEALING EDGE




01 Run a line of clear wet area silicone around the underside of the basin 10mm back from the edge



02 Run another line of clear wet area silicone 20mm back from the waste hole



03 Press down into benchtop and remove excess silicone using wax and grease remover and soft cloth

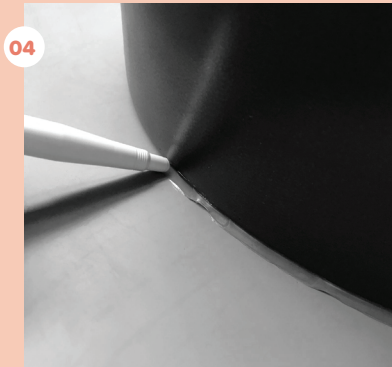

04 Run a bead of clear wet area silicone to fill the gap between the basin and benchtop



05 Smooth silicone off to a neat finish and wipe clean with wax and grease remover




06 Please ensure the edge is waterproof and 100%, so that water can never get under the basin

FIXING IN THE WASTE



01 Run a bead of clear wet area silicone around the waste rim

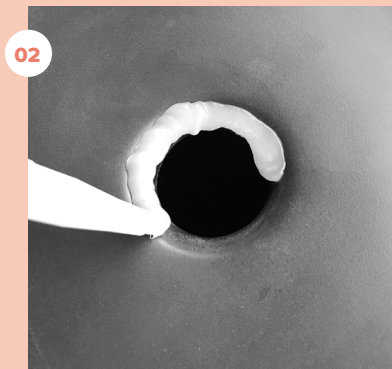

02 Be generous with application. It is critical that silicone overflows when waste is placed down



03 Slide waste into place



04 Hand-tighten waste. Do not over tighten.



05 Carefully push silicone around gap between waste and sink



06 Clean excess with wax and grease remover and let dry for 24 hours

additional info

FOR MORE INFORMATION ON BASIN WARRANTY,
MAINTENANCE AND INSTALLATION, PLEASE VISIT:



WARRANTY

noodco.com.au/sink-warranty



MAINTENANCE

noodco.com.au/sinks-info/#maintenance



INSTALLATION

noodco.com.au/sinks-info/#install
