

wax on, wax off.



01

Make sure your basin is dry and clean.




02

Open your tin of wax and microfibre cloth.




03

Use microfibre cloth to scoop out wax.

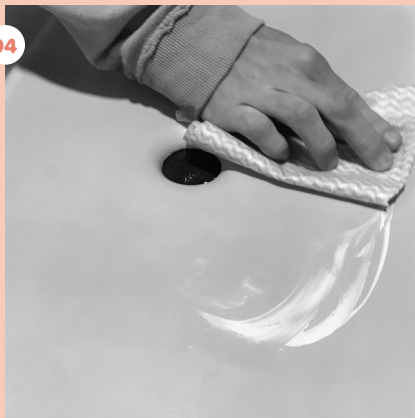


04

Apply wax evenly to your basin, rubbing it until it appears clear.

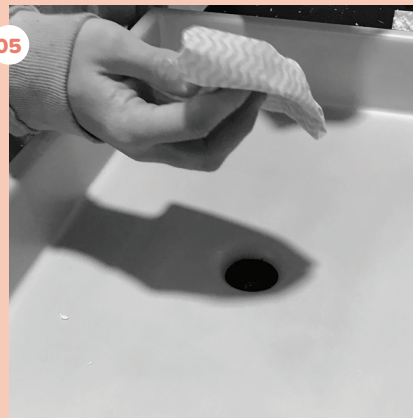


05

Wait for 3 minutes for the wax to settle and firm up.

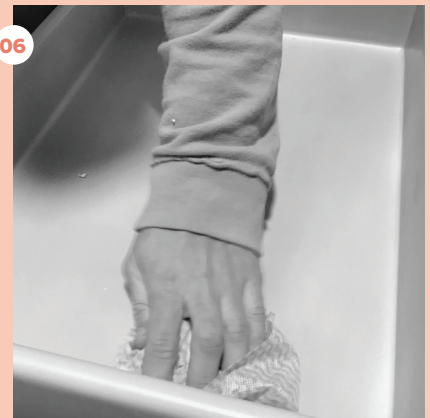

06

Take a clean, dry microfibre cloth and buff the basin gently.

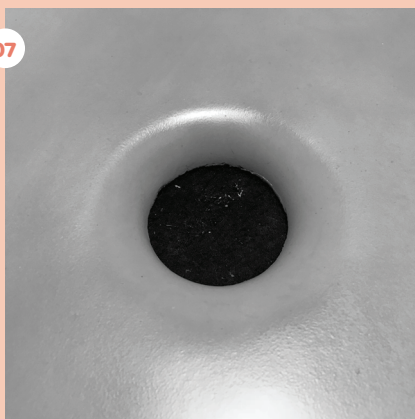

07

Your basin will be left with a soft polish. Please re-apply once every three months as the polish decreases with day to day use.

psa:

Please be gentle with your concrete basin and treat with care. It is a delicate, handmade product. For extra polish please contact our friendly team at info@noodco.com.au.