



WAKESURF

SOLUTIONS

Thank you for your purchase from Wakesurf Solutions!

Tools Needed:

3/8" Drive Ratchet

3/16" Hex Socket

1/4" hex Socket

Installation Instructions


RACKS DO NOT NEED TO BE REMOVED TO INSTALL

1) Using a 1/4" Hex Socket and Ratchet. Remove this bolt. These are very tight with loctite, but will come out with no damage. Remove and discard



2) Wipe the surface clean with rubbing alcohol or ammonia free glass cleaner

3) Remove backing from gasket and install gasket onto rack. See picture.

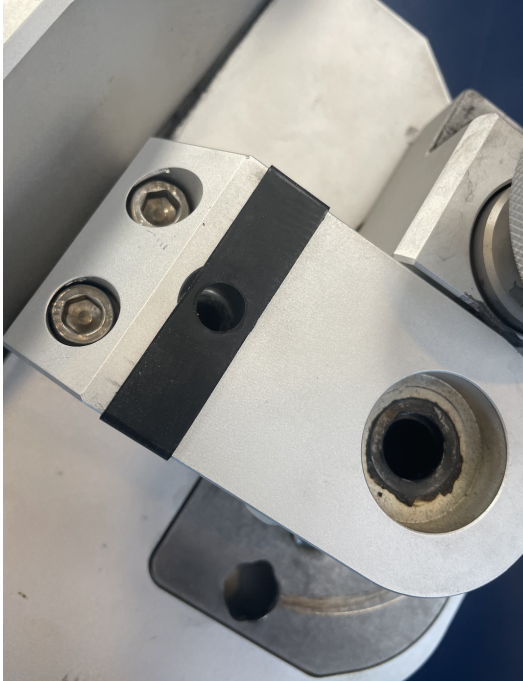

4) Loosely install hook with the bend in the hook facing outwork. Slide bolt through the hole in the hook, through the gasket and into the base of the rack.

5) Tighten with a 3/16" Hex socket. Your done!

