




WAKESURF
SOLUTIONS

Install Instructions

2007-2011 Mastercraft

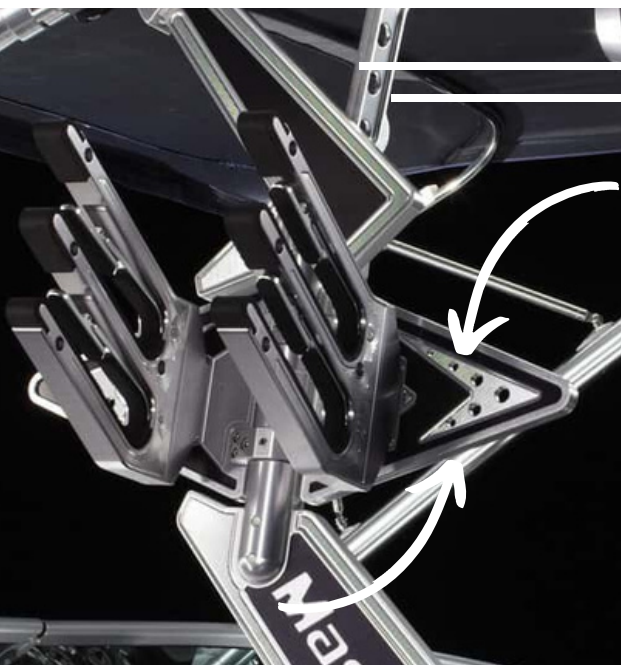

1) Slide your provided bolts through the hook, then the aluminum spacer.

2) Using the 2 holes in the picture, align and slide the hook, spacer, and bolt through the holes with the hook facing away from board racks

3) Use supplied Acorn Nuts on the back side, hand tighten, then use tools to finish tightening