



RIVIAN AERO SPOKE WHEEL INSERT COVER SCUFF PROTECTION FILM INSTALLATION TEMPLATE

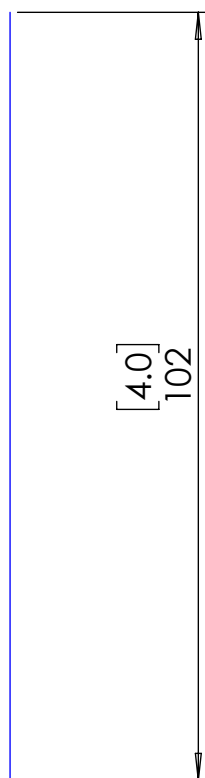

MEASUREMENT OF 4"
CONFIRMS PRINT IS
SCALED CORRECTLY,
IF YOU MEASURE LESS
THAN 4" PRINTER IS
SCALING DOWN PRINT.
ADJUST SETTINGS UNTIL
THIS LINE MEASURES 4"

SCUFF PROTECTION FILM

Aero cover
center line

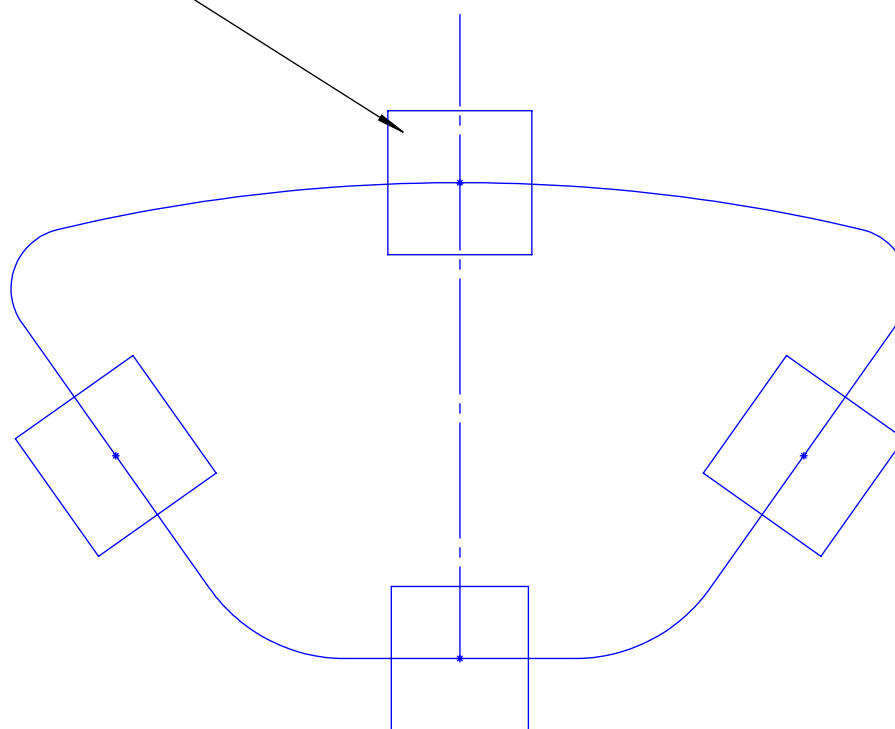

IMPORTANT: CLEAN WHEEL
WITH WAX/GREASE REMOVER
TO ENSURE PROPER ADHESION