
Olle


## Olle Products & Accessories

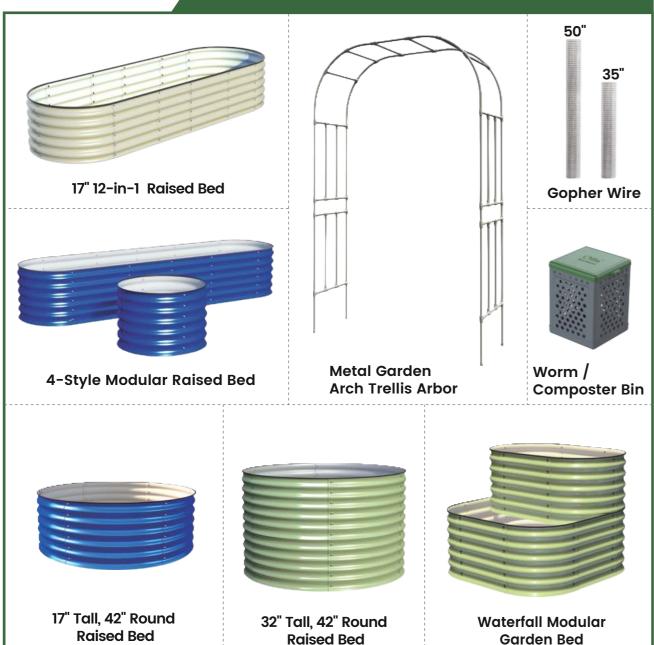





www.ollegardens.com

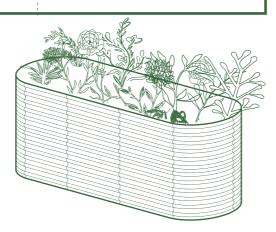





# 32" TALL RAISED GARDEN BED ASSEMBLY INSTRUCTIONS



www.ollegardens.com





### What is in the kit?

Part NO.	Description	Qty.	Parts
A	Corners 24"	<b>4</b> pcs	
В	Short Panels 16"	<b>4</b> pcs	
С	Long Panels 20"	<b>4</b> pcs	
D	Bolts, Washers and Nuts (Stainless Steel)	132 sets	
E	Rubber Safety Edging	<b>T</b> pc	
F	Wrench Tool (10mm)	<b>]</b> pc	5

#### CAUTION











- Lay out the Corners and Panels in the design you wish to build.
- Remove the protective film from both sides of the panels prior to assembly.




 Assemble a corner and a flat panel to start.
Layer the corner on the outside. Put one bolt at the top and bottom of the panel set.
Hand-tighten them.






 After you have loosely assembled your desired shape, add the interior bolts on the outside and the washer and nut on the inside.

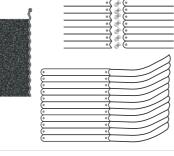



 Pinch the panels together at the top and finish tightening the nuts from the top to the bottom with the wrench tool provided and a phillips head screwdriver to hold the bolt in place on the outside. To speed up the tightening process, you can use a metric number 10mm hand ratchet.





Slightly pull/stretch the Safety Rubber Capping as you push it onto the top edge of the garden bed and trim off the excess.
(You can use the back of the wrench we provide or a screwdriver to slightly open the channel of the rubber edging only at the joints where the panels overlap allowing it to slip over both panels easier.)



# 12-in-1 Modular Raised Garden System

Choose the option that fits your space

