


Olle Products & Accessories







www.ollegardens.com

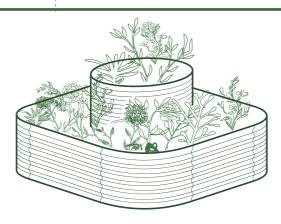





MODULAR RAISED GARDEN BED ASSEMBLY INSTRUCTIONS



www.ollegardens.com





What is in the kit?

Part NO.	Description	Qty.	Parts
A	Corners 31.5"	8 pcs	
В	Long Panels 31.5"	4 pcs	
С	Short Bolts, Washers and Nuts (Stainless Steel)	66 sets	
D	Long Bolts, Washers and Nuts (Stainless Steel)	6 sets	
E	Rubber Safety Edging	T pc	
F	Wrench Tool (10mm)] pc	5

CAUTION










- Lay out the Corners and Panels in the design you wish to build.
- Remove the protective film from both sides of the panels prior to assembly.




- Assemble a corner and a flat panel to start. Layer the corner on the outside. Put one bolt at the top and bottom of the panel set. Hand-tighten them.
- Continue the same process to complete your garden bed.
- After you have loosely assembled your desired shape, add the interior bolts on the outside and the washer and nut on the





• Pinch the panels together at the top and finish tightening the nuts from the top to the bottom with the wrench tool provided and a phillips head screwdriver to hold the bolt in place on the outside. To speed up the tightening process, you can use a metric number 10mm hand ratchet.



Step 4

edge of the garden bed and trim off the excess. (You can use the back of the wrench we provide or a screwdriver to slightly open the channel of the rubber edging only at the joints where the panels overlap allowing it to slip over both panels easier.)



4-Style Modular Raised Garden System

Choose the option that fits your space



