


# STOPit

DOOR STOPS WITH STEEL ANCHORS

**Proudly Made in the USA**

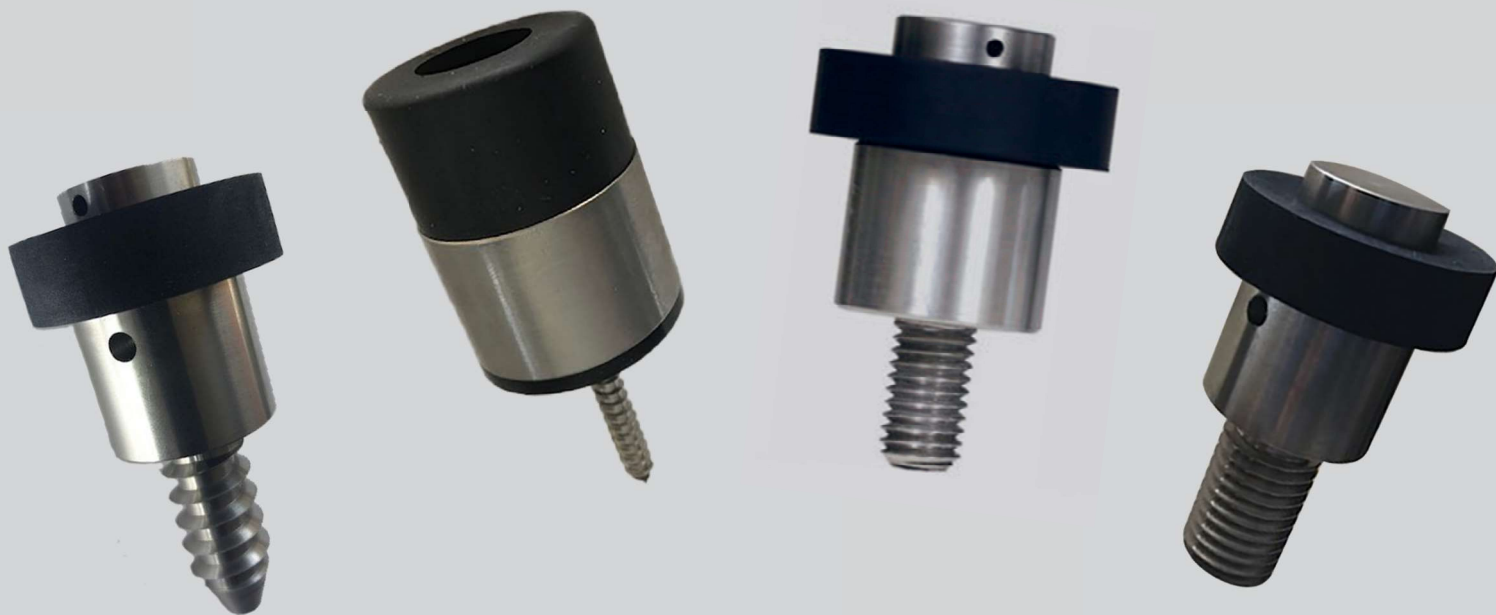

STOPit Door Stop

For sales inquiries, please contact:

Andy Dufour

E: [andy@stopitdoorstop.com](mailto:andy@stopitdoorstop.com)

[stopitdoorstop.com](http://stopitdoorstop.com) P: 617-413-1531

Proudly Made in the USA

# TSS 1.00 SERIES

Black rubber is standard  
White rubber available upon request

## DOOR STOPS WITH STEEL ANCHORS



Steel Anchor

Durable  
Solid Stainless-Steel Core  
Made in the USA  
Easy to Order  
Best onMarket



Easy Assembly

Installs Quickly

Standard sizes include:

TSS1.0 = 1" TSS1.5 = 1.5" TSS2.0 = 2" TSS2.5" = 2.5"

All measurements are taken from floor to bottom of rubber.

# TSS HD 1.00 SERIES FOR EXTERIOR DOORS AND HEAVY DOORS

Proudly Made in the USA

## PERFECT SOLUTION FOR HEAVY EXTERIOR DOORS

All the great features of the TSS 1.00 but with a heavier 3/4" diameter threaded shaft and a matching 3/4" threaded steel anchor.



Standard sizes include:

TSSHD 1.0"    TSSHD 1.5"    TSSHD 2.00"

All measurements are taken from floor to top of rubber.

# TSS HD SUNSET 1.00 SERIES FOR EXTERIOR DOORS

White rubber available upon request

## SAFETY AND REDUCED LIABILITY

The Sunset Door Stop Kit is a 4-piece system which makes a removable, reusable, solid stainless-steel doorstop. This heavy-duty solid stainless doorstop can be removed at the end of the business day to eliminate any liability exposure to pedestrians such as Mall walkers.

## MULTI-POSITIONED COMMERCIAL ENTRYWAYS

The Sunset Doorstop can be used anywhere in the radius of a door swing from 10 inches off the wall to 90 degrees allowing for multi positioned doorway openings on commercial entryways.

## EASIER FLOOR MAINTENANCE

Once the Sunset Doorstop has been removed from the floor for the evening the floor cap is set into the threaded floor anchor making it much easier for cleaning crews to use their floor cleaning equipment.



4 Part Sunset HD System



Installation Pack


All measurements are taken from floor to bottom of rubber.

# TSS HD & TSS HD SUNSET SERIES INSTALLATION DIRECTIONS

For Exterior Doors

Solid Stainless-Steel  $\frac{3}{4}$  in diameter threaded shafts with steel anchors

Proudly Made in the USA

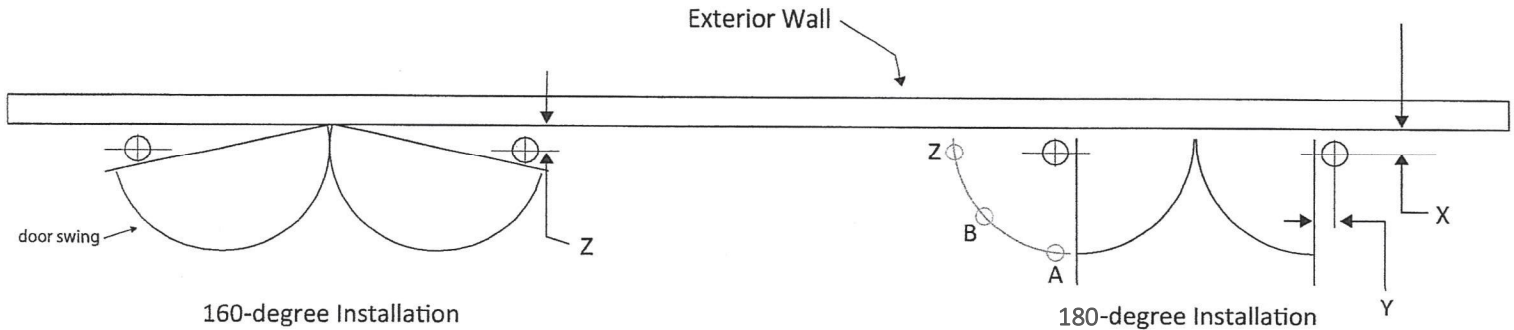

## Drawing on the left shows:

Y= 1 3/4" over from the 90-degree open door position.

X= Minimum distance away from the exterior wall is 10".

Z= Location of stop is a minimum of 2/3 the distance of the width of the door from the pivot edge of the door to the center line of the anchor. The Stopit is located the width of the handle plus 1/2" away from the wall.

## Drawing on the right shows:

A, B, Z = New possible locations for the TSS HD Sunset. They can be located anywhere within the door swing radius at minimum of 2/3 the distance of the width of the door from the pivot edge of the door and minimum distance of 10" from the wall.

The TSS HD Sunset Steel Anchor can be drilled and installed in both concrete and stone. A steel anchor with installation instructions is provided with each STOPit TSS HD Sunset.

## Sizes available are: TSS HD 1.00, TSS HD 1.50


Determining the size to be used. Grade of sidewalk slope away from the building must be taken into account. Open door to the position desired, using the Z,Y,X locations given above to locate install position of Stopit, measure the distance from the bottom of the door to the ground. That distance determines the size Stopit HD to be used.

**Example:** Distance measured is 1 1/2" Stopit to be used is TSS HD 1.50


Distance measures 1" then a TSS HD 1.00 is used.

# Concrete & Stone Floor Installation Steps


Proudly Made in the USA

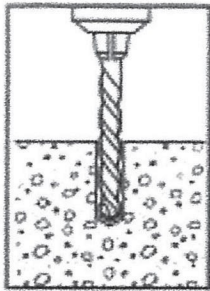


1. Drill hole to required embedment.

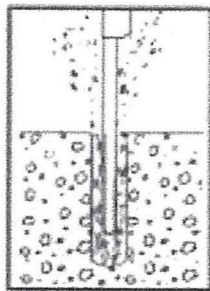

2. Clean hole with pressurized air.

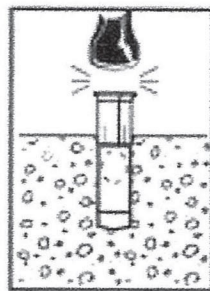

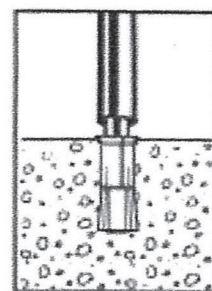

3. Drive anchor flush with surface of concrete.



4. Expand anchor with with available Red Head setting tool. Anchor is properly expanded when shoulder of setting tool is flush with top of anchor.

## CAUTION / IMPORTANT

Installation of the Door Stop location on the floor must be no further than 1/3 of the width of the door from the latch end.

BASE MATERIAL	DROP-IN ANCHOR TYPE	PART NUMBER	SETTING TOOL PART NUMBER	BOLT SIZE-THREADS PER INCH	DRILL BIT DIA. In. (mm)	THREAD DEPTH In. (mm)	EMBEDMENT MIN. HOLE DEPTH In. (mm)
Solid concrete/ lightweight fill deck	RM 	RM-12	RT-112	1/2" - 13	5/8 (15.9)	3/4 (19.1)	2 (50.8)
		RM-34	RT-134	3/4" - 10	1 (25.4)	1-1/4 (31.8)	3-3/16 (81.0)
Solid concrete/ lightweight fill deck	RL (w/o lip) 	RL-12	RT-112	1/2" - 13	5/8 (15.9)	3/4 (19.1)	2 (50.8)
		RL-34	RT-134	3/4" - 10	1 (25.4)	1-1/4 (31.8)	3-3/16 (81.0)

Durable Solid  
Stainless Steel Core  
Made in the USA  
Easy to Order  
Best on Market



Steel Anchor

Installs Quickly

Easy Assembly

# WFS 1.0 SERIES FOR WOOD FLOORS

Proudly Made in the USA



Solid Stainless-Steel Construction

Installation Tool Included

Pre-Assembled

Requires 3/8" Pre-Drilled Pilot Hole

Easy to Install

Made in the USA

Proudly Made in the USA

# TSSWS 1.0 WALLSTOP

Stainless Steel Door Wallstop  
Stainless Steel Fasteners  
Made in the USA

#3 Philips Bit Included  
Stainless-Steel Fasteners Included  
Pre-assembled  
Easy to Install  
Requires Solid Blocking in Wall

