



2005-2009 Ford Mustang


CUPHOLDER NITROUS SWITCH PANEL

Part # 00-11013


INSTALLATION INSTRUCTIONS

This panel fits in the front drinking cup area of your console. You will need a drill with a .090 drill bit or slightly smaller. There are 3 tiny holes that must be drilled into the front area to help support this panel.

Step 1: Attached the supplied two sided tape to the back of your switch panel in the area that rests on the console. Only a small amount of tape is needed. This will keep the panel from rattling and moving once installed.

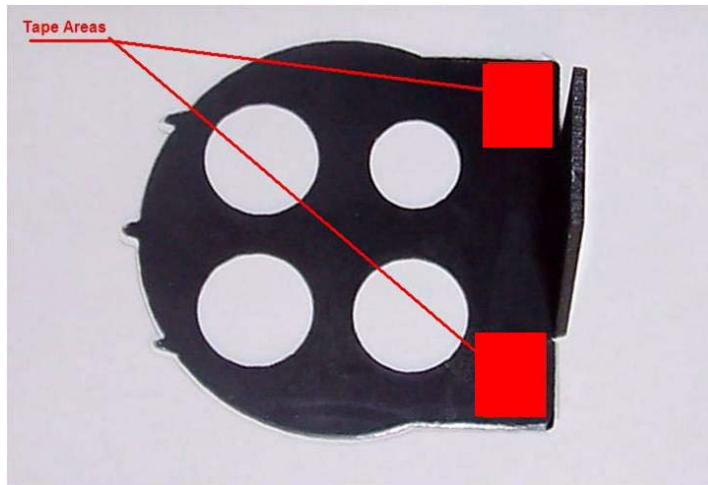

Step 2: Place the switch panel onto a piece of paper or poster board. Once you have traced the panel cut it out as shown. This is a template to help locate where you will have to drill the 3 holes

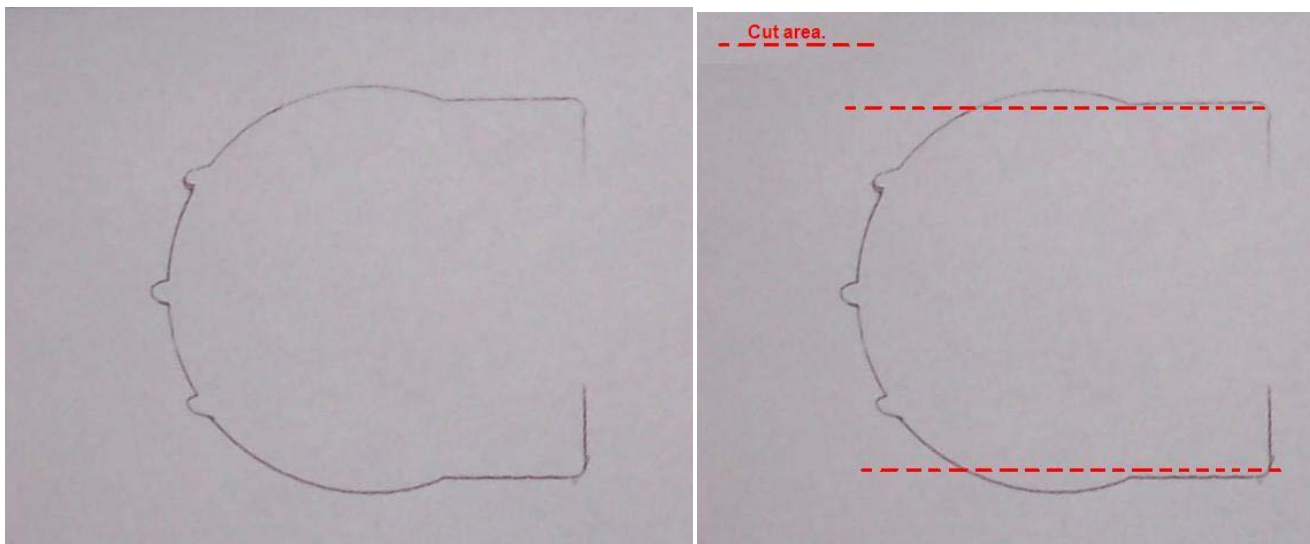



2005-2009 Ford Mustang

CUPHOLDER NITROUS SWITCH PANEL

Part # 00-11013

INSTALLATION INSTRUCTIONS

Step 3: Place your template into your console and slide forward so your 3 points just touch the front area. Mark the area just above your template. Drill these 3 points with a .090 drill bit, or slightly smaller. The points need to be a snug fit, making the holes any larger will not allow this panel to sit properly. Test fit your panel to confirm your hole location. Drill a large enough hole in the bottom area of your front cup holder, to allow all the wires needed for this panel.



Step 4: Route all your wiring for your accessories to the switch panel and make your connections. There is plenty of room under this panel to roll any excess wire under the panel, giving yourself a little extra wire will make your install easier. The long vertical leg is to hide all the wiring from sight.

Step 5: Once all of your wiring is confirmed accurate remove the protective siding on the tape and install your panel, pressing firmly to secure the tap to the console.





2005-2009 Ford Mustang

CUPHOLDER NITROUS SWITCH PANEL

Part # 00-11013

INSTALLATION INSTRUCTIONS

WIRING DIAGRAM

