

PART NUMBER 00-11025

INSTALLATION INSTRUCTIONS

This Nitrous Outlet Vehicle Specific Switch Panel is designed specifically for the 2005-2013 C6 Chevrolet Corvette Z06. If you need any assistance during installation or if you have guestions about this plate system, call our Tech Help Line at (254) 848- 4300.

Tools Needed for Installation*:

- T15 Torx bit
- Ratchet
- Phillips Head Screwdriver
- Body Tool
- Small Die Grinder

*These are the tools required for installation of this kit on a stock vehicle. If your vehicle has aftermarket parts, other tools may be required.



Step 1:

Inside the storage compartment of your center console, pop off the 2 caps covering the 2 screws for the center console. Using a T15 Torx bit, remove the screws.



Step 2:

Using a body tool, pop off the center console cover. Make sure to unplug the seat heater switches and the power outlet.





PART NUMBER 00-11025

INSTALLATION INSTRUCTIONS




Step 2: con't.

Using a body tool, pop off the center console cover. Make sure to unplug the seat heater switches and the power outlet.



Step 3:

Using a Phillips head screwdriver, remove the ashtray assembly from the console cover.

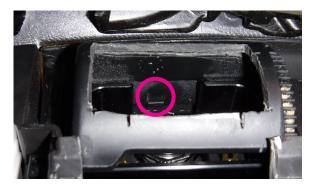

Step 4:

Using a small die grinder, cut a rectangular hole in the back of the ashtray.



Step 5:

Reinstall the ashtray assembly to the console cover.



PART NUMBER 00-11025

INSTALLATION INSTRUCTIONS



Step 6:

Pull the switch panel wires from under the dashboard toward the center console.



Step 7:

Place the center console cover back in the car.



Step 8:

Pull the switch panel wires through the ashtray assembly.



Step 9:

Plug in wires to switch panel using the diagram below.



PART NUMBER 00-11025

INSTALLATION INSTRUCTIONS

Step 10:

Before snapping the panel into place test the system and make sure your wiring is correct. With the key in the on position turn on system arm, the solenoids should click. If they don't something is wired wrong. If they do click then turn on the heater and see if it gets warm, then try your purge. Once everything is working correctly move to the next step.



Step 11:

Place the switch panel over the ashtray assembly and press it down, the tabs on the side will snap into place and keep your switch panel secure.



Step 12:

Reinstall the console cover by snapping it back in place and securing it with the 2 Torx screws.