



2020-2021 C8 Corvette Custom Switch Panel

PART NUMBER: 00-11051

INSTALLATION INSTRUCTIONS

This Nitrous Outlet Vehicle Specific Switch Panel is designed specifically for the 2020 and up Chevrolet C8 Corvette. If you need any assistance during installation or if you have questions about this switch panel, call our Tech Help Line at (254) 848-4300.

Tools Needed for Installation:

- 10mm Deep
- 1" Hole Saw
- Drill

Additional Materials Needed for Installation:

- Wiring Materials

- These are the tools required for installation of this kit on a stock vehicle. If your vehicle has aftermarket parts, other tools may be required.



Step 1: Disconnect the Battery

- Open the front storage compartment.



- Remove the trim panels on each side of the vehicle by pulling them from the clips securing them to the body.



- Remove the cowl panel covering the battery by pulling it from the clips securing it to the body.



- Disconnect the negative battery terminal by using a 10mm socket to loosen the nut.

IMPORTANT: All appropriate safety equipment (gloves, tools etc.) must be used during the installation of this product(s). Nitro Dave's LLC accepts NO responsibility for injuries resulting in the installation of any product(s). Nitrous oxide is for off-road use only.

WWW.NITROUSOUTLET.COM/INSTALLATION-GUIDES



2020-2021 C8 Corvette Custom Switch Panel

PART NUMBER: 00-11051

INSTALLATION INSTRUCTIONS



Step 2: Vehicle Disassembly

- Open the driver door.



- Remove the side trim panel by pulling it from the clips holding it to the center console.



- Open the center console.



Step 3: Switch Panel Installation

- Place the switch panel in the center console with the buttons toward the front of the car. This will help to locate where to drill the access hole for the wiring.



- On the side of the console compartment, the access hole needs to be as far forward and as high as possible. Before drilling, remove the switch panel as not to damage it or any switches.

IMPORTANT: All appropriate safety equipment (gloves, tools etc.) must be used during the installation of this product(s). Nitro Dave's LLC accepts NO responsibility for injuries resulting in the installation of any product(s). Nitrous oxide is for off-road use only.

WWW.NITROUSOUTLET.COM/INSTALLATION-GUIDES




2020-2021 C8 Corvette Custom Switch Panel

PART NUMBER: 00-11051

INSTALLATION INSTRUCTIONS




- Using a 1" hole saw, drill the access hole.

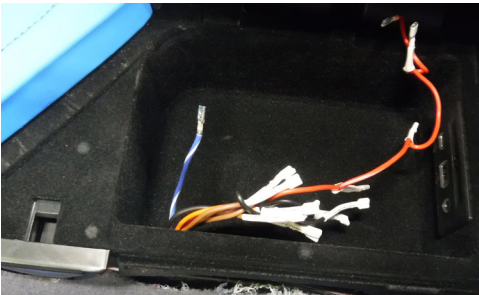

Step 4: Wiring

- Using the diagrams that came with which ever nitrous controller and system accessories you chose route the wiring through the car.

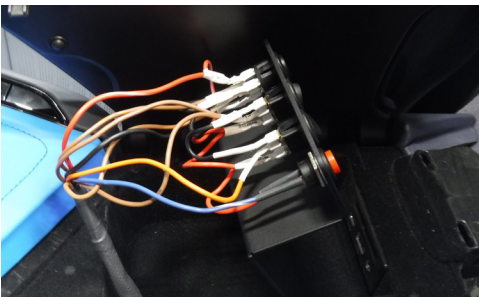

- Connect the wiring using the diagram provided.



Step 5: Final Check Over

- Reconnect the battery.



- Make sure the Arm switch is in the off position and key the car on. Verify that the switches designated components are not activated, then activate each switch and verify that it arms its designated component.

IMPORTANT: All appropriate safety equipment (gloves, tools etc.) must be used during the installation of this product(s). Nitro Dave's LLC accepts NO responsibility for injuries resulting in the installation of any product(s). Nitrous oxide is for off-road use only.

WWW.NITROUSOUTLET.COM/INSTALLATION-GUIDES



2020-2021 C8 Corvette Custom Switch Panel

PART NUMBER: 00-11051

INSTALLATION INSTRUCTIONS



Step 6: Final Assembly

- Without pulling the wires from the switches, pull the wiring through the hole in the side of the console until the switch panel is completely on the bottom of the console. Make sure that the console lid does not activate any of the buttons.



- Reinstall the side console panel.



- Reinstall the 3 trim panels around the front storage compartment.

IMPORTANT: All appropriate safety equipment (gloves, tools etc.) must be used during the installation of this product(s). Nitro Dave's LLC accepts NO responsibility for injuries resulting in the installation of any product(s). Nitrous oxide is for off-road use only.

WWW.NITROUSOUTLET.COM/INSTALLATION-GUIDES