



Nitrous Outlet

Required Items

Description	Qty	Part Number
1. Heated Nitrous Bottle Bracket	1	00-64000
2. Nitrous Outlet Bottle Bracket Conversion	1	00-64000-2010
3. Nitrous Outlet 10+ Camaro Rear Bottle Bracket	1	00-33002



(00-64000-2010)




(00-33002)

-Assembly of Bottle Bracket-

1. Install the small rubber grommet (that came with the original heated nitrous bottle bracket (00-64000)) into the center hole of the front of the Nitrous Outlet bottle bracket conversion (00-64000-2010).
2. Push the 2 heater wires through the center of the grommet and press the front mounting bracket flush against the front of the bottle cradle.
3. Attach the Nitrous Outlet bottle bracket conversion (00-64000-2010) to the front of the bottle cradle using the 4 Stainless steel ¼-20 button head cap screws that came in the original hardware pack.
4. Place a nitrous bottle on the bottle cradle in order to place the band clamps in desired location.
5. Attach the cradle to the Nitrous Outlet 10+ Camaro Rear Bottle Bracket (00-33002) with the band clamps in between the cradle and bottle bracket, use the original 5/16" bolts for the rear of the cradle and use the longer 1/4 x 20" bolt provided in the Nitrous Outlet Bottle Bracket Conversion Kit (00-64000-2010) for the front of the cradle.
6. Once the bottle cradle is tightened down you may remove the bottle.
7. Finally take the finished bottle bracket assembly and slide the bottom end through the body colored loops, then take the two plastic wedge tabs off the top and replace them with the supplied replacement tabs (00-33002), and secure them to the bracket.



(Step #2)

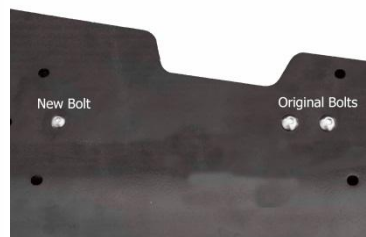

(Backside of the Bracket)



(Finished assembly)



(Install from outside the trunk)



(Installed in the trunk)