


# WW-171 Wooden Solar Wax Melter ASSEMBLY INSTRUCTIONS

REPLACEMENT PARTS ITEM NUMBER	PARTS INCLUDED	QUANTITY INCLUDED
52-171	Solar Wax Melter Body	1
52-171	Cover-Wood Frame	1
50-171	Cover-Plastic Sheet 1/4" x 20" x 23½" (.635cm x 50.80cm x 59.69cm)	1
80-168	Steel Pan - Non Stick	1
50-172	Metal Pan 20" x 23½" (50.80cm x 59.69 cm)	1
	13" (33.02cm) Rear Legs	1
	6⅞" (42.86cm) Front Legs	1
	1¼" (3.175cm) Screws	13

**Additional Items Required For Assembly:** Phillips Screwdriver or Screw Gun

Turn the Wax Melter body upside down on a hard surface. Attach the rear legs to the deepest end of the body (with the angled end of the leg slanting to the inside) placing the screws provided into the pre-drilled holes. Attach the front legs in the same manner but the angled end of the leg will slant to the outside. Repeat for the opposite side.

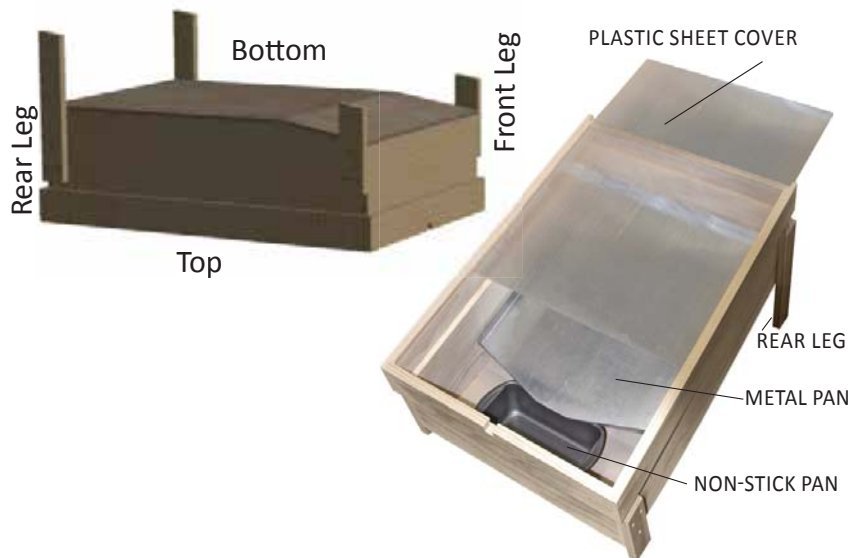

**MANN LAKE**  
WE KNOW BEES

501 1st St S, Hackensack, MN 56452  
500 Santa Anita Dr., Woodland, CA 95776  
485 Stewart Rd, Wilkes-Barre, PA 18706  
1600 Commerce Street, Marshall, TX 75672

Telephone: 800-880-7694  
[www.mannlakeltd.com](http://www.mannlakeltd.com)