




ASSEMBLY INSTRUCTIONS



STEEL CABINETS

Tool Cabinet 1865


YOU'LL NEED

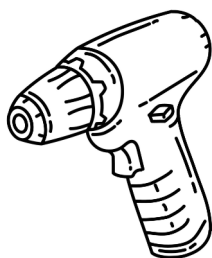


COMPONENTS

Before commencing please check and familiarise yourself with the components of the Tool Cabinet 1865.

Note: There are subtle but important distinctions between the shelf levels (D, E, G and G).

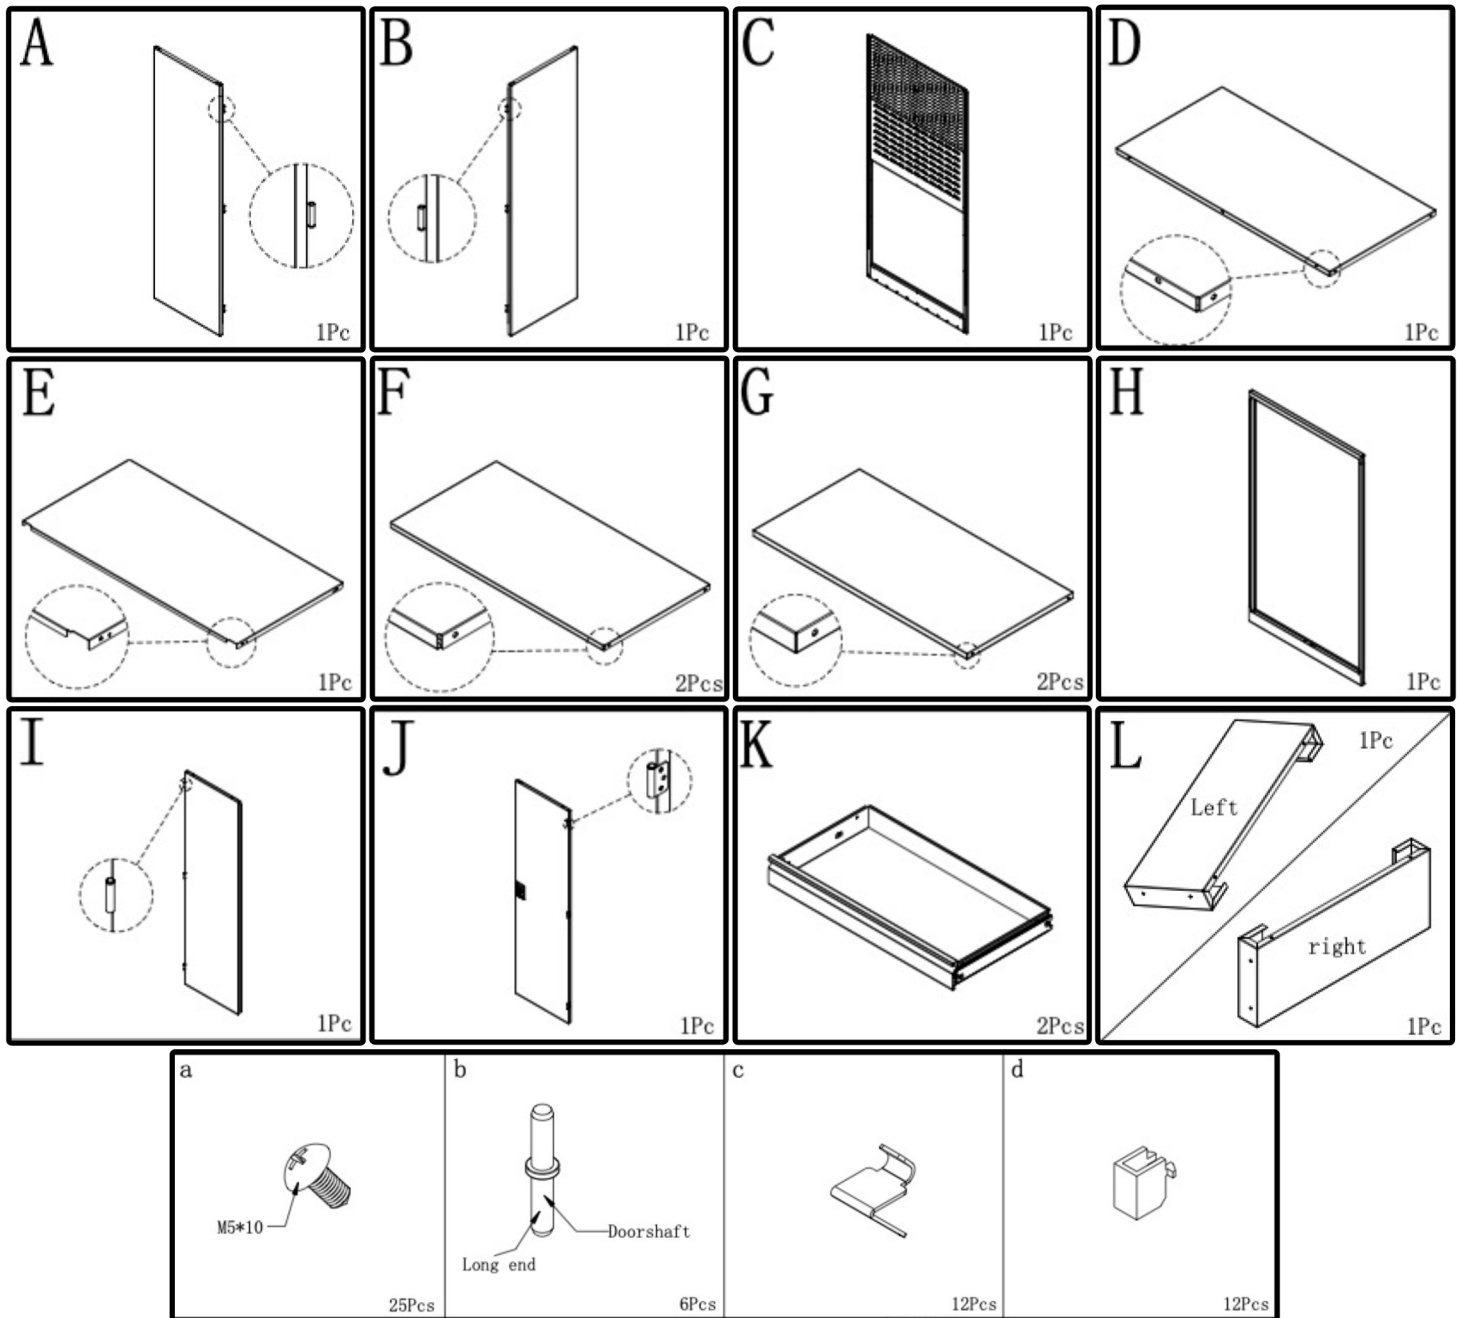

TOOL CABINET OVERVIEW

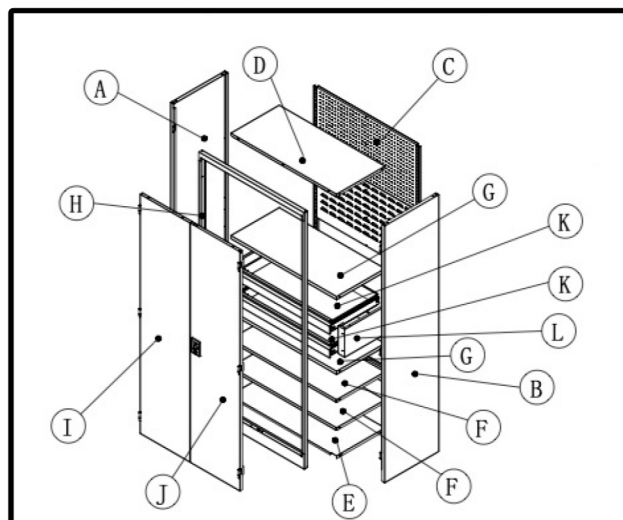

Keys





ASSEMBLE THE CABINET

1. Carefully stand the Rear Panel (C) upright against a wall or surface. Slide the Left Panel (A) into position as shown, making sure the the folded return hooks around the back of the Rear Panel and the screw holes line up. Be sure that the panels are oriented as pictured with the Cabinet Floor Support Rail of the Left Panel (A) toward the ground. Secure the Left Side Panel to the Rear Panel internally with 4 screws (a) as shown in the diagram 1.

2. Repeat this step again for the Right Panel (B), again making sure that the Cabinet Floor Support Rail is at the base of the cabinet and the screw holes line up. The cabinet should now stand without support.

3. Place the Front Panel (H) inside the two Side Panels (A and B) and bring the Front Panel forward into the folded returns as shown. Make sure the Front Panel (H) is seated forward at both the top and the bottom on both sides as shown in diagram 3.

4. Providing the Front Panel (H) has been correctly fitted, the cabinet Ceiling (D) can now be fitted by angling it inside the cabinet and pushing it up into place. Make sure that the holes on the Ceiling (D) that are closest to the corner are rear facing. The Ceiling (D) should fit snugly up into position in between the Side, Front and Rear Panels (A, B, C, H) and the six screw holes on in the inside as shown in diagram 4 should align. Secure in place with 6 screws (a).

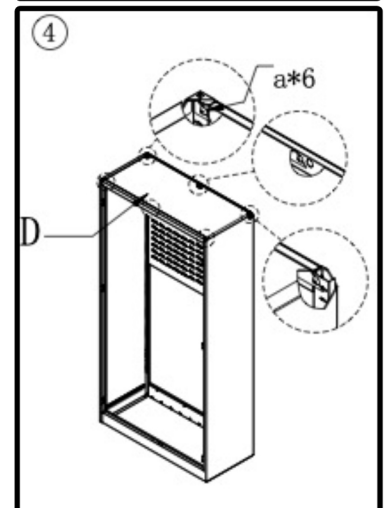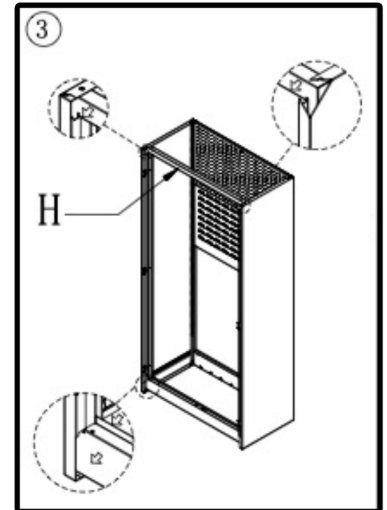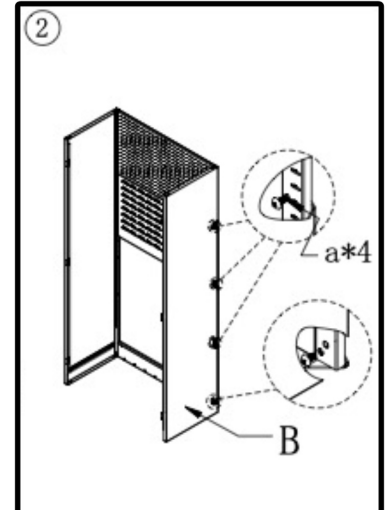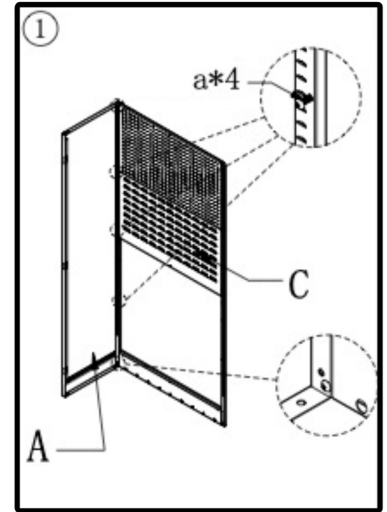





ASSEMBLE THE CABINET

5. Angle the Floor Panel (E) inside the cabinet with the cutouts front facing. Clip the rear and sides into the Cabinet Floor Support Rails of the Side (A and B) and Rear Panel (C). Make sure the sides and rear of the Floor Panel (E) are seated inside the Cabinet Floor Support Rails before fitting it into the Front Panel (H) as shown. Tilt back the cabinet to access the rear underside and secure Floor Panel (E) with three screws (a) as shown into the Rear Panel (C).

6. Position four Metal Shelf Clips (c) per shelf level at the desired height of the two lowest shelves in the slots available on the Front Panel (H) and Rear Panel (C). Bear in mind that the Shelf Level (G) that will bear the Drawers (K) will go in the slots at 585mm from the Floor (E). Optional: for the most part the weight of the stored items will be enough to hold the shelving down but for added security use the Plastic Shelf Locks (d) in each corner in the slots above the Shelf Levels (F).

7. Position four Metal Shelf Clips (c) in the slots available on the Front Panel (H) and Rear Panel (C) at 585mm from the Floor (E). This height will ensure there is sufficient room to install the Drawers (K) below the louvre panel.

8. Install the Draw Runner Mounts (L) by positioning as shown as securing in place with four screws (a) each side.

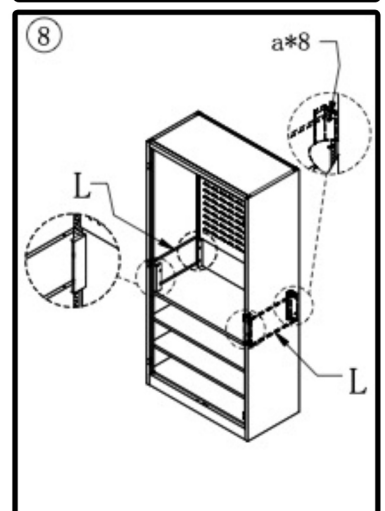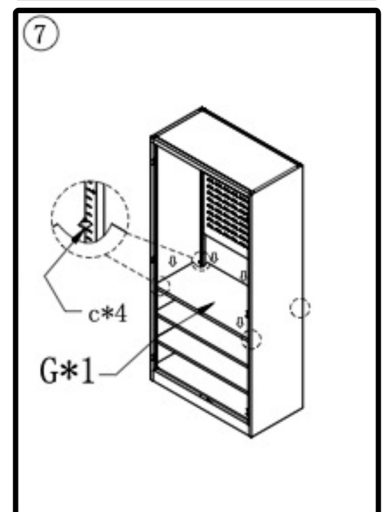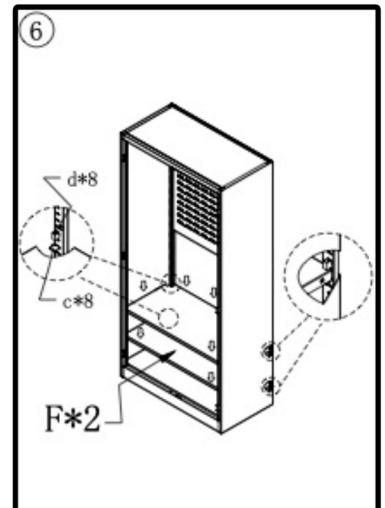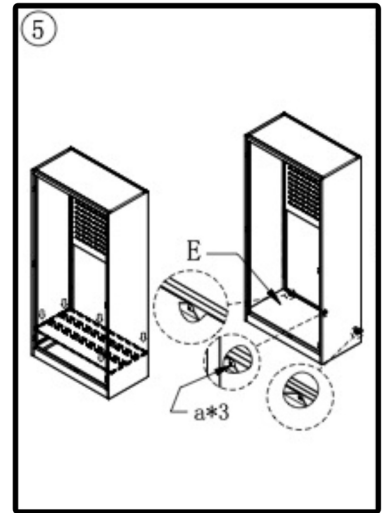





ASSEMBLE THE CABINET

9. Detach the Outer Rail from the draws by pulling them all the way out and then pushing the black lever to release the Outer Rail. Note: because the Drawer Rails are the same the black lever will move in the opposite directions on either side for release.

10. Clip the four Outer Rails of the drawers to the Drawer Runner Mounts (L) as shown.

11. Slide the Drawers (K) into place in the Outer Rails attached to the Drawer Runner Mounts (L).



12. Place the Top Shelf Level (G) on top of the Drawers (K) resting on the Drawer Runner Mounts (L).

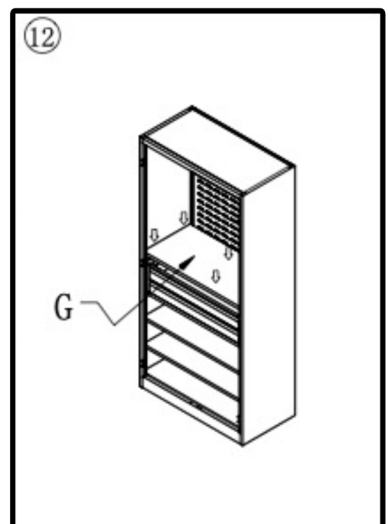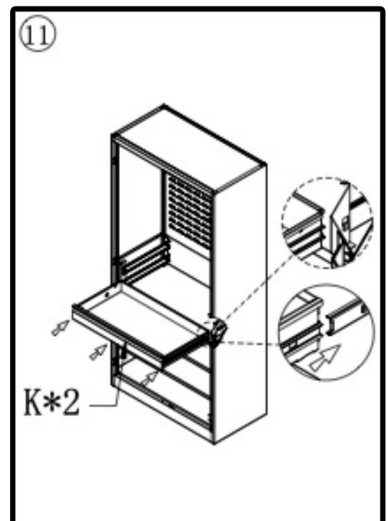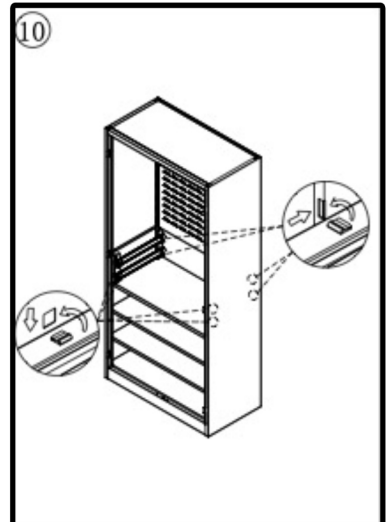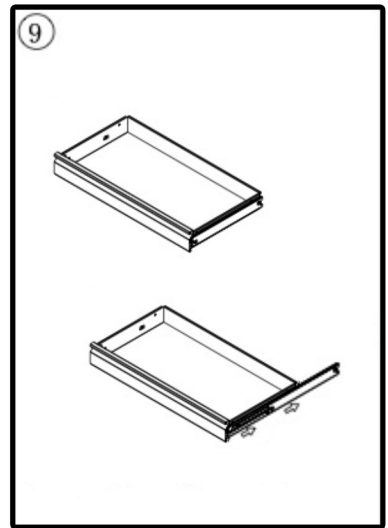

INSTALL THE CABINET DOORS

13. Install three Door Pins (b) into the mounts provided on the Front Panel (H) with the short end facing downward. Install the Left Door (I) by angling it in the fully open position and pushing the door shafts down onto the Door Pins (b).

14. Do the same for the Right Door (J) ensuring that the door is in the open position when installing onto the Door Pins (b).

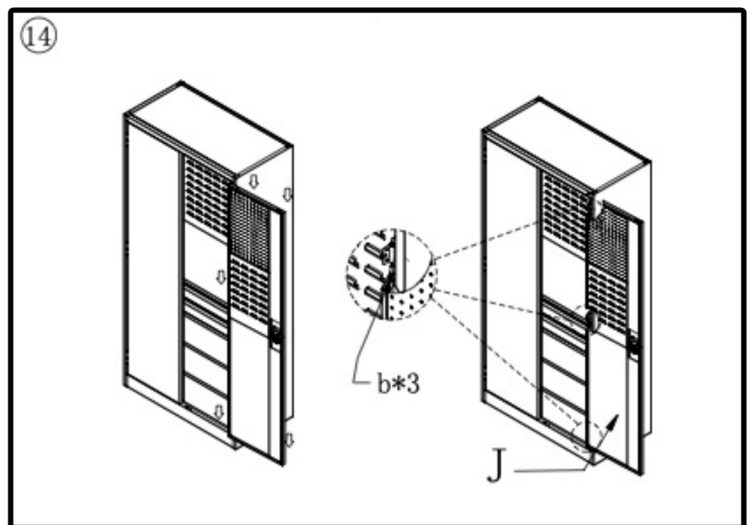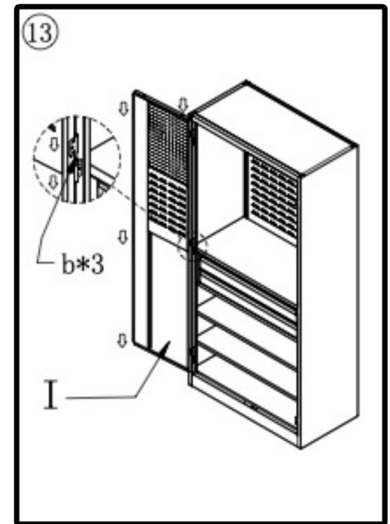

TOOL CABINET



COMPLETE

ENJOY YOUR NEW STORAGE SYSTEM!