

# INSTALLATION INSTRUCTIONS

**PART No.**

**FB22394**  
**19-22 Chevy Silverado**  
**Rear Bumper**



**VIDEO AVAILABLE**



## REQUIRED TOOLS

7mm Socket  
8mm Socket  
10mm Socket  
18mm Socket  
19mm Socket  
2.5mm Allen Wrench  
3mm Allen Wrench  
4mm Allen Wrench  
Clip Remover Tool

Help of a friend

## KIT CONTAINS

Rear Bumper  
M6 Bolt  
M6 Nut  
M12 Hex Bolt  
M12 Nyloc Nut  
Exhaust Cover (Right/Left)  
Exhaust Bracker (Right/Left)

## QTY

1  
4  
4  
4  
4  
1ea  
1ea

#### 1) REMOVE EXISTING BUMPER

Begin removing your vehicle's existing Rear bumper. We show how to do this in another video over at [www.fishboneoffroad.tv](http://www.fishboneoffroad.tv)



Remove the sensors and sensor wiring harness.  
Remove the license plate bracket and lights.  
Remove license plate lights.  
Remove the exhaust caps.

#### 2) ASSEMBLE

If applicable, remove the blind spot sensor brackets and install the factory sensors as shown.



If you have them, install your 3x3 pod lights here according to the manufacturers instructions.




Install your factory license plate bracket, spare tire guide, and trailer plug.



Install your Exhaust caps with the include bracket and hardware. Repeat if you have dual exhaust caps.



Install your license plate light brackets and lights.

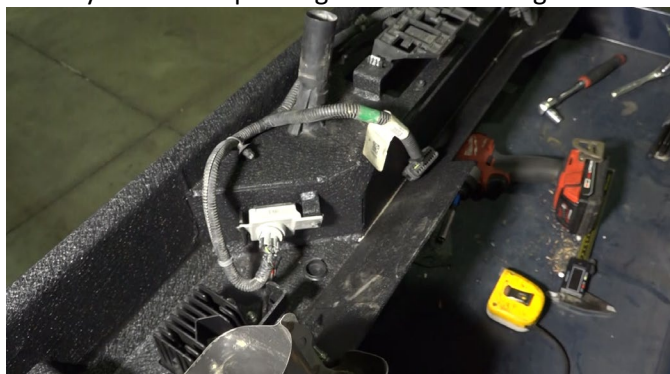

### 3) **INSTALL THE BUMPER**

With the help of a friend and the remaining included hardware, secure the bumper to the frame rails.

