



---

# Rolling Bench

## Kit B

### Assembly instructions

---



## Kit - Start

It's important to always start with Kit B when you start building a new table.



## Kit - Warning

Take note that before you screw the table in the floor you have to:

- Level the entire table
- Adjust the water dripping slope
- Adjust the length of the Kit B
- Make sure that the top of the table is in straight line

Part	Qty	Description		Part	Qty	Description	
# 1	X13	Mounting Nut (M6)		# A1	X2	Right Angle Plastic Connector	
# 2	X9	Mounting Bolt (M6*55L)		# B1	X2	Right Angle Plastic Connector	
# 3	X68	Mounting Bolt (M6*18L)		# B2	X2	Straight Plastic Connector	
# 4	X65	Mounting Washer		# B4	X4	Leg	
# 5	X2	Square Bar (Short)		# B-R	X1	Right Aluminum Side	
# 6	X2	V-Shape Bar		# B-L	X1	Left Aluminum Side	
# 7	X8	Mounting Bolt (M6*8L)		# A-A	X1	Aluminum Side	
# 8	X4	Square Bar (Long)		# B-B	X1	End Aluminum Side	
# 9	X8	Small Plastic Piece		# 20	X16	Plastic Cap (41*41)	
# 10	X2	Rolling Bar Kit B		# 21	X8	Square Plastic Cap (30*30)	
# 11	X2	Metal Trust With Side Holes		# 22	X2	Round Plastic Cap (D=42)	
# 12	X4	Metal Trust		# 23	X1	Round Plastic Cap (D=38)	
# 13	X8	Right Angle Metal Connector					
# 18	X4	Straight Metal Connector					
# 19	X1	Turnable Handle					
# C-1	X4	U-Shape Part (Long)					
# C-2	X4	U-Shape Part (Short)					

Also Includes assembly tools:

- Hex Wrench 4mm (x2)
- Open-Ended Wrench 10mm (x2)

## Kit B - Parts

**Part Qty**



# 1	X6
# 2	X4
# 3	X6

**Part Qty**

# 4	X4
# 5	X1
# 6	X1

**Part Qty**

# B4	X2
# C-2	X2

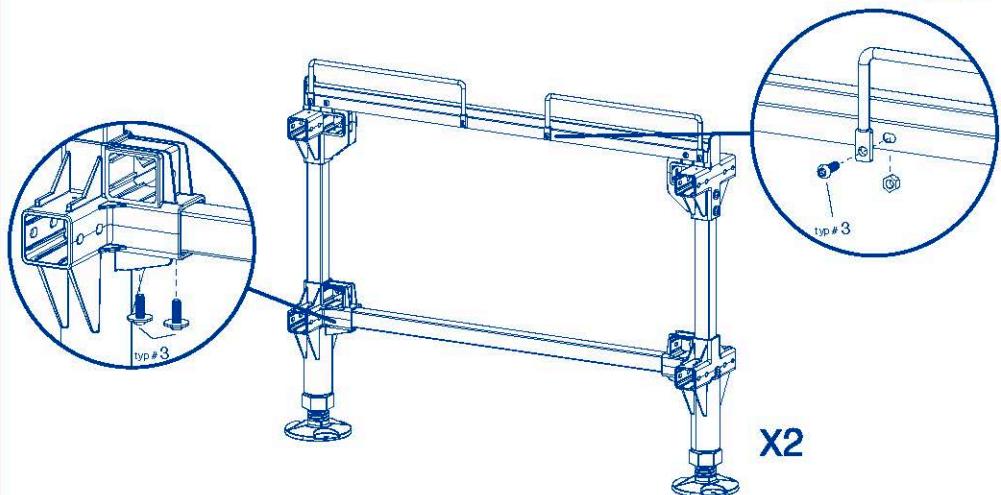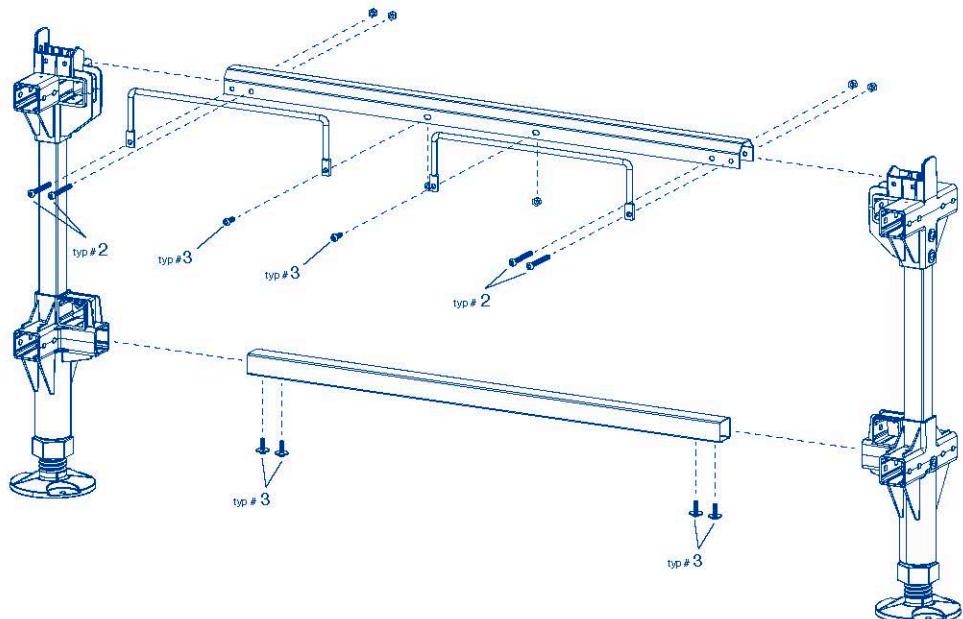**Kit B - Step 1**

**Part Qty**

# 3 X4  
# 4 X4



**Part Qty**

# 8 X4  
# 9 X4




**Part Qty**

# 21 X16  
X1



**X4**

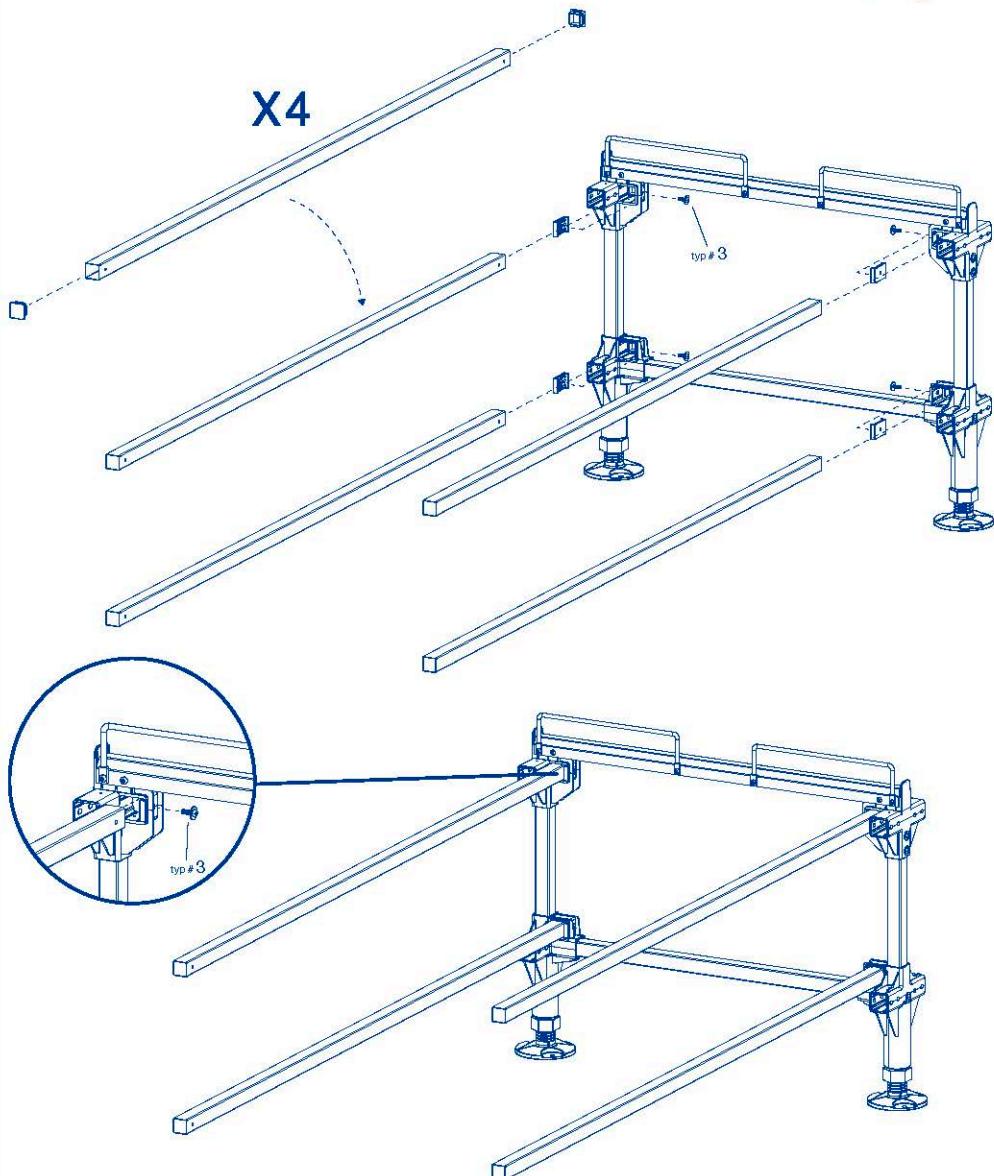

## Kit B - Step 2

**Part Qty**

#3 X4  
#4 X4




**Part Qty**

# 9 X4



**Part Qty**


X1

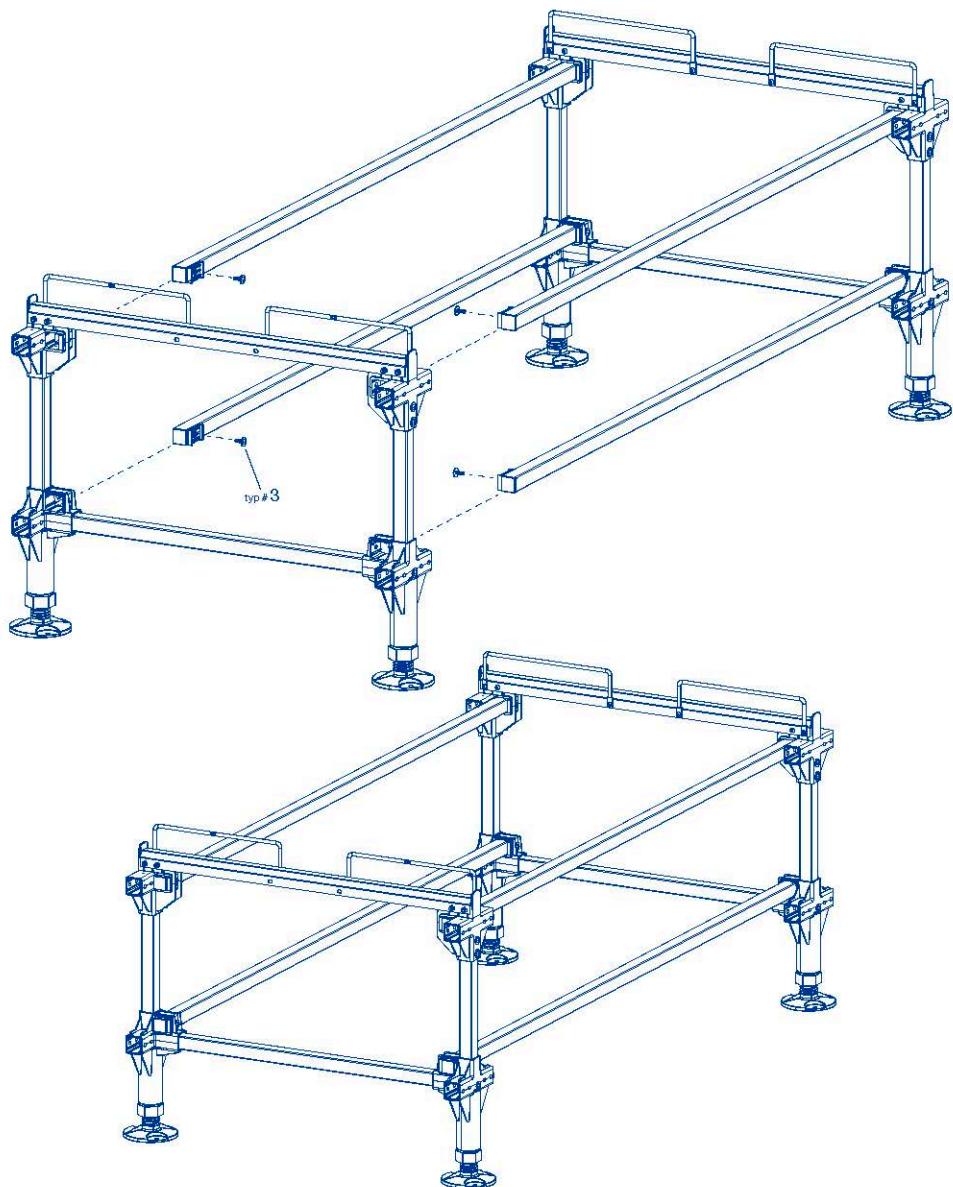

## Kit B - Step 3

**Part Qty**

# 20 X12

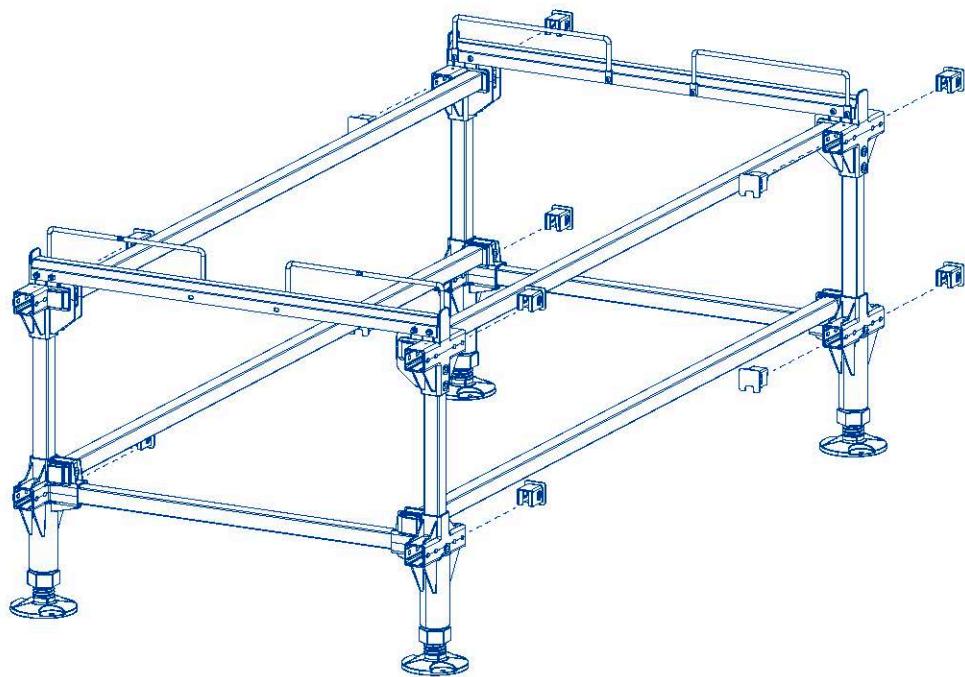


## Kit B - Step 4

**Part Qty**

#10 X2

**Part Qty**

# 22 X2

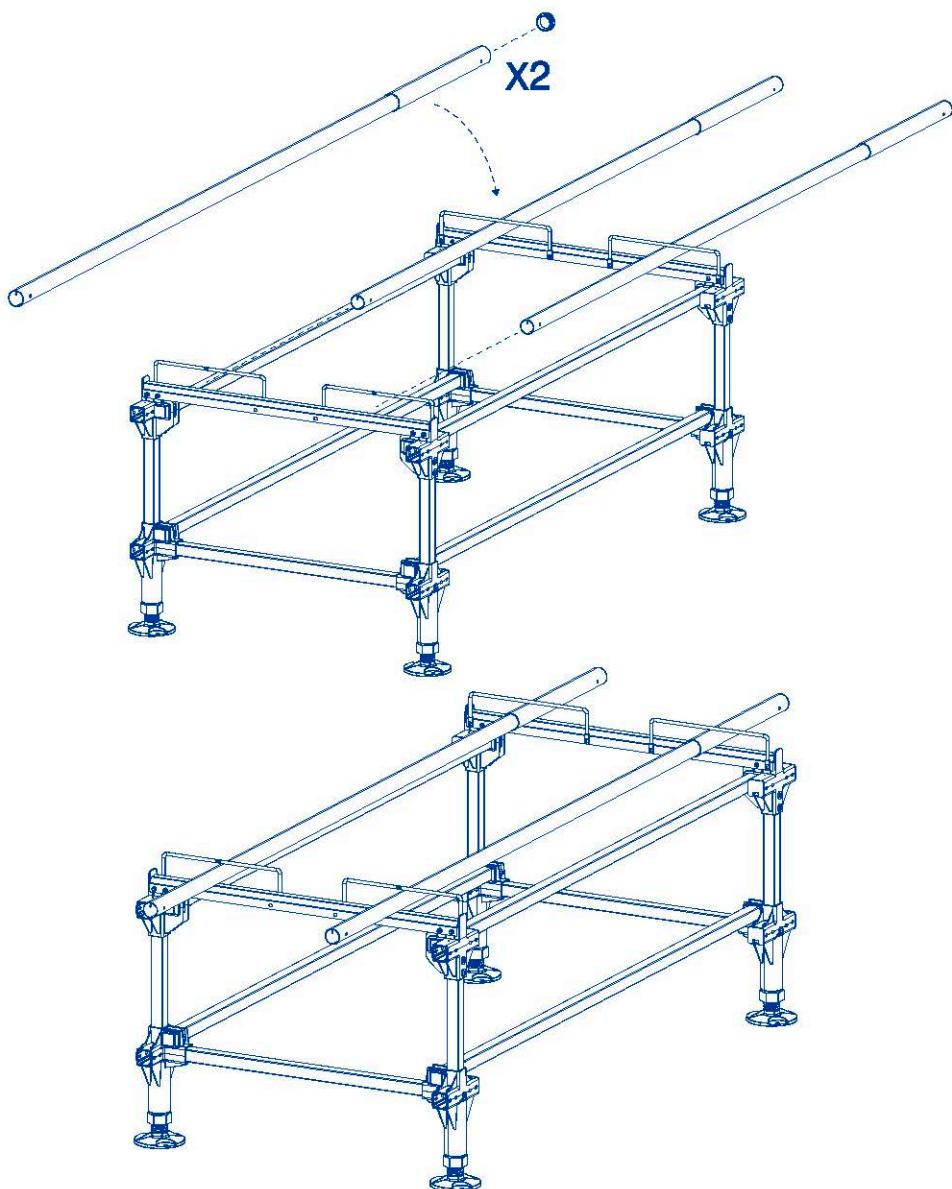

## Kit B - Step 5

**Part Qty**

# 3 X12



# 4 X12

**Part Qty**

# 11 X2





# 12 X4

**Part Qty**

# B-R X1



# B-L X1

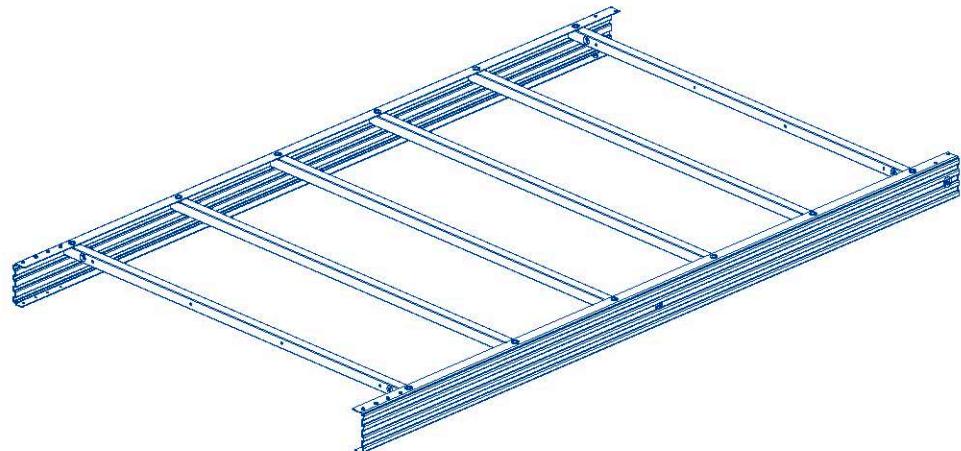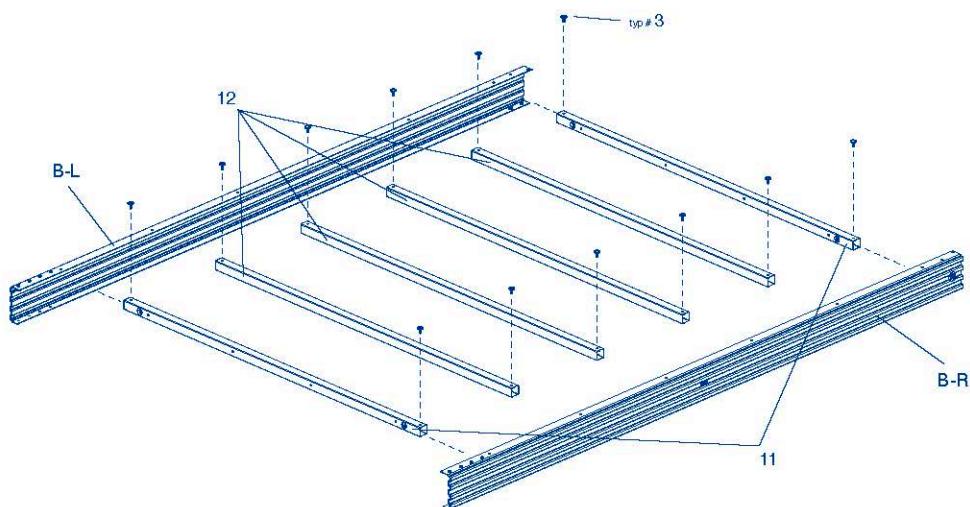

## Kit B - Step 6


**Part Qty**

#B1 X2



**Part Qty**

# B-B X1

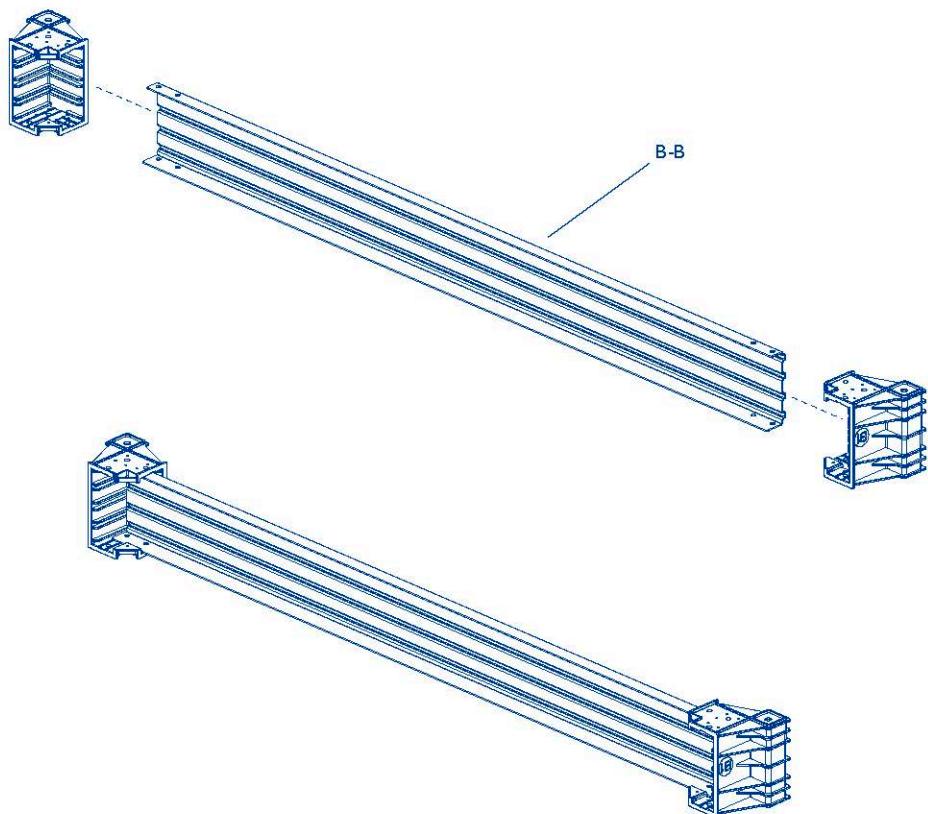

NOTE: Angle Plastic Connectors  
**A1** and End Aluminum Sides  
**A-A** must be kept apart for Kit A.

## Kit B - Step 7

**Part Qty**

# 3 X12



# 4 X12


**Part Qty**

# 13 X4



**Part Qty**

X1

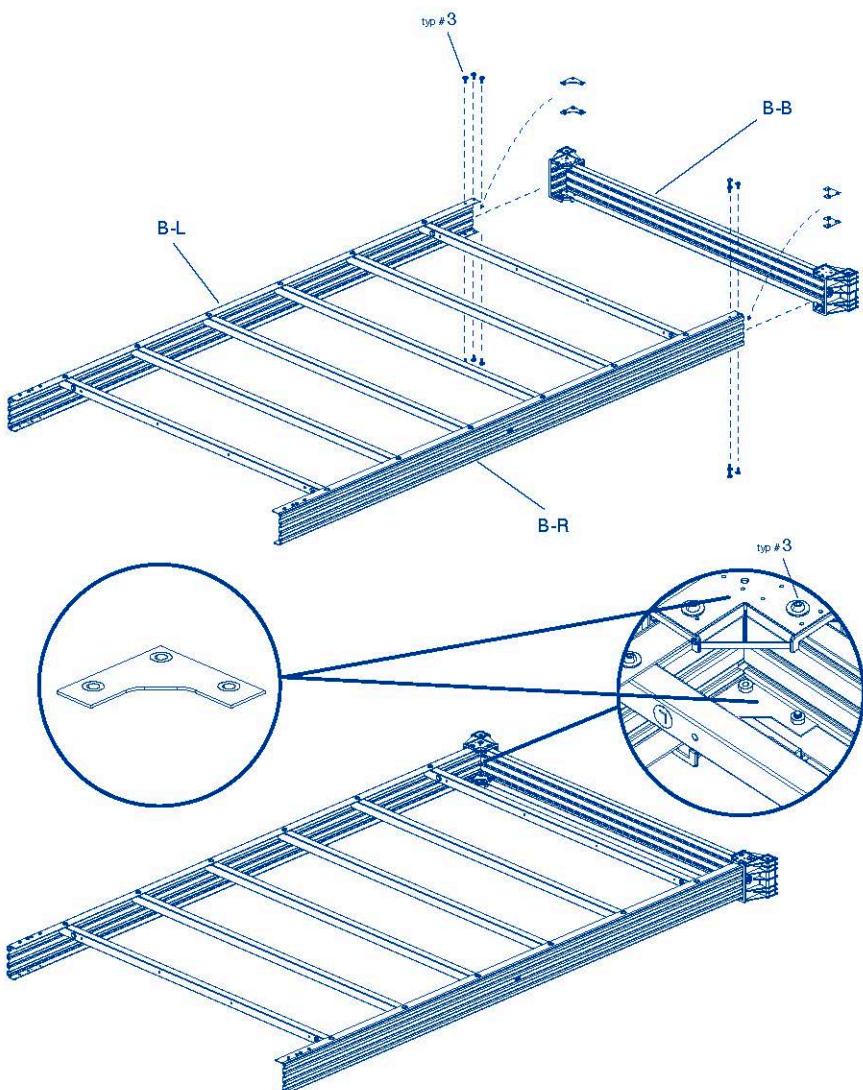

## Kit B - Step 8

**Part Qty**

# 3 X8




**Part Qty**

# 4 X8




**Part Qty**

# B2 X2


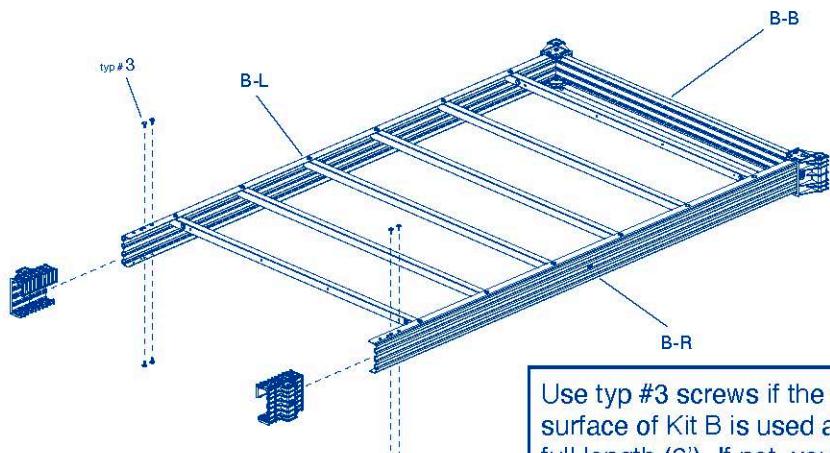


Use typ #3 screws if the table surface of Kit B is used at its full length (6'). If not, you need to use the typ #7 screws instead of the typ #3 screws.

# 7 X8

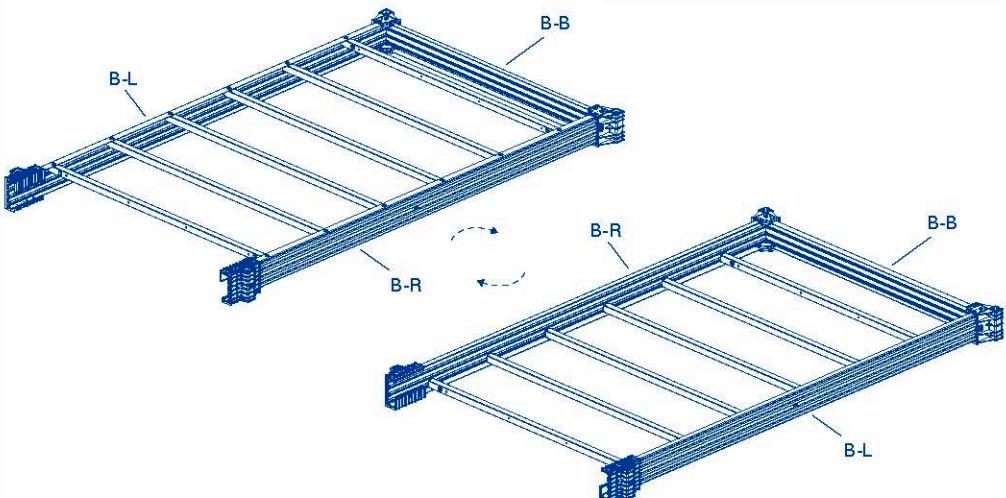

## Kit B - Step 9

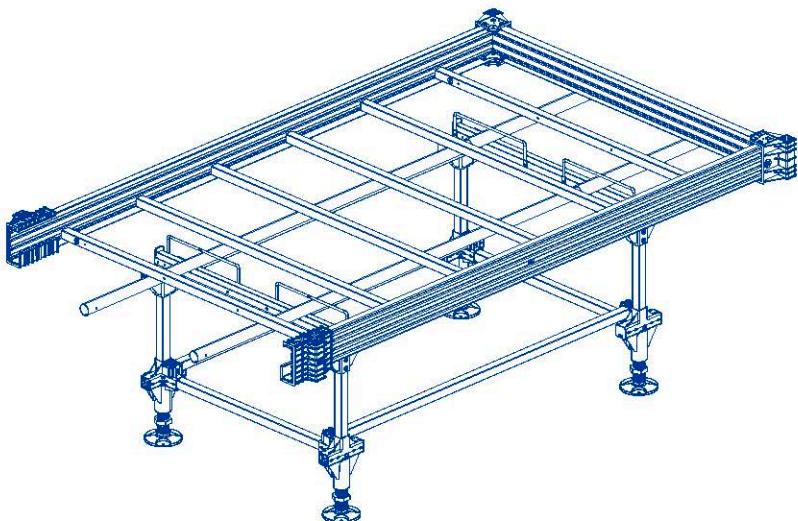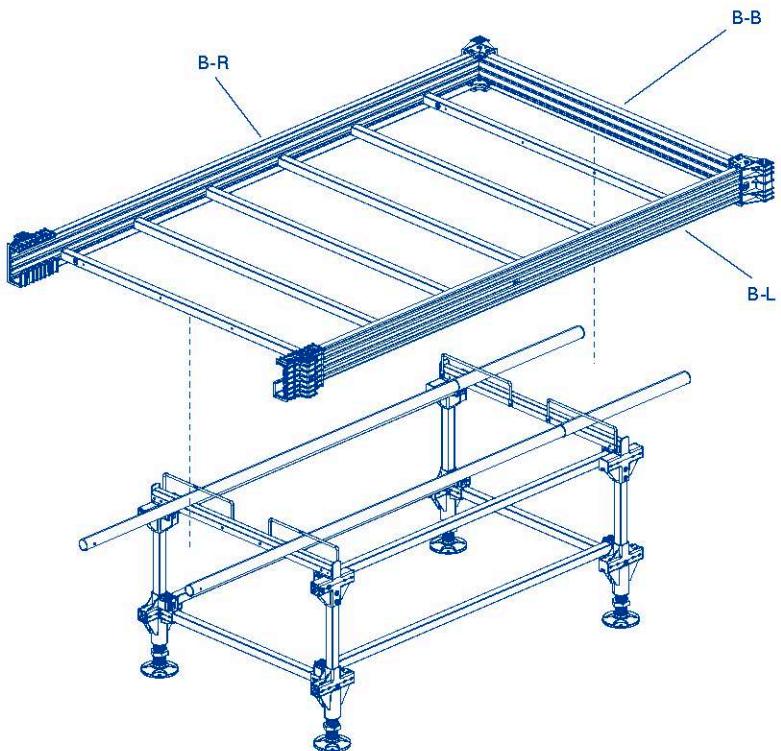

## Kit B - Step 10

**Part Qty**

# 3 X8






**Part Qty**

# 4 X8



**Part Qty**

# C-1 X4

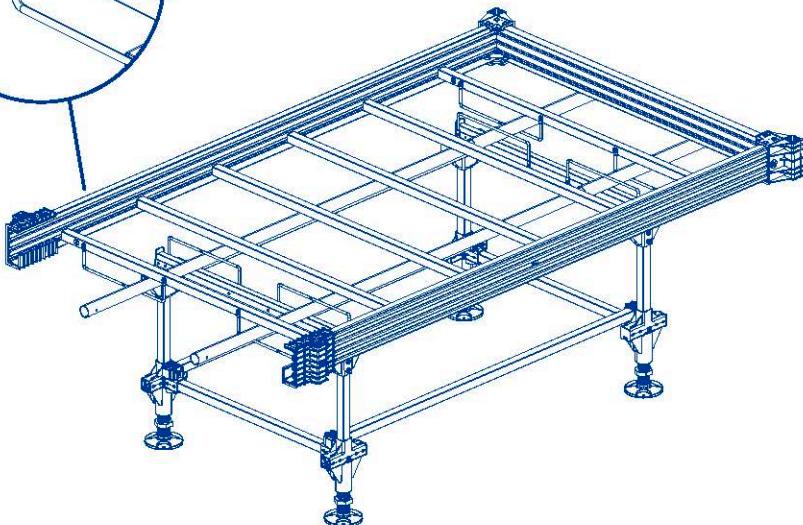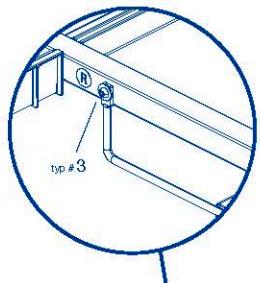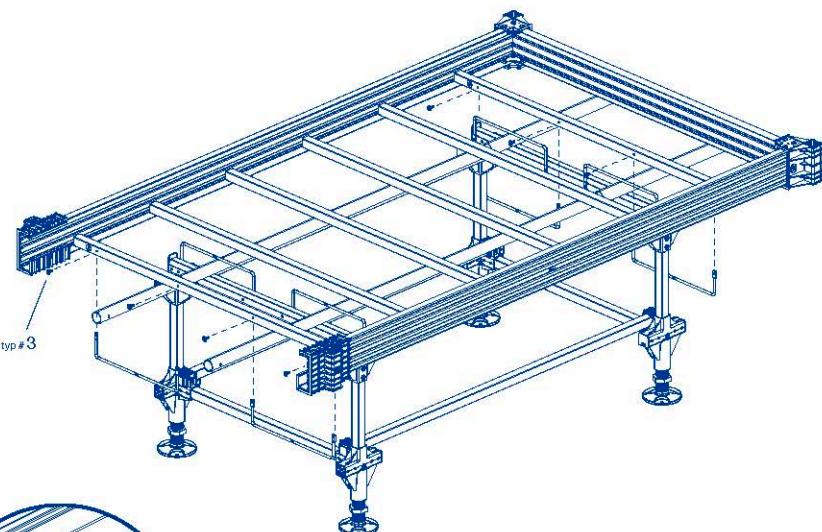

## Kit B - Step 11

## Remains Parts

The remaining parts need to be used to close the table when the length is determined. The steps of the assembling of those parts are illustrated in the Kit's A booklet.

Part	Qty	Description		Part	Qty	Description	
# 1	X1	Mounting Nut (M6)		# 19	X1	Turnable Handle	
# 2	X1	Mounting Bolt (M6*55L)		# A1	X2	Right Angle Plastic Connector	
# 3	X12	Mounting Bolt (M6*18L)		# A-A	X1	Aluminum Side	
# 4	X13	Mounting Washer		# 20	X4	Plastic Cap (41*41)	
# 13	X4	Right Angle Metal Connector		# 23	X1	Round Plastic Cap (D=38)	
# 18	X4	Straight Metal Connector					

Keep those parts for Kit A's booklet.

**IMPORTANT NOTE**

Plastic tray with drain  
must always be  
installed on Kit B.




---

# Rolling Bench

## Kit A

### Assembly instructions

---

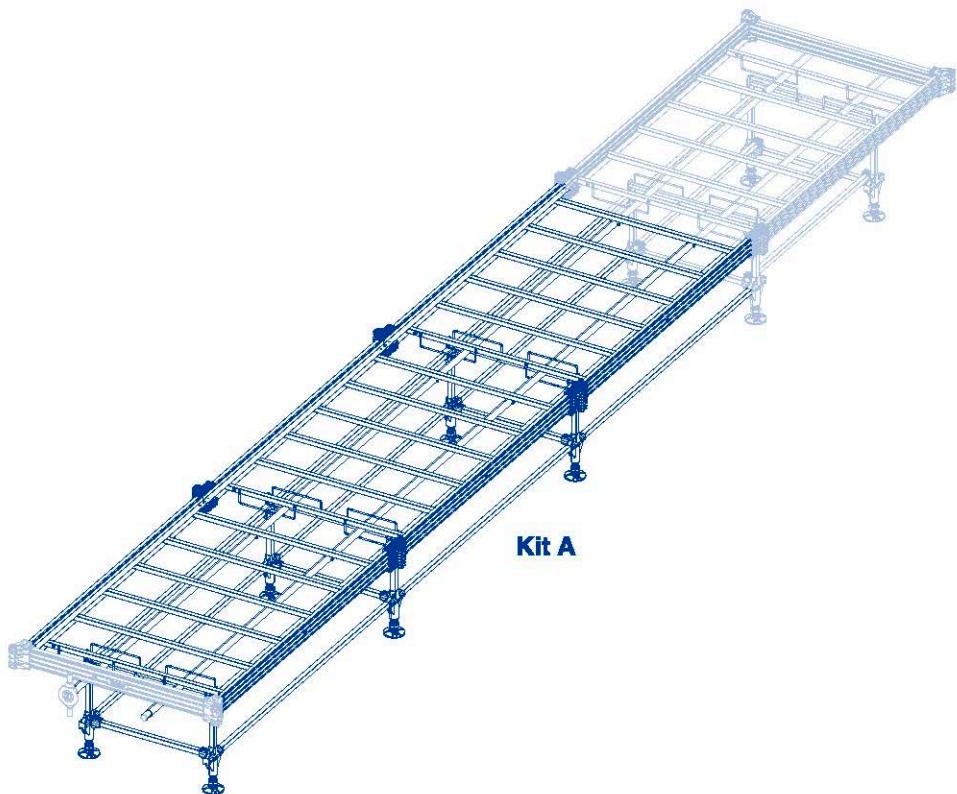

## Kit - Start

It's important to always start with Kit B when you start building a new table.



## Kit - Warning

Take note that before you screw the table in the floor you have to :

- Level the entire table
- Adjust the water dripping slope
- Adjust the length of the Kit B
- Make sure that the top of the table is in straight line

<b>Part</b>	<b>Qty</b>	<b>Description</b>	<b>Part</b>	<b>Qty</b>	<b>Description</b>
# 1	X8	Mounting Nut (M6)			
# 2	X6	Mounting Bolt (M6*55L)			
# 3	X54	Mounting Bolt (M6*18L)			
# 4	X50	Mounting Washer			
# 6	X1	V-Shape Part			
# 11	X1	Metal Trust With Side Holes			
# 12	X5	Metal Trust			
# 14	X1	Square Bar (Short)			
# 15	X4	Square Bar (Long)			
# 16	X2	Rolling Bar of Kit A			
# 17	X4	AA Straight Metal Connector			
			# A1	X2	Right Angle Plastic Connector
			# A2	X2	Straight Plastic Connector
			# A4	X2	Leg
			# A-R	X1	Right Aluminum Side
			# A-L	X1	Left Aluminum Side
			# C-1	X2	U-Shape Part (Long)
			# C-2	X2	U-Shape Part (Short)

**Also Includes assembly tools:**

- Hex Wrench 4mm (x2)

- Open-Ended Wrench 10mm (x2)

## Kit A - Parts

**Part Qty**



# 1	X6
# 2	X4
# 3	X6

**Part Qty**

# 4	X4
# 6	X1
# 14	X1

**Part Qty**

# A4	X2
# C-2	X2

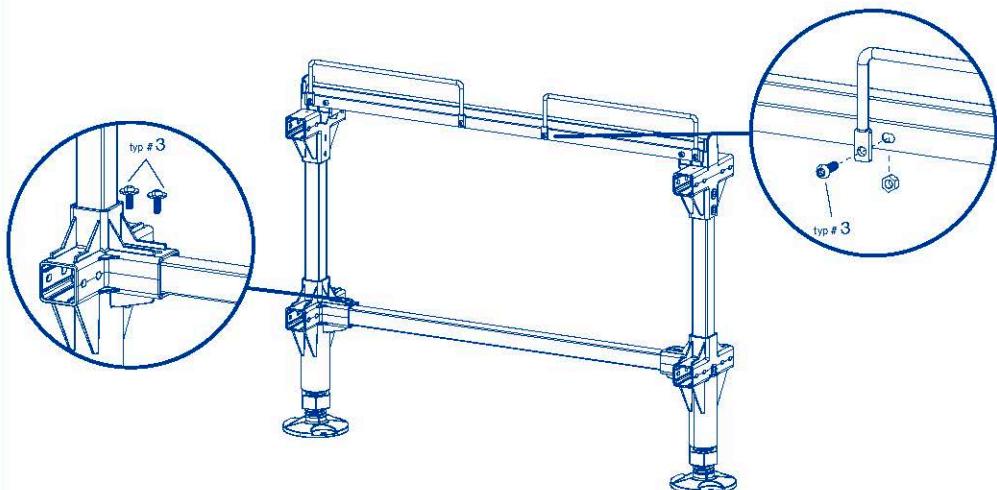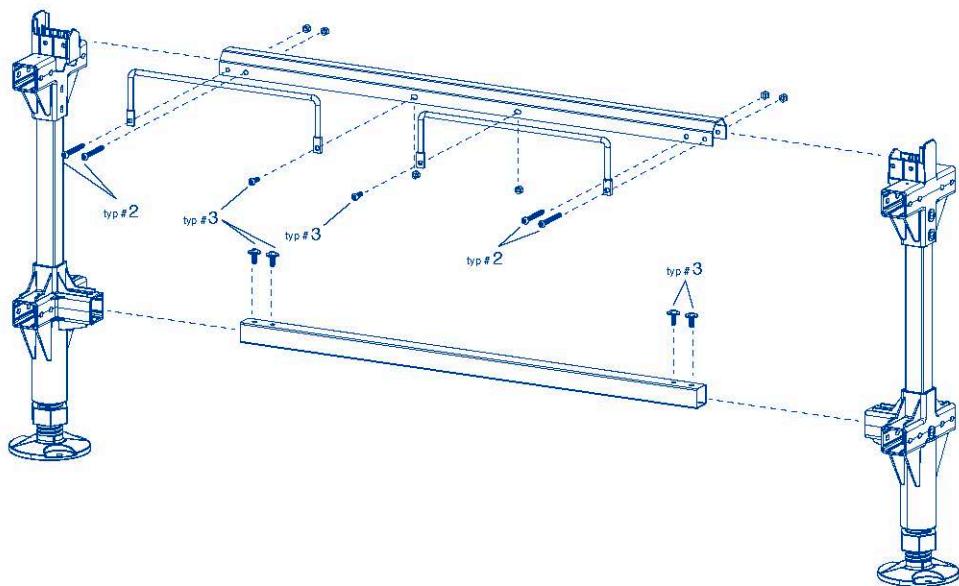**Kit A - Step 1**

**Part Qty**

# 3 X8  
# 4 X8




**Part Qty**

# 15 X4



**Part Qty**

X1

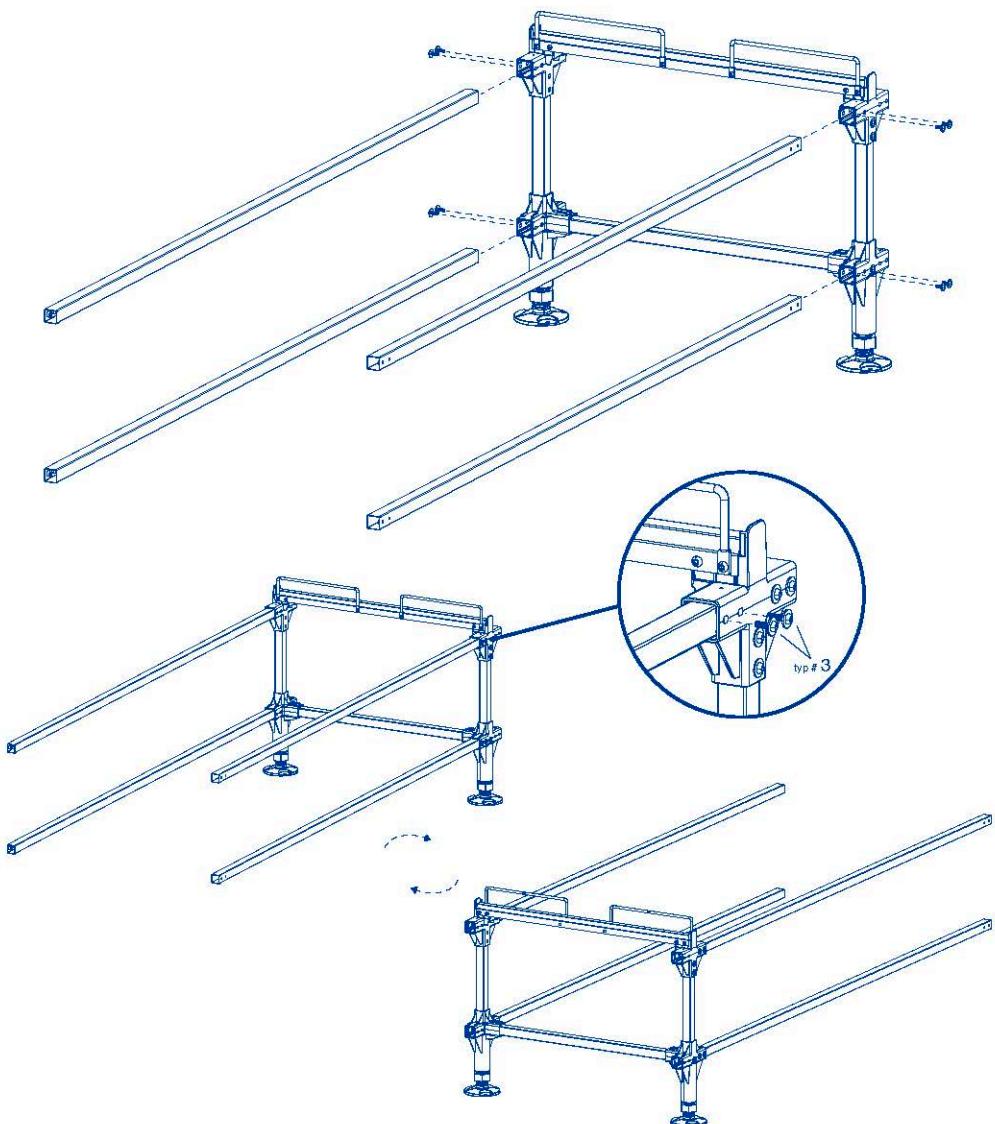

## Kit A - Step 2

**Part Qty**

#3 X8




**Part Qty**

#4 X8



**Part Qty**

X1

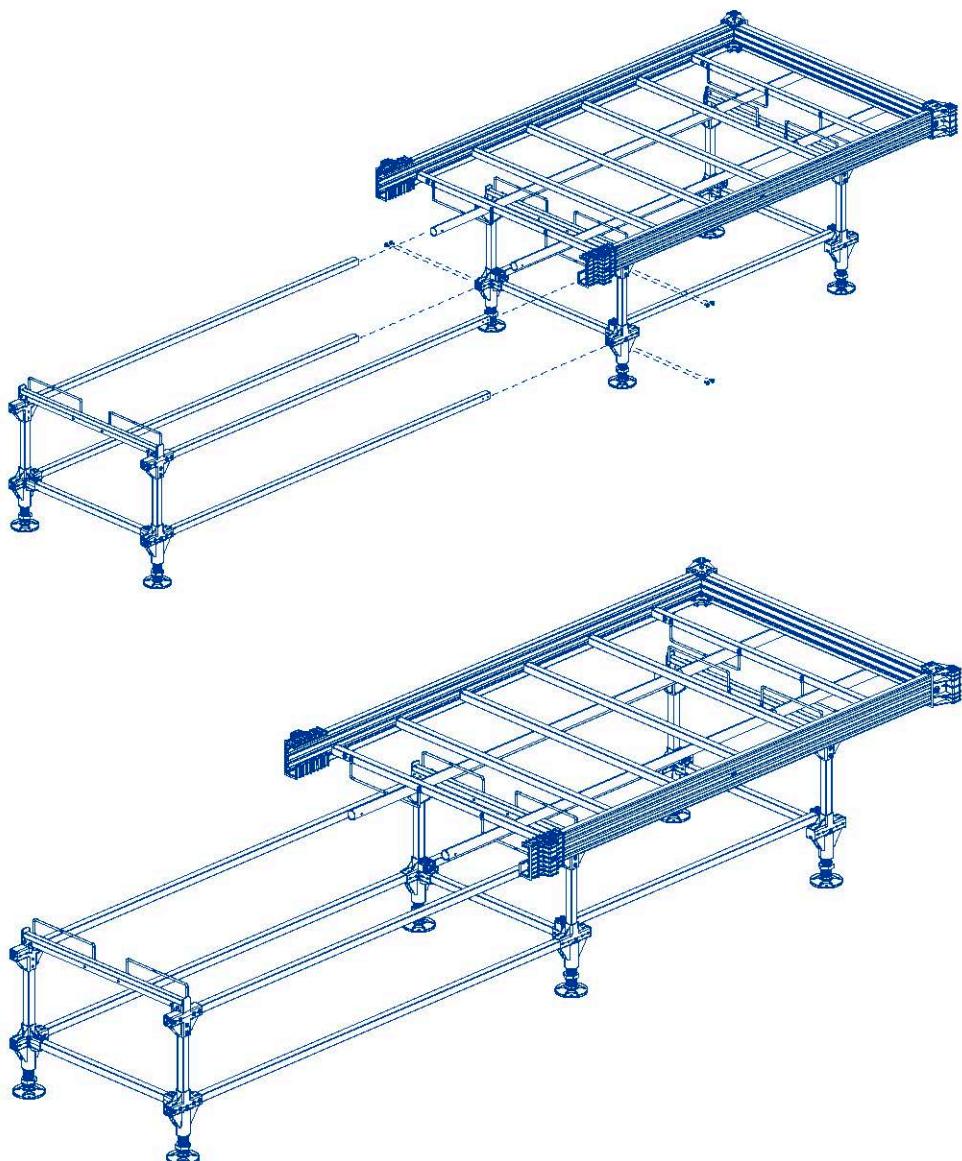

### Kit A - Step 3


**Part Qty**



**Part Qty**



**Part Qty**

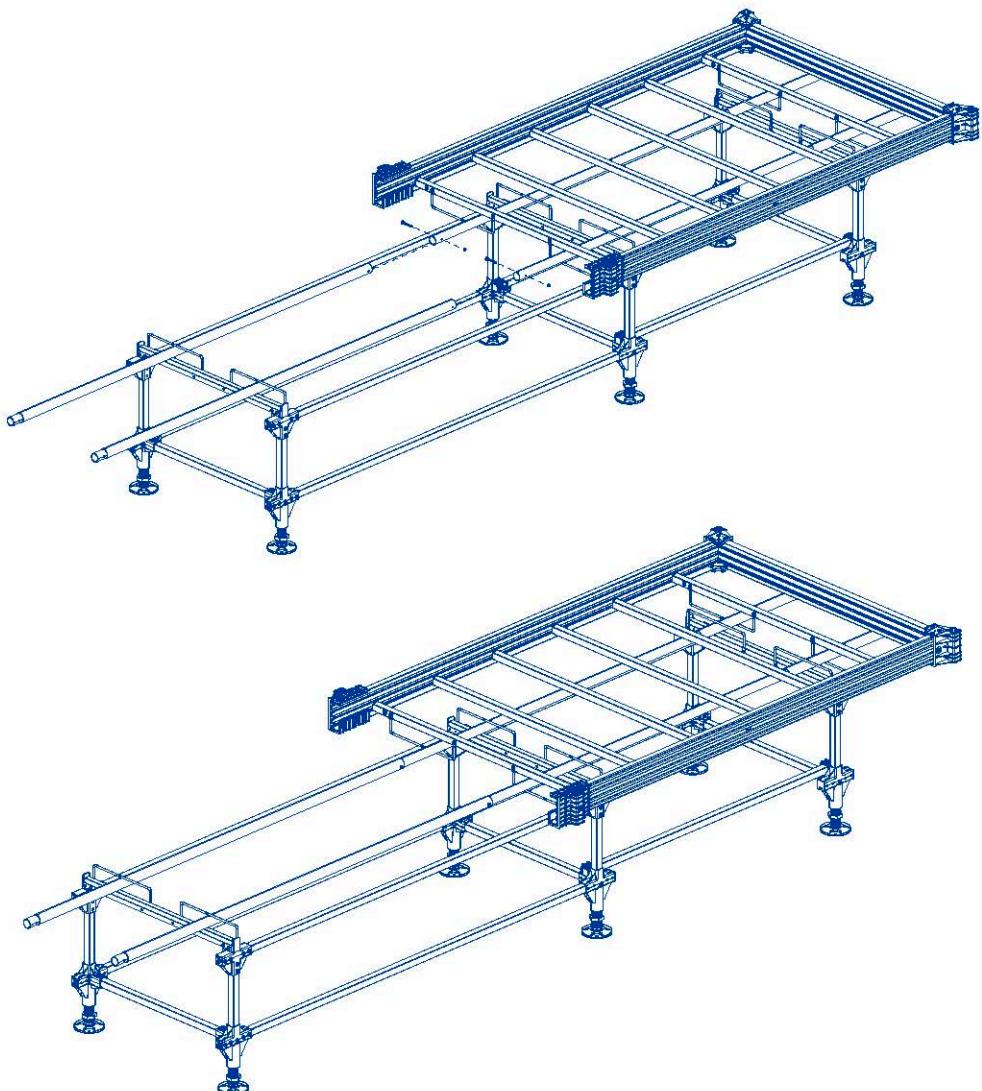

## Kit A - Step 4

**Part Qty**

# 3 X12



# 4 X12

**Part Qty**

# 11 X1





# 12 X5

**Part Qty**

#A-R X1



#A-L X1

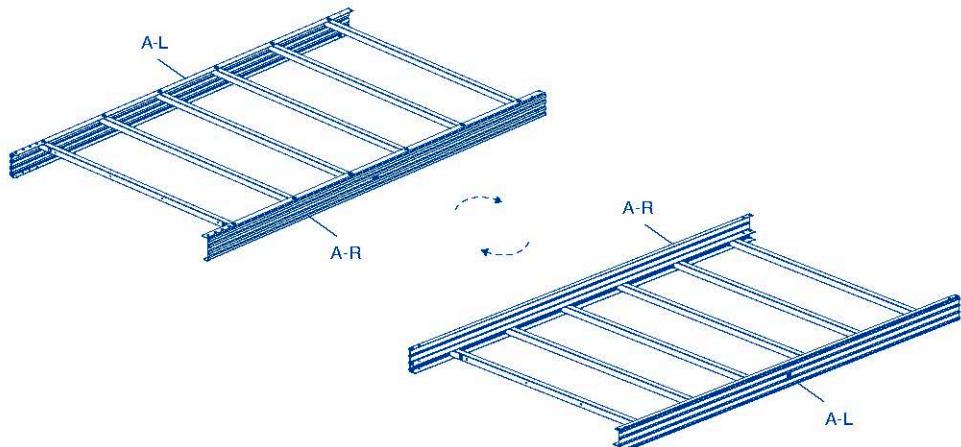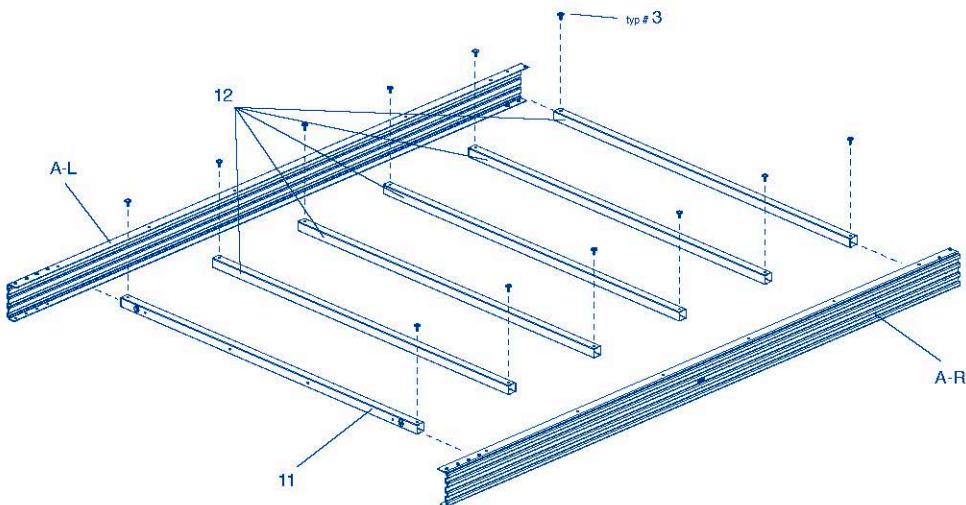

## Kit A - Step 5

**Part Qty**

# 3 X8



# 4 X8



**Part Qty**

# 18 X4





**Part Qty**

X1



\* For more informations, go to the **Kit A - Details** page.

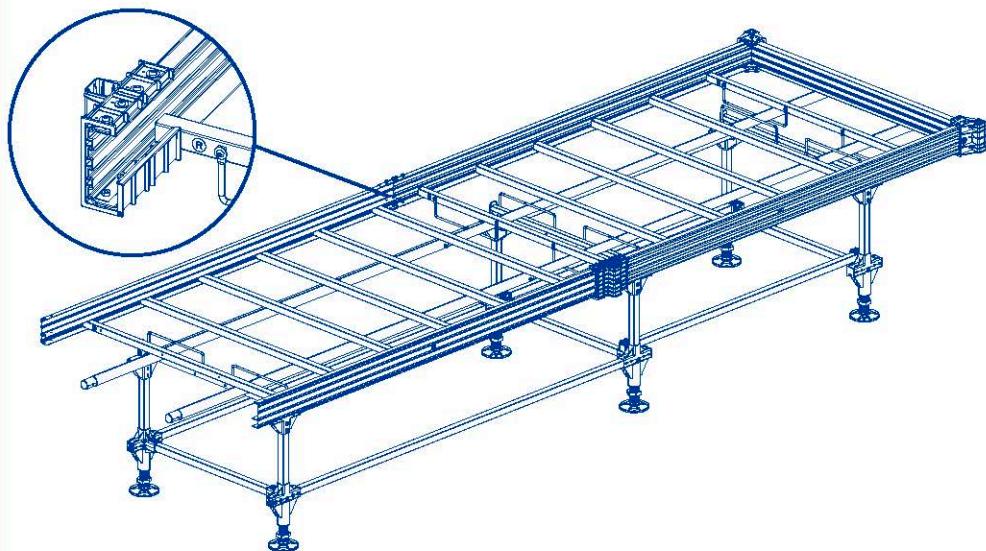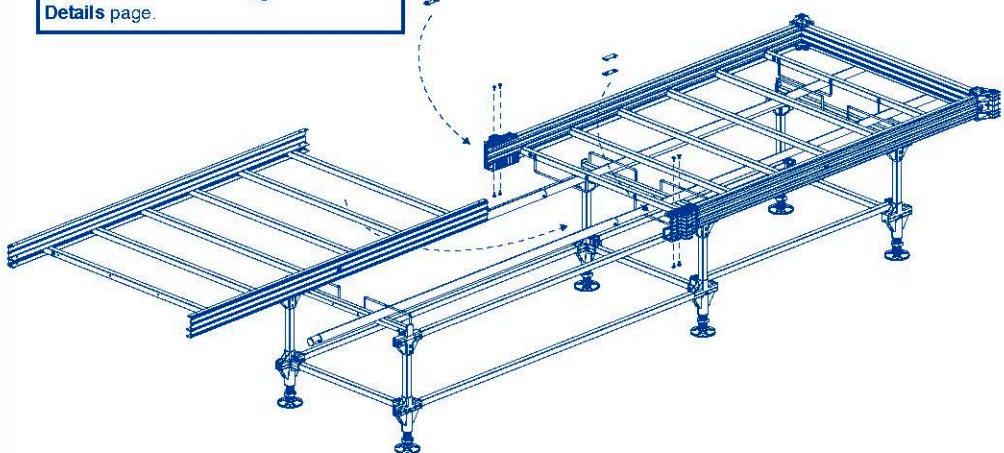

## Kit A - Step 6



**Part Qty**

# 3 X4



**Part Qty**

# C-1 X2

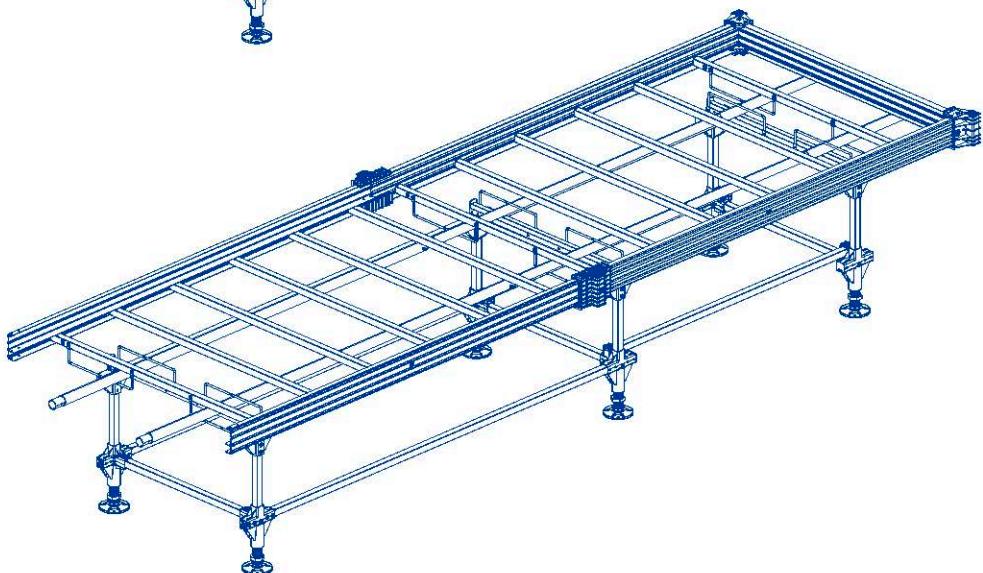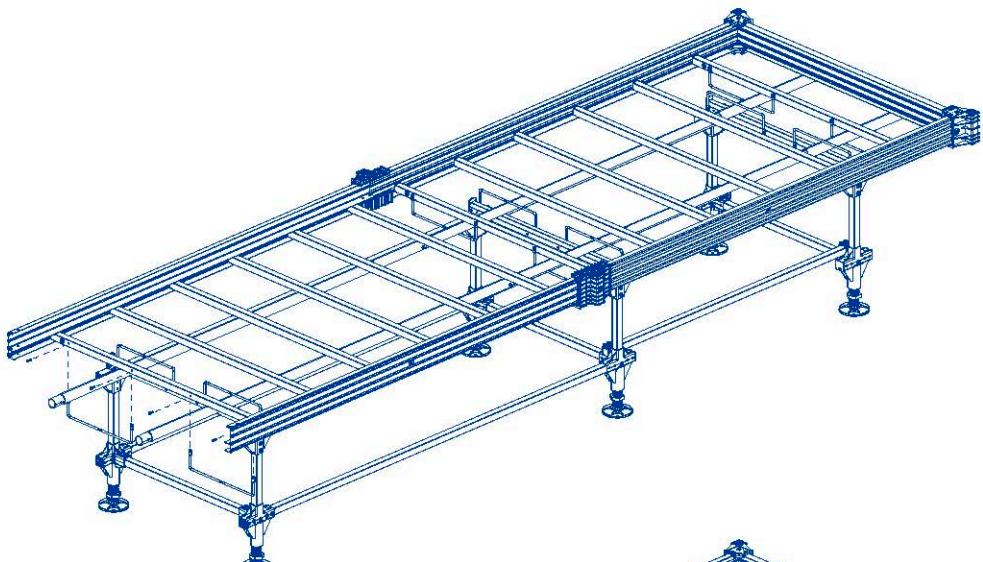

## Kit A - Step 7

**Part Qty**

# 3 X8  
# 4 X8



**Part Qty**

# 17 X4  
# A2 X2




**Part Qty**


X1




\* For more informations, go to the **Kit A - Details** page.

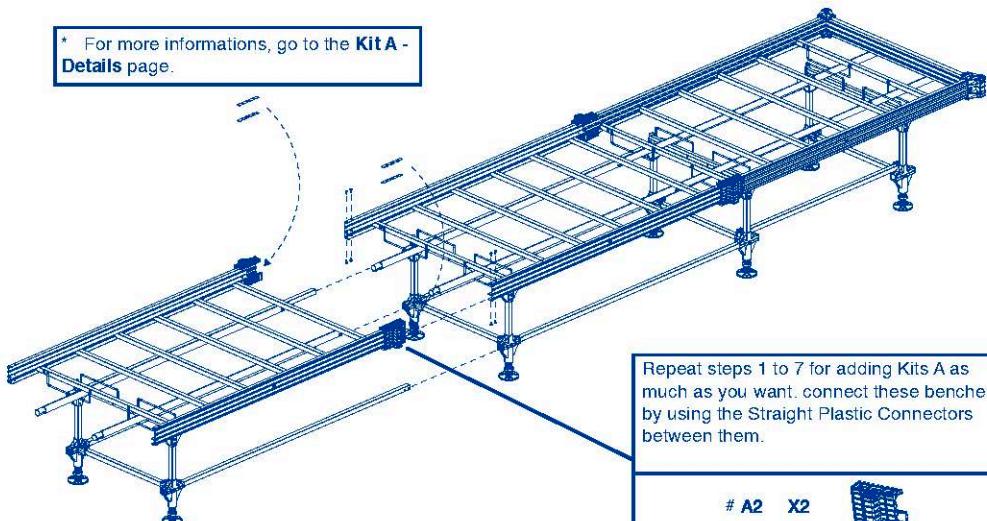

# A2 X2

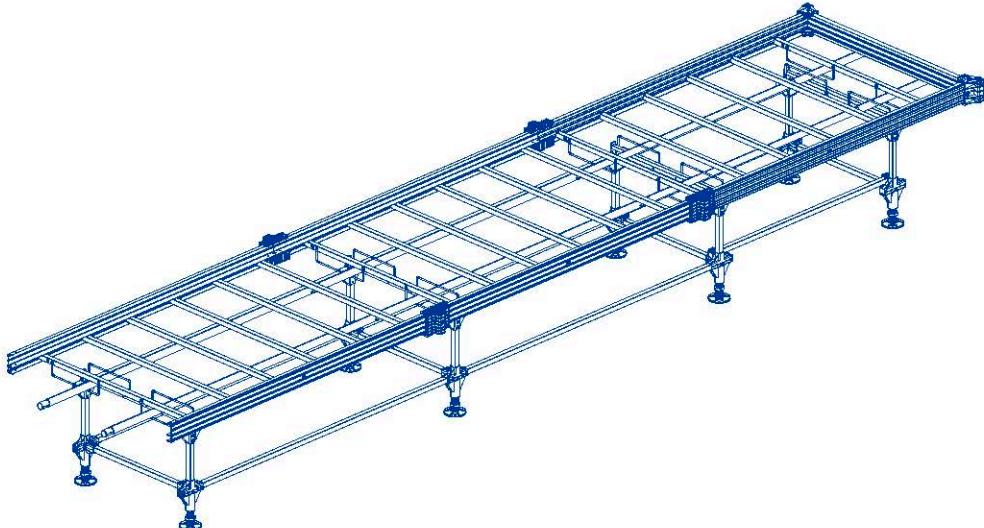

## Kit A - Step 8


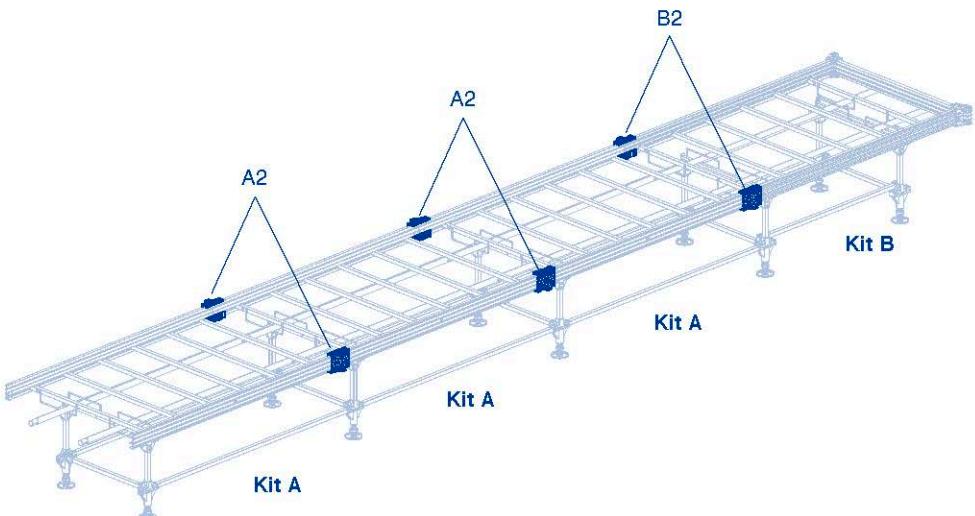


#### Kit A + Kit A

Use Straight Plastic Connectors (A2) to connect all the Kit A together.

#### Kit A + Kit B

Use Straight Plastic Connectors (B2) to connect a Kit A and a Kit B together.

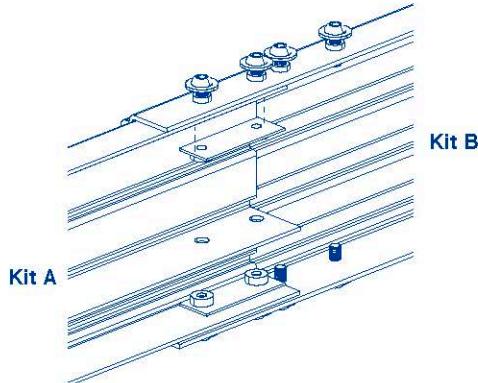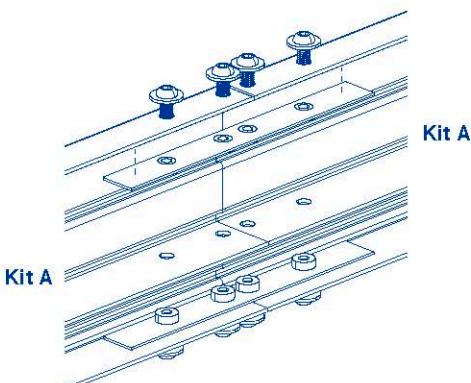

#### Kit A + Kit A

Use Straight Metal Connectors (#17) to connect all the Kit A together.

# 17 X4



#### Kit A + Kit B

Use Straight Metal Connectors (#18) to connect a Kit A and a Kit B together.

# 18 X4



## Kit A - Details

**Part Qty**

# 3 X4



# 4 X4



**Part Qty**

# 13 X4




# A-A X1



**Part Qty**

# A1 X2

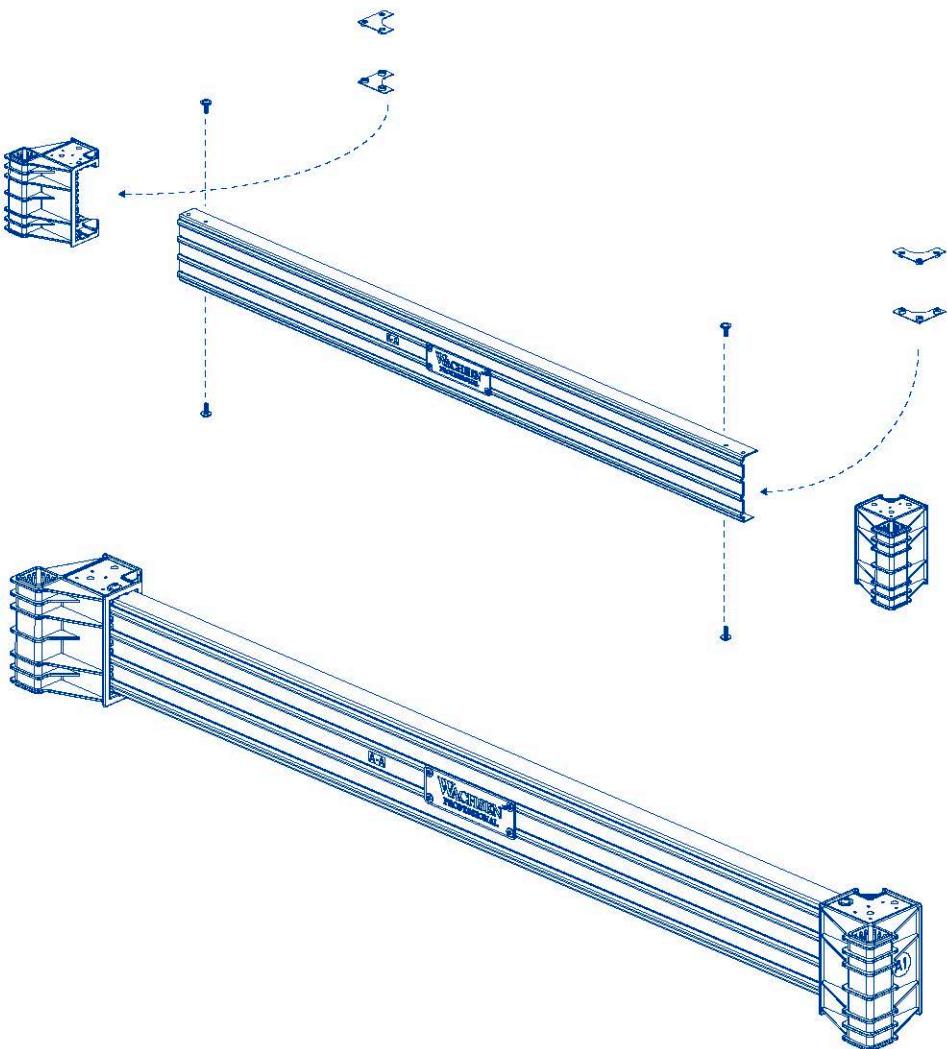

## Kit A - Step 9

**Part Qty**

# 3 X8




**Part Qty**

# 4 X8



**Part Qty**

X1

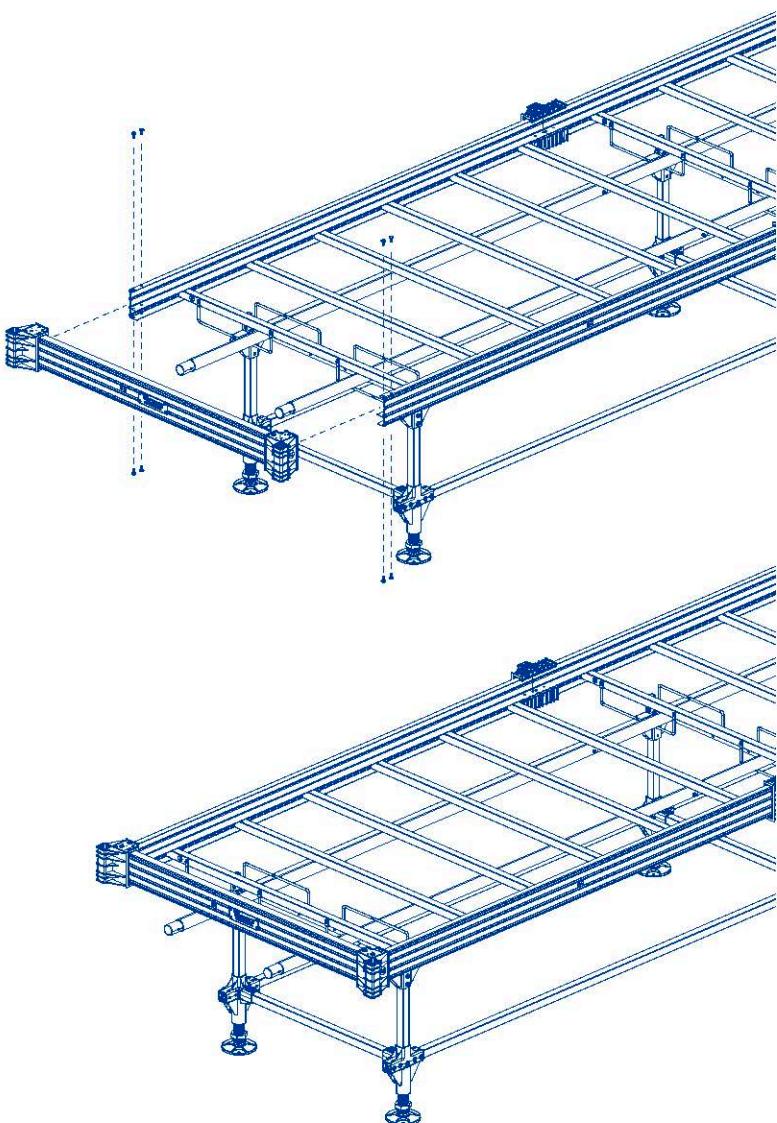


## Kit A - Step 10


**Part Qty**



**Part Qty**




**Part Qty**

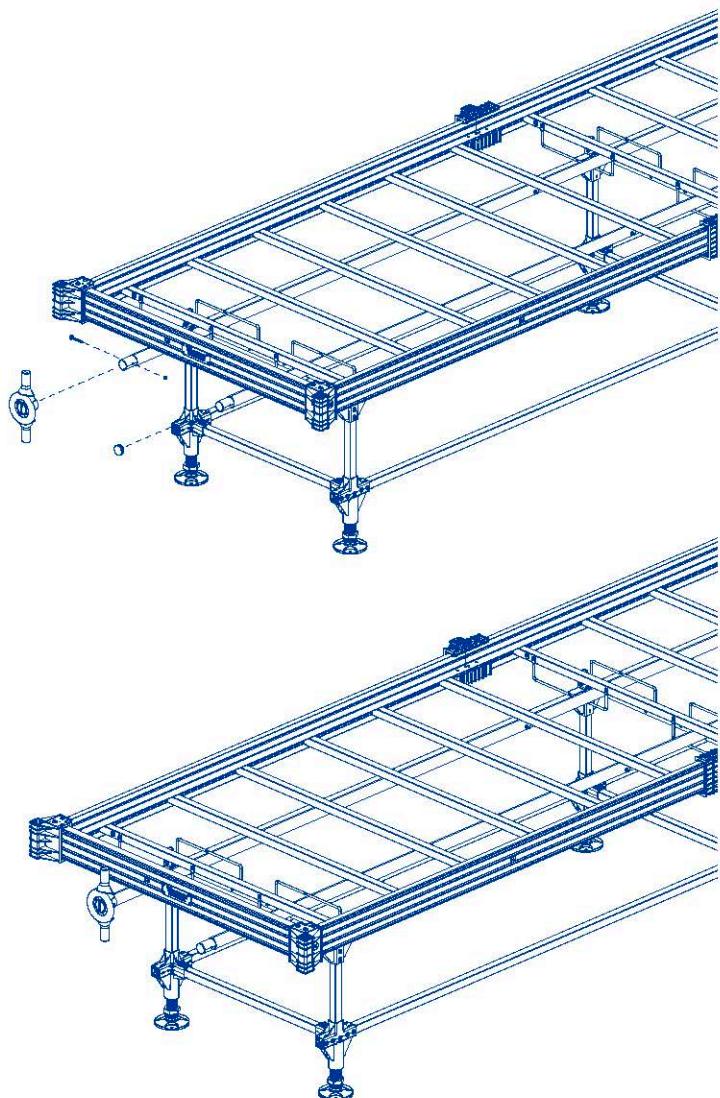


## Kit A - Step 11

**Part Qty**


# 20 X4

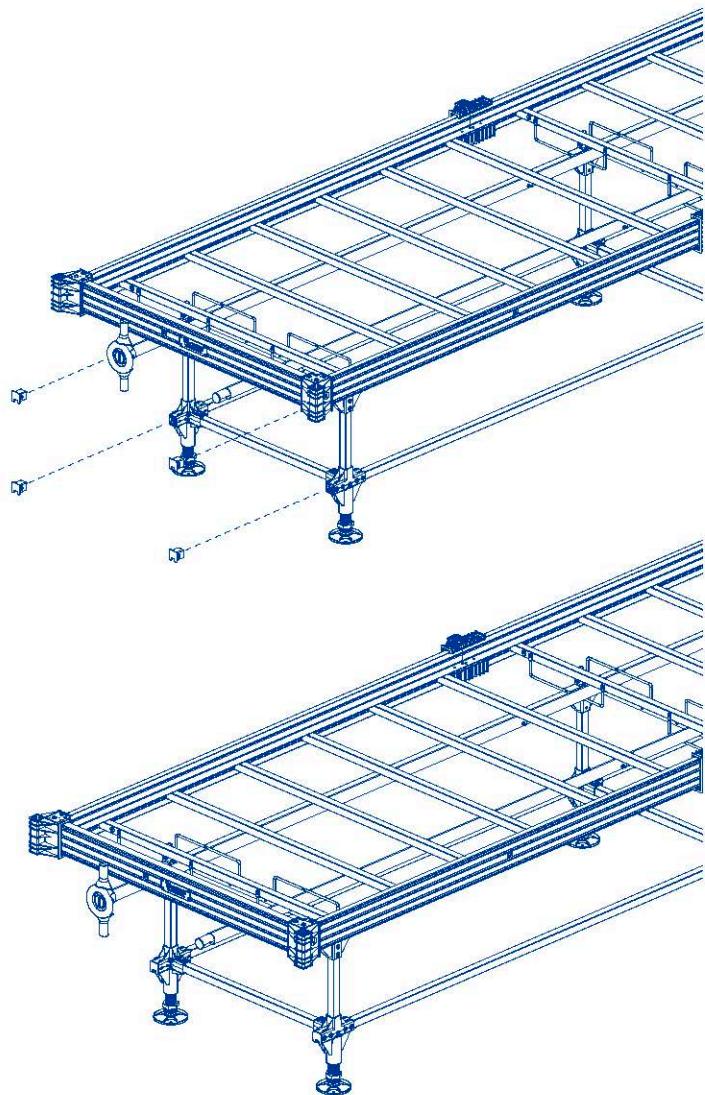


### Kit A - Step 12

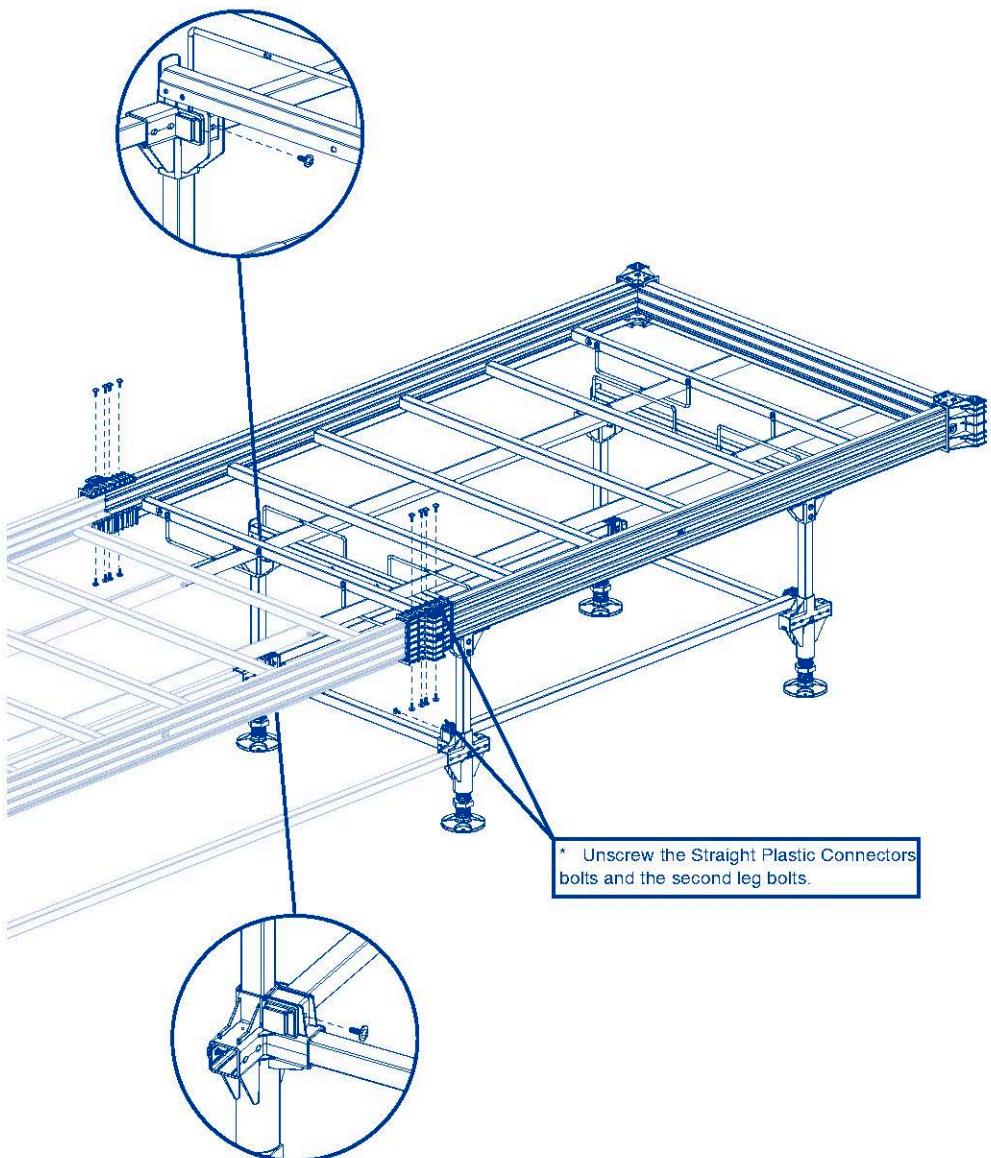


## Kit B - Adjustment

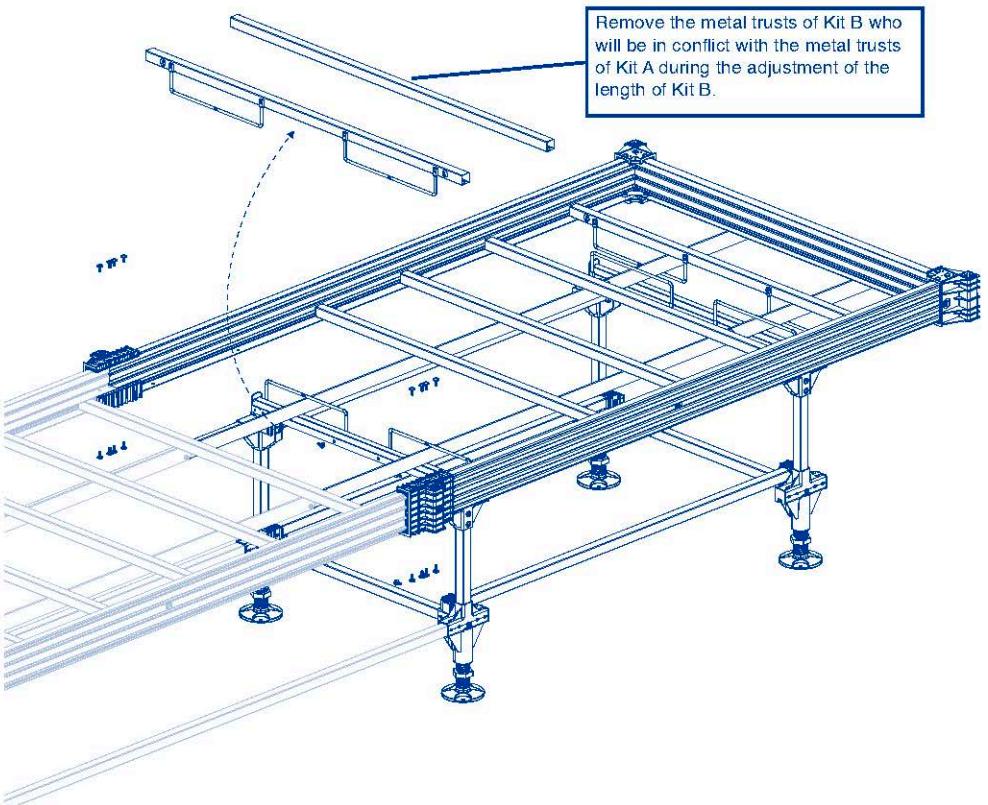

## Kit B - Adjustment

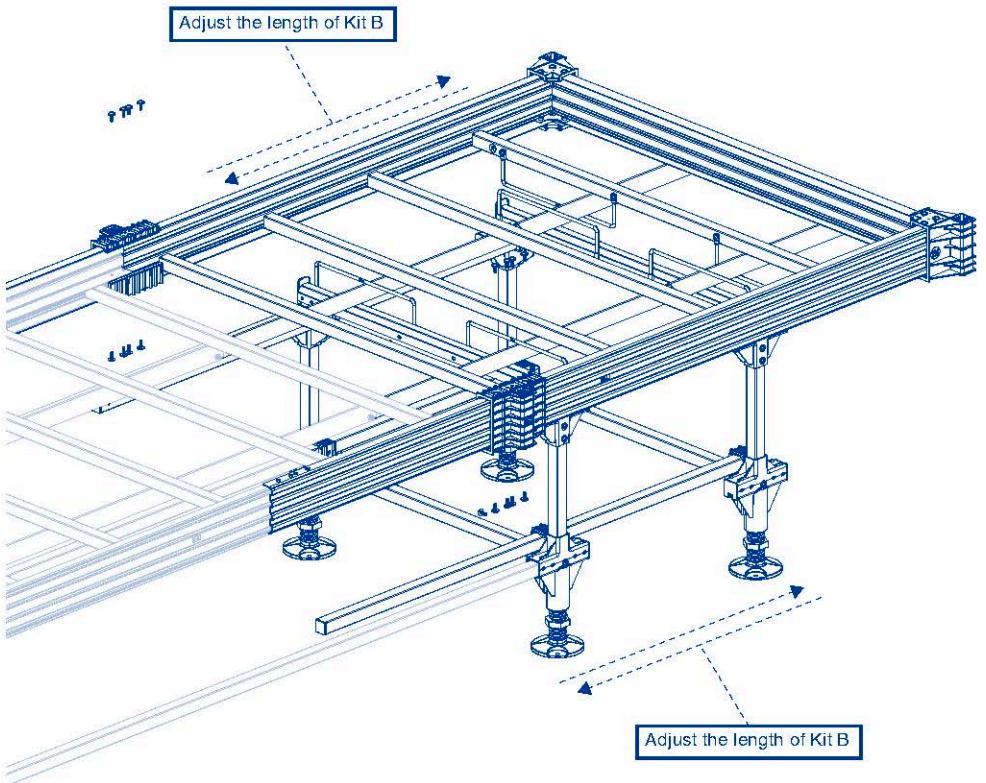


## Kit B - Adjustment

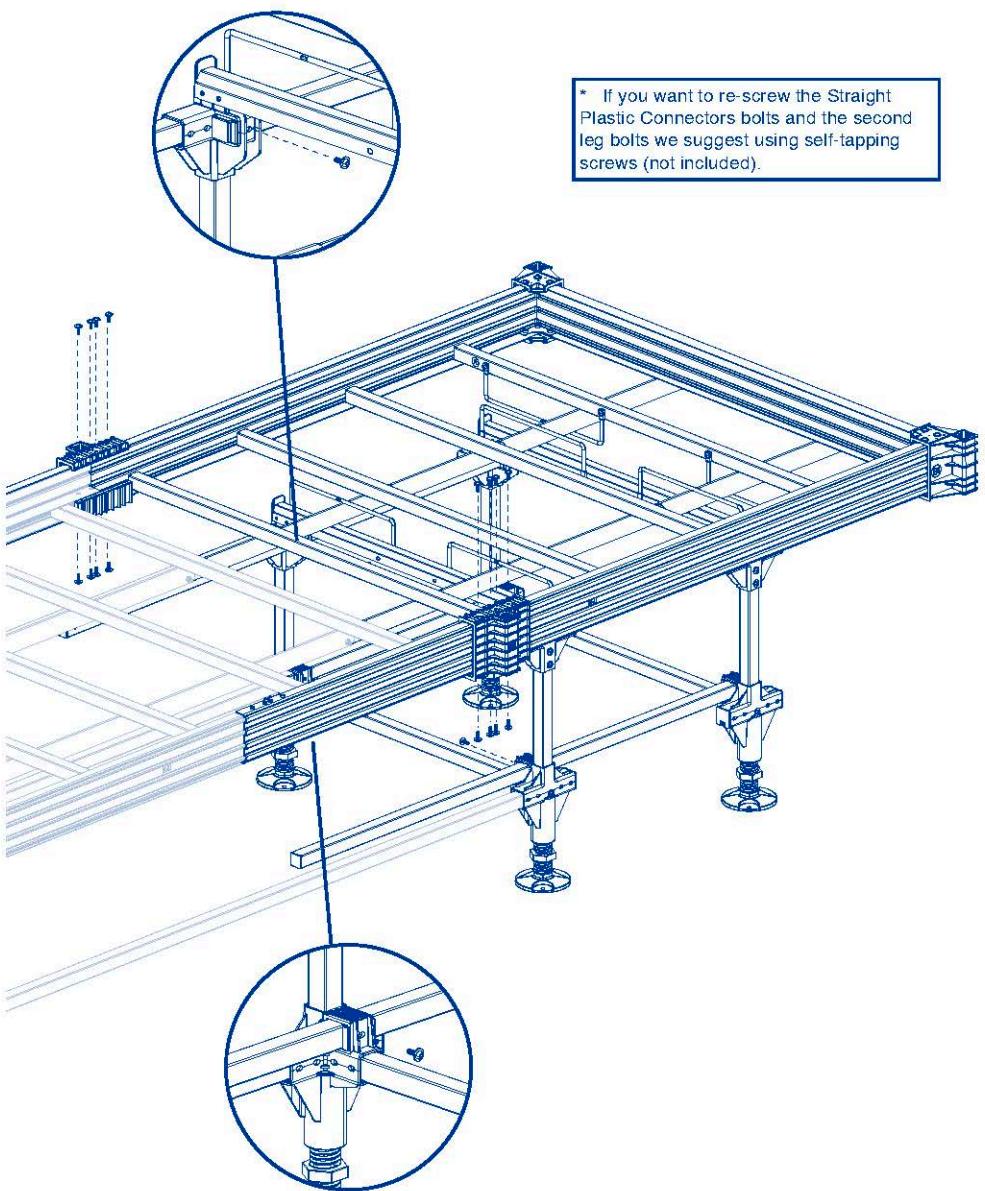


## Kit B - Adjustment


**Kit A**

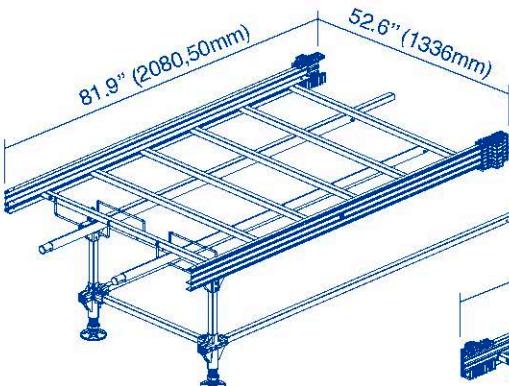


**Kit B**

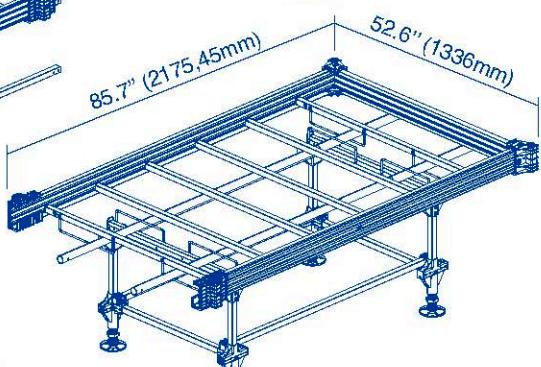


**Kit A + Kit B  
Minimum length**

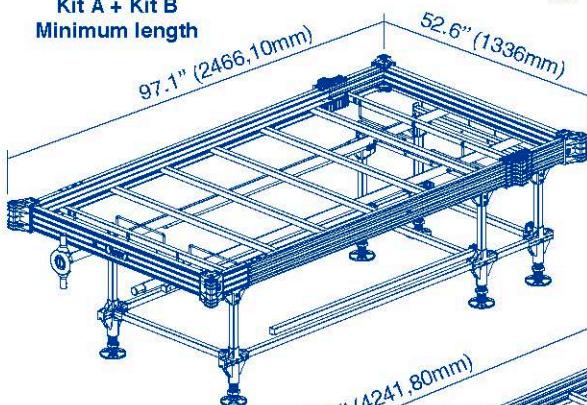

**Kit A + Kit B  
Maximum length**

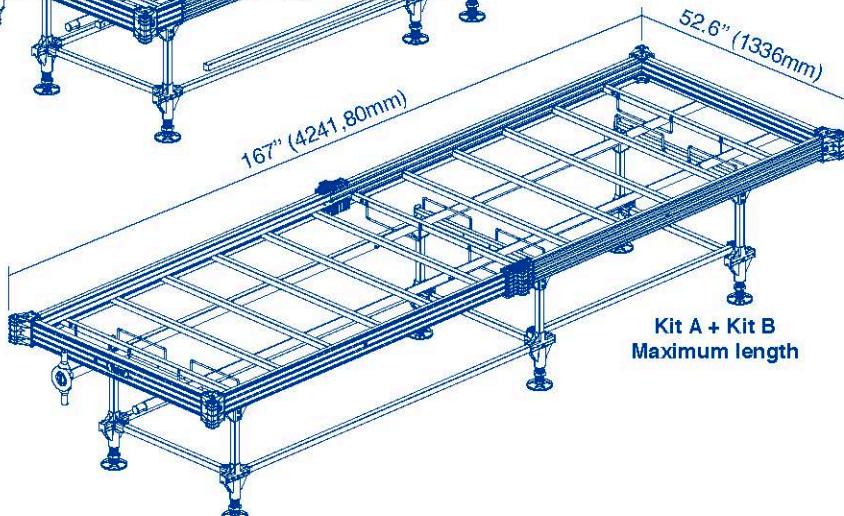

**Kit A - 4'**

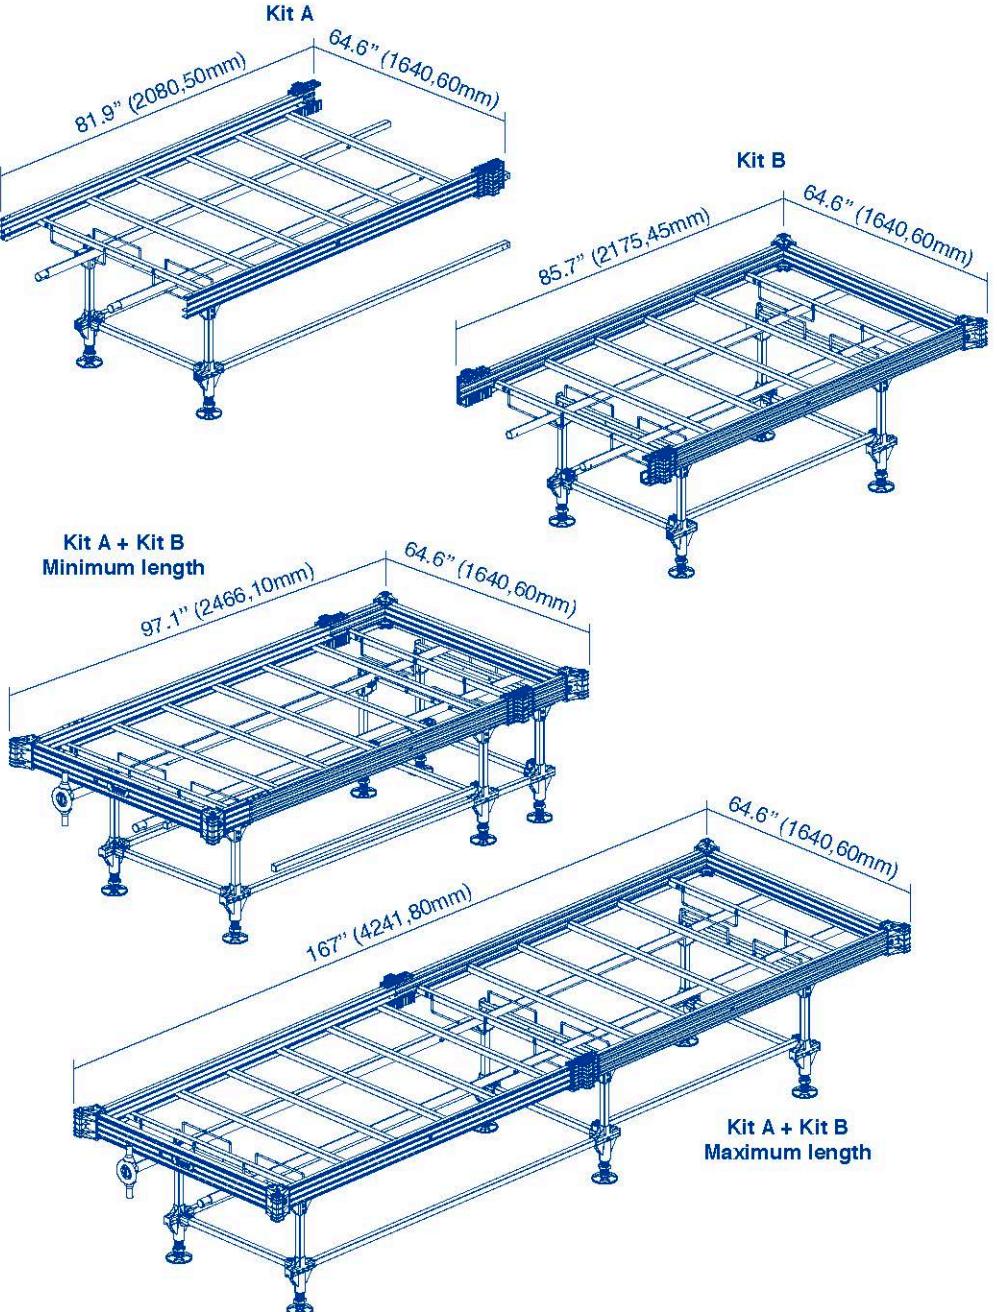

## Kit A - 5'

## Parts from Kit B

The remaining parts need to be used to close the table when the length is determined.

Part	Qty	Description		Part	Qty	Description	
# 1	X1	Mounting Nut (M6)		# 19	X1	Turnable Handle	
# 2	X1	Mounting Bolt (M6*55L)		# A1	X2	Right Angle Plastic Connector	
# 3	X12	Mounting Bolt (M6*18L)		# A-A	X1	Aluminum Side	
# 4	X13	Mounting Washer		# 20	X4	Plastic Cap (41*41)	
# 13	X4	Right Angle Metal Connector		# 23	X1	Round Plastic Cap (D=38)	
# 18	X4	Straight Metal Connector					