

## **Accessory Mounting Plate Installation Instructions**

#### Package contents:

x aluminium accessory plate
x stainless steel brace
x 5mm stainless steel Philips head bolt

# **Recommended tools:**

¼" Rachet socket set with extension bar Philips screw driver

### Installation:

The accessory plate is mounted above the fuse box.

**Step 1.** Loosen the bolt at the base of the fuse box (located behind the fuse box). Recommend using the rachet with extension bar.

**Step 2.** Insert the slotted end of the stainless-steel brace under the loosened bolt head and rotate brace 180 degrees.

**Step 3.** Loosen the bolt holding the windscreen washer bottle. Slide in the slotted aluminium plate.

**Step 4.** Align the stainless-steel brace riv-nut with the accessory plate hole and add the Philips head bolt.

Step 5. Tighten all bolts!

**Congratulations!** You can now mount all your accessories. Aluminium is easy to drill, tap and cut.

We would love to see your set-up, post a pic of your install with us on our socials!

4wdbrackets.com4WD Brackets Australia

PO Box 3835 LOGANHOLME QLD 4129

Email: support@4wdbrackets.com

O 4wdbracketsaus






**Accessory Plate Top View** 



**Correct Brace Orientation** 

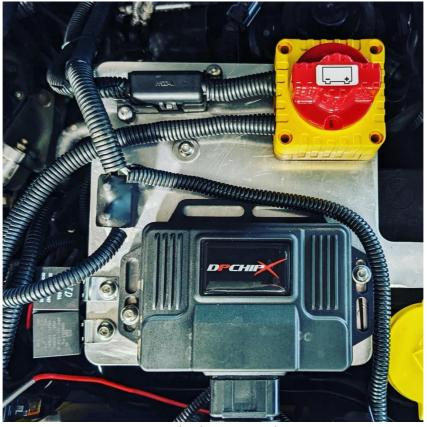

#### **Finished Mounting!**

4wdbrackets.com

4WD Brackets Australia

O 4wdbracketsaus

PO Box 3835 LOGANHOLME QLD 4129

Email: support@4wdbrackets.com