




Media Wall Suite

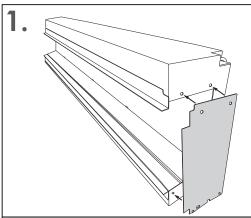


Following the instructions provided with the metal side panels, attach the metal side panels to the fire.

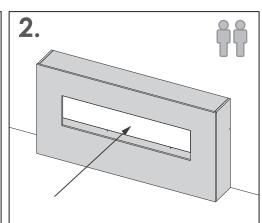


Before the fire is fitted, push the product against the wall in the desired position.

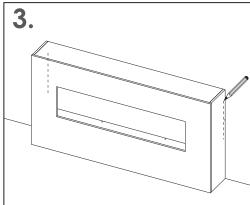


Lean through the cut out for the fire and mark the inside of both sides on the wall using a pencil. These lines show where the battens are to be fitted.

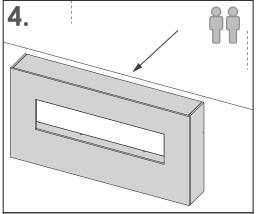


Move the product off the wall and place on the floor, ensuring there is enough room to access the back in order to fit the fire.

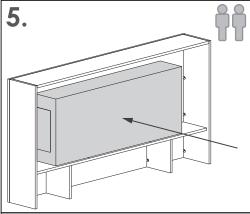


Insert the fire into the product and push the fire into the cut out .

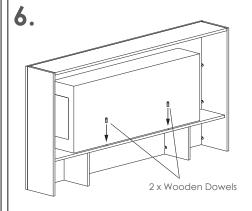


Once in position, Insert 2 \times dowels into the shelf to secure the fire.

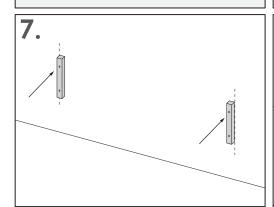

Using the appropriate fixings, securely fit 2 x timber battens to the INSIDE of the lines marked on the wall.

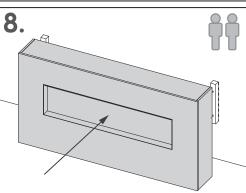

With help, carefully move the product back against the wall using the 2 x timber battens to guide it back into the chosen position.

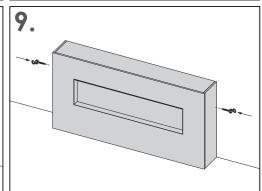

Keep the product pressed firmly against the wall. Then, using the $2\,\mathrm{x}$ large screws provided, screw caps and $2\,\mathrm{x}$ the pre-drilled holes, drill into the timber battens fixed to the wall to secure the product.