


POCKET FRAME KIT

For Sliding Panels up to 200 lbs.

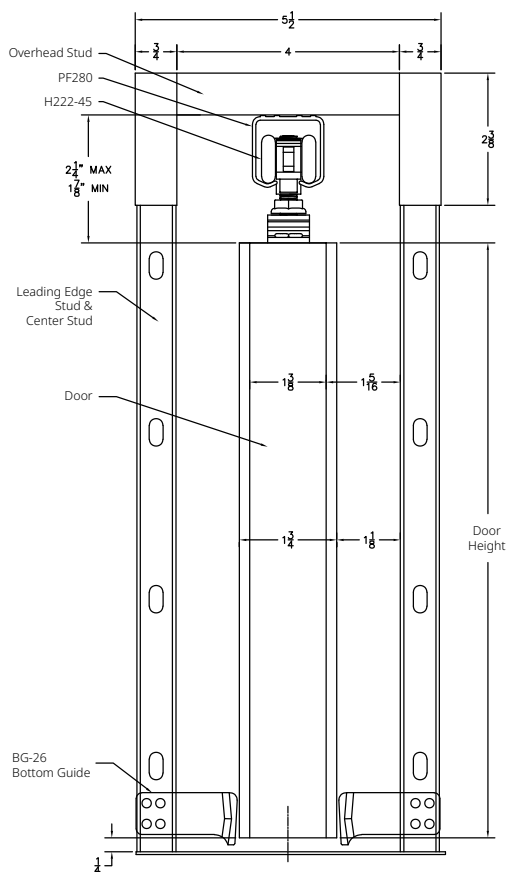

NOTE: 3/4" plywood can be installed to the studs in the pocket to add strength and rigidity to pocket door walls.

Rough Frame Opening Dimensions:
2 x Door Width + 1" and Door Height + 5"

Features:

- Heavy duty hardware supports doors up to 200 lbs. each
- Standard kit is for 1^{3/8}" door. For 1^{3/4}" door, MUST use PF134KIT (see Options below)
- For standard 3^{1/2}" studs only. Not for use with 2x6 or SP6 kits
- Chrome plated steel hangers are corrosion resistant and no maintenance is required
- 5 year warranty
- Meets ADA push force requirements

Pocket Frame Kit Includes:

- 1 ea Header Track Assembly
- 4 ea **PFAS**_ Aluminum Cased Wood Studs
- 2 ea **PFHB-1** and **PFHB-2** Pre-Mounted Header Brackets
- 2 ea **H222R1** Hangers
- 2 ea **PFFC-8** Floor Cleats
- 1 ea **PFBS** Pocket Frame Bumper Stop
- 1 ea **Bottom Guide**
- PFBG-8** Pocket Frame Bottom Guide for 1 3/8" thick doors mounting hardware
- BG-26** Pocket Frame Bottom Guide for 2x6 and SP6 kit

Standard Kit Sizes

2x4 Wood or Metal Stud Constructed Walls	2x6 Wood Stud Constructed Walls	2x6 Metal Stud Constructed Walls	Net Door Size (The Kits can be trimmed in field)
PF28200A6080 PF28200A7280 PF28200A9680	PF28200A6080-2x6 PF28200A7280-2x6 PF28200A9680-2x6	PF28200A6080-SP6 PF28200A7280-SP6 PF28200A9680-SP6	2'6" x 6'8" 3'0" x 6'8" 4'0" x 6'8"
PF28200A6084 PF28200A7284 PF28200A9684	PF28200A6084-2x6 PF28200A7284-2x6 PF28200A9684-2x6	PF28200A6084-SP6 PF28200A7284-SP6 PF28200A9684-SP6	2'6" x 7'0" 3'0" x 7'0" 4'0" x 7'0"
PF28200A6096 PF28200A7296 PF28200A9696	PF28200A6096-2x6 PF28200A7296-2x6 PF28200A9696-2x6	PF28200A6096-SP6 PF28200A7296-SP6 PF28200A9696-SP6	2'6" x 8'0" 3'0" x 8'0" 4'0" x 8'0"

Options:

- PF134 KIT** - Recommended for use with 1 3/4" thick doors in 2x4 constructed wall kits (3 1/2" stud). Not for use with 2x6 or SP6 stud kits.
 - PFAS84** - For doors over 3' wide an extra pair of 84" center studs with floor cleat for 80" tall doors recommended
 - PFAS88** - For doors over 3' wide an extra pair of 88" center studs with floor cleat for 84" tall doors recommended
 - PFAS100** - For doors over 3' wide an extra pair of 100" center studs with floor cleat for 96" tall doors recommended
 - PFCDKIT** - Conversion Kit to achieve a bipart double door frame
 - PFFKIT-4** - Replacement Hardware Kit for Pemko Pocket Frame Kit for 1 3/4" thick doors (Each contains 2-H222-45 Hangers, 1-PFBS Bumper Stop, 1- PFBG-4 Guide, 2 PFHS Header Shims, 2-PFFC-4 Floor Cleats)
 - PFFKIT-8** - Replacement Hardware Kit for Pemko Pocket Frame Kit for 1 3/8" thick doors (Each contains 2-H222-45 Hangers, 1-PFBS Bumper Stop, 1- PFBG-8 Guide, 2-PFFC-8 Floor Cleats)
- Soft Close available. See pages 275-277 for more information.

PEMKO
ASSA ABLOY

Experience a safer
and more open world

800-824-3018 | www.pemko.com

Check the web site for the up-to-date catalog

Copyright © 2015-2023, ASSA ABLOY Accessories and Door Controls Group, Inc., an ASSA ABLOY Group company. All rights reserved. Reproduction in whole or in part without the express written permission of ASSA ABLOY Accessories and Door Controls Group, Inc. is prohibited.