


ASSEMBLY INSTRUCTIONS


36 INCH BATH VANITY-CABINET


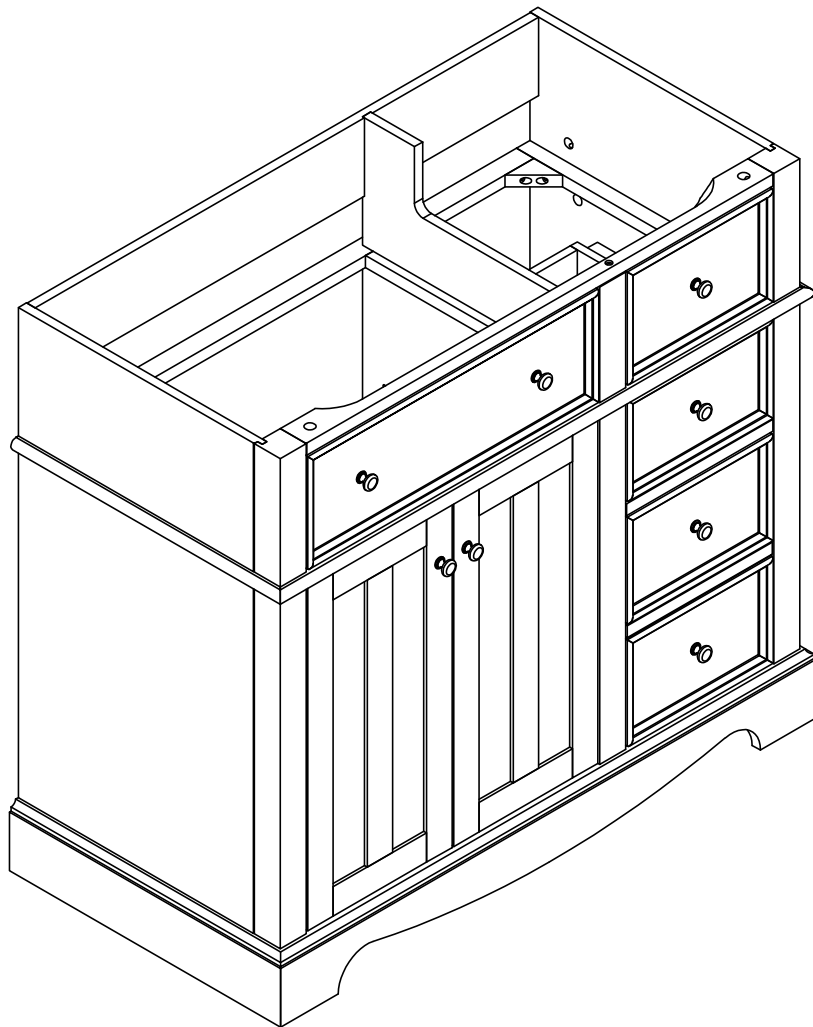


Thank you for purchasing this quality product. Be sure to check all packing material carefully for small parts which may have come loose inside the carton during shipment. Separate, identify and count all parts and hardware.


Compare with the parts list to be sure all parts are present.

"DO NOT TIGHTEN SCREWS UNTIL COMPLETELY ASSEMBLED"


- 
- * Use of power tool to assemble this product will invalidate any claim and damage this product making unsafe !!!
 - * Please assemble on a clean soft surface to avoid damage.

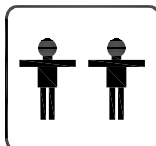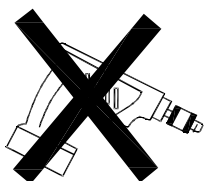


+

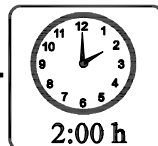

Tools Required



(Not included)



(Not included)

IMPORTANT:

PLEASE READ INSTRUCTION BEFORE STARTING THE ASSEMBLY

PLEASE DO NOT RETURN TO STORE



**Please do not return this product to the retailer!!
We are able to assist you in ANY way**

If you find that you have any trouble with assembly or missing or damaged parts please contact the seller.







Before Installation

Important – Please read these instructions fully before starting assembly


Thank you for purchasing this quality product. Be sure to check all packing materials carefully for small parts, which may have come loose inside the carton during shipment. Identify and count all items according to the PARTS LIST and/or HARDWARE LIST shown below. Check you have all the components and tools listed on the following pages.

- We recommend that you assemble this product with the assistance of another person; this will make the assembly easier, and will help eliminate damage to the product or injury to persons during assembly.
- Please do not over tighten screws or bolts until the assembly is completed.
- Keep children and animal away from the work area, small parts could choke if swallowed.
- Please put all parts on a non-abrasive floor before assembly, and follow the assembly steps to assemble your newly purchased product correctly and efficiently.

Cam Lock Assembly Instructions











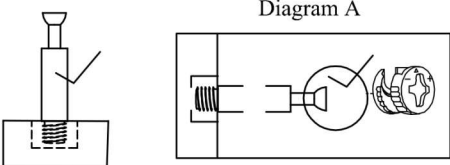
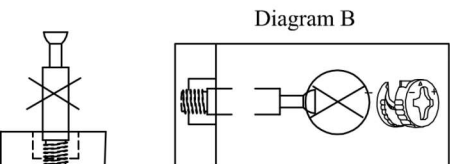
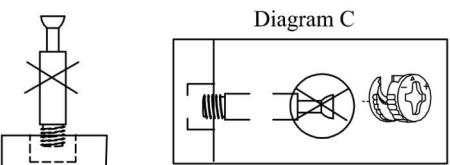

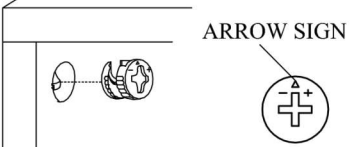
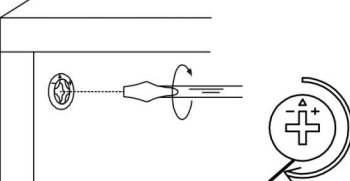
	<p>Diagram A</p> <p>Insert Cam Bolt into hole as shown in diagram A.</p>
	<p>Diagram B</p> <p>Make sure not to insert the Cam Bolt: Too deep as shown in figure B as this will cause the Cam Lock to be misaligned and unable to interlock properly.</p>
	<p>Diagram C</p> <p>Also avoid inserting the Cam Bolt too close to the surface of the hole as shown in figure C, as this will cause the Cam Lock to be too loose, and not interlock properly.</p>
	<p>Connect the panels together.</p>
	<p>Insert the Cam Lock so the side opening fits over the head of the Cam Bolt.</p>
	<p>To tighten the Cam Lock, turn it clockwise on half a turn with a flat screwdriver. <i>*Do not use an automatic screwdriver as it may bend or break if too much power is imposed.</i></p>

Detail View - CABINET











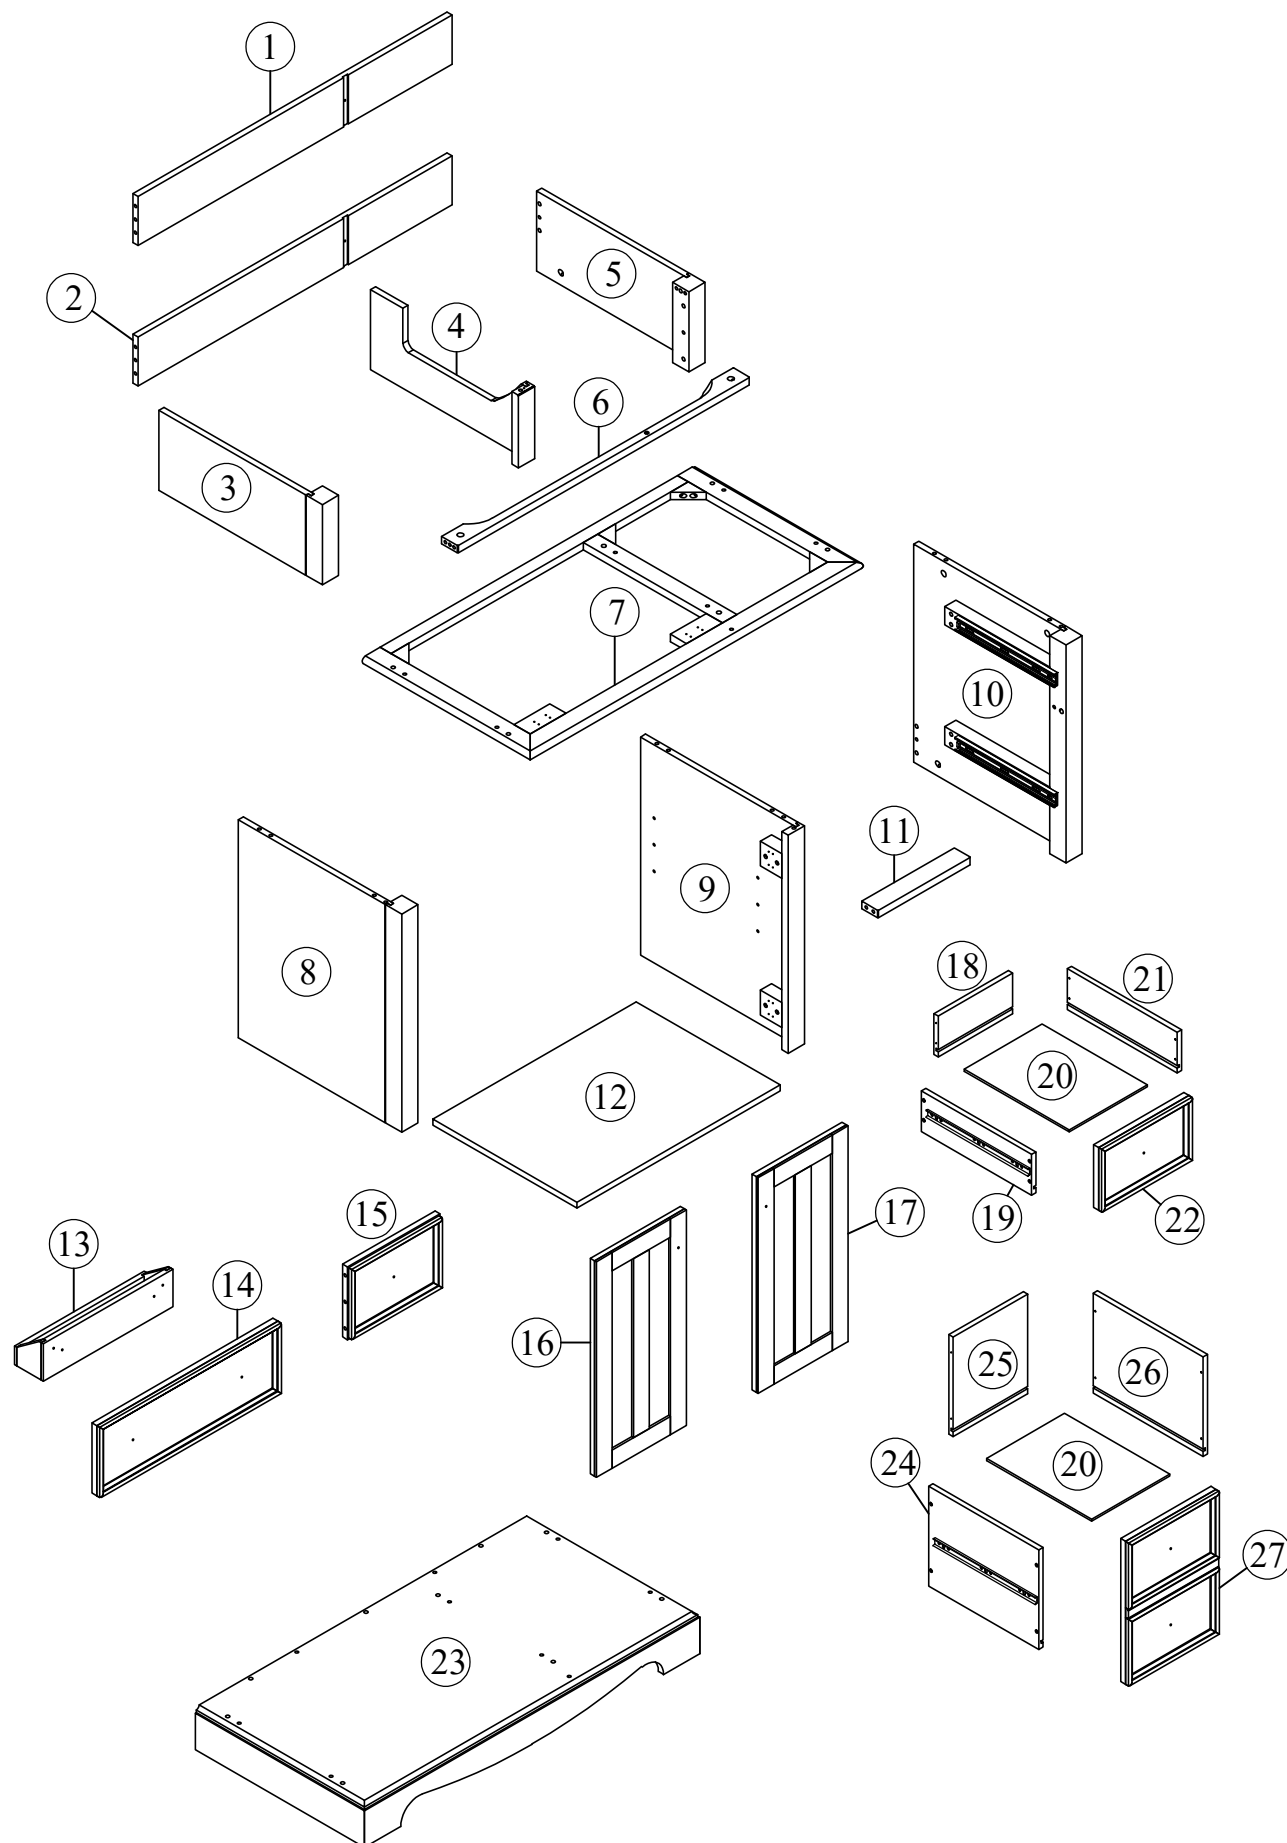


Identifying the Hardware-Identify the hardware using the illustrations below.




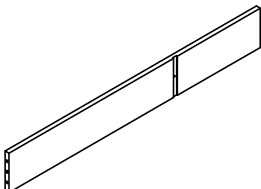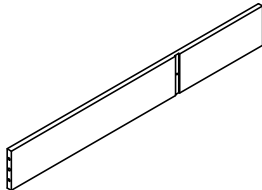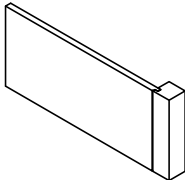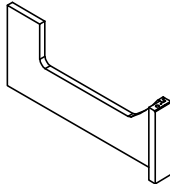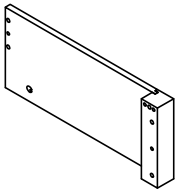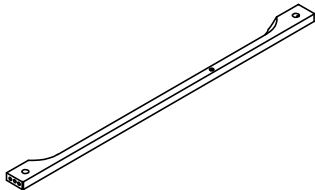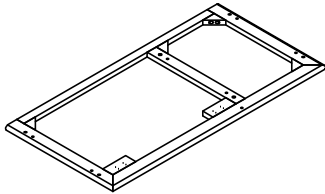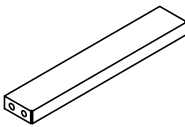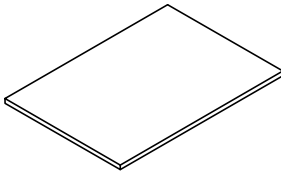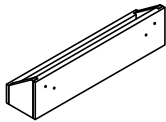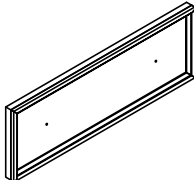










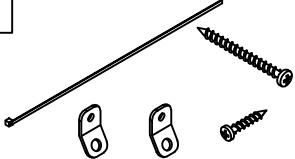
Part List

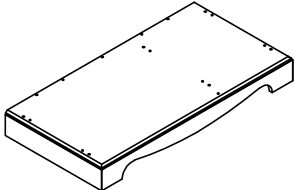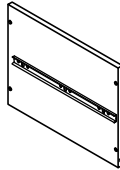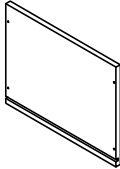1		2	
3		4	
5		6	
7		8	
9		10	
11		12	
13		14	
15		16	




Part List




17		18	
	Cabinet Door (R) - 1pc		Top Drawer Back Panel - 1pc
19		20	
	Top Drawer Side Panel (L) - 1pc		Drawer Panel Bottom - 2pcs
21		22	
	Top Drawer Side Panel (R) - 1pc		Top Drawer Face - 1pc
23		24	
	Bottom Frame - 1pc		Bottom Drawer Side Panel (L) - 1pc
25		26	
	Bottom Drawer Back Panel - 1pc		Bottom Drawer Side Panel (R) - 1pc
27			
	Bottom Drawer Face - 1pc		

Hardware List

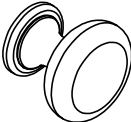


<div>A</div>  <p>ø6x35mm</p> <p>Three in one bolts (35pcs)</p>	<div>B</div>  <p>ø14.5x12mm</p> <p>Three in one lock (35pcs)</p>	<div>C</div>  <p>ø8xø4x19mm</p> <p>Round head screw (2pcs)</p>
<div>D</div>  <p>ø8xø4x25mm</p> <p>Round head screw (3pcs)</p>	<div>E</div>  <p>ø8xø4x32mm</p> <p>Round head screw (16pcs)</p>	<div>F</div>  <p>Handle (8pcs)</p>
<div>G</div>  <p>ø5/32"x20mm</p> <p>Handle screw(4pcs)</p>	<div>H</div>  <p>ø5/32"x28mm</p> <p>Handle screw(4pcs)</p>	<div>I</div>  <p>Damping hinge (6pcs)</p>
<div>J</div>  <p>ø7xø3.5x15mm</p> <p>Flat head screw(36pcs)</p>	<div>K</div>  <p>Hinge (1pc)</p>	<div>L</div>  <p>ø6xø3x12mm</p> <p>Round head screw (4pcs)</p>
<div>M</div>  <p>Laminate pad(4pcs)</p>	<div>N</div>  <p>ø8x30mm</p> <p>Wood dowel (37pcs)</p>	<div>P</div>  <p>Anti fall hardware(1set)</p>



STEP: 1

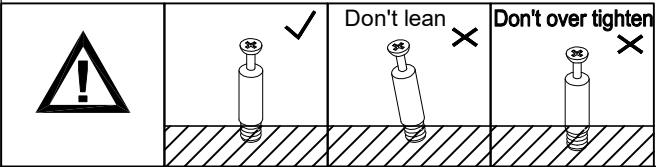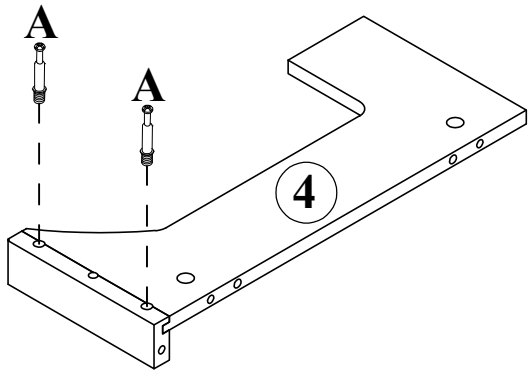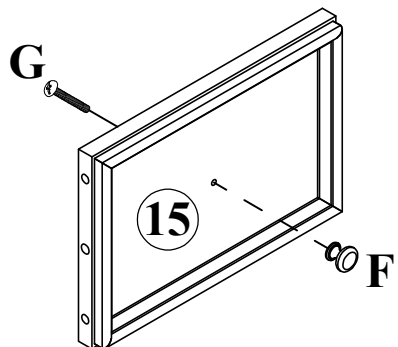A	F	G
		
2PCS	1PC	1PC




STEP: 2

B	N	D
		
2PCS	2PCS	1PC

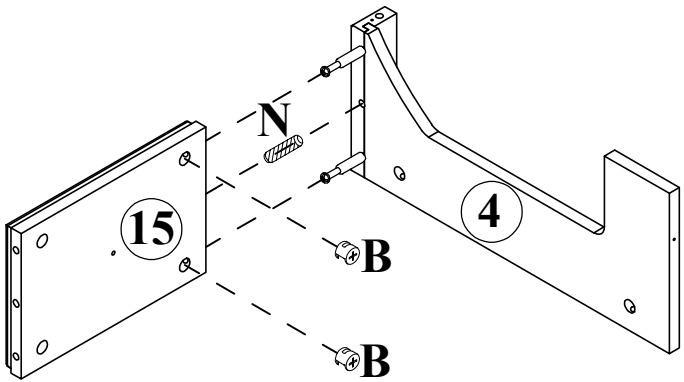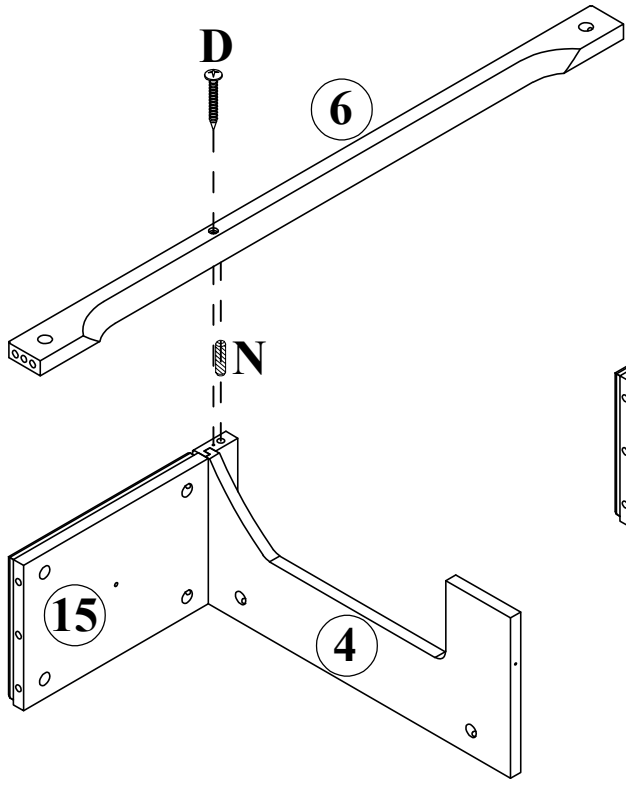


STEP: 3

A




6PCS


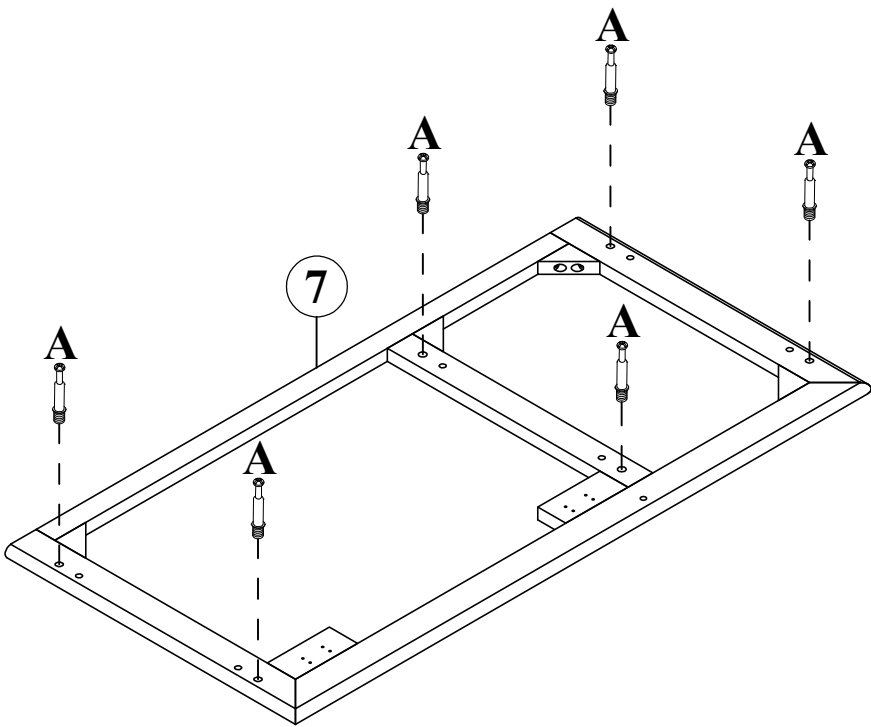


STEP: 4




A





8PCS

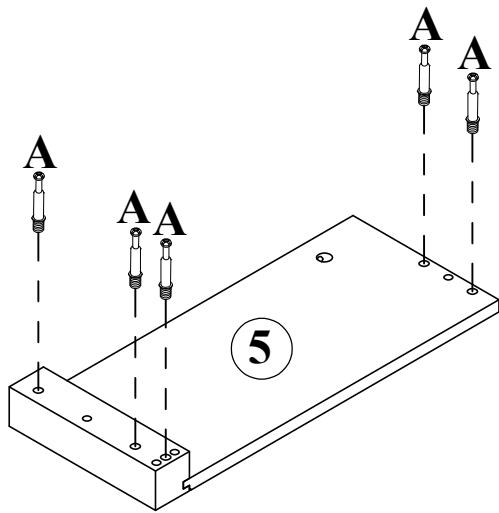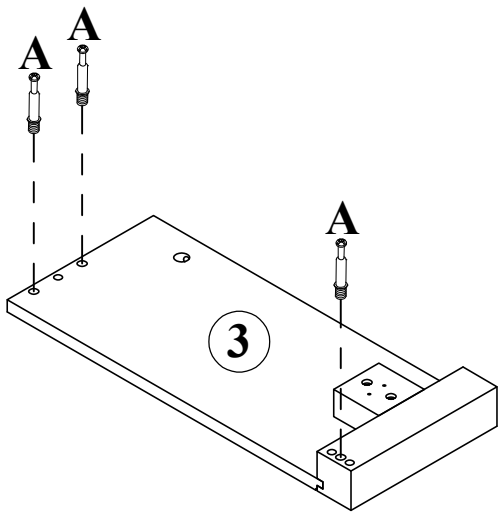




STEP: 5

B	N	D
		
6PCS	8PCS	1PC

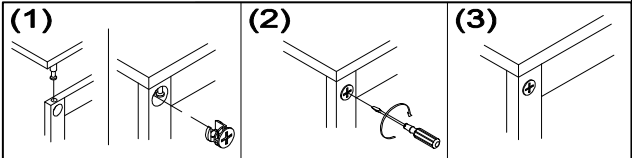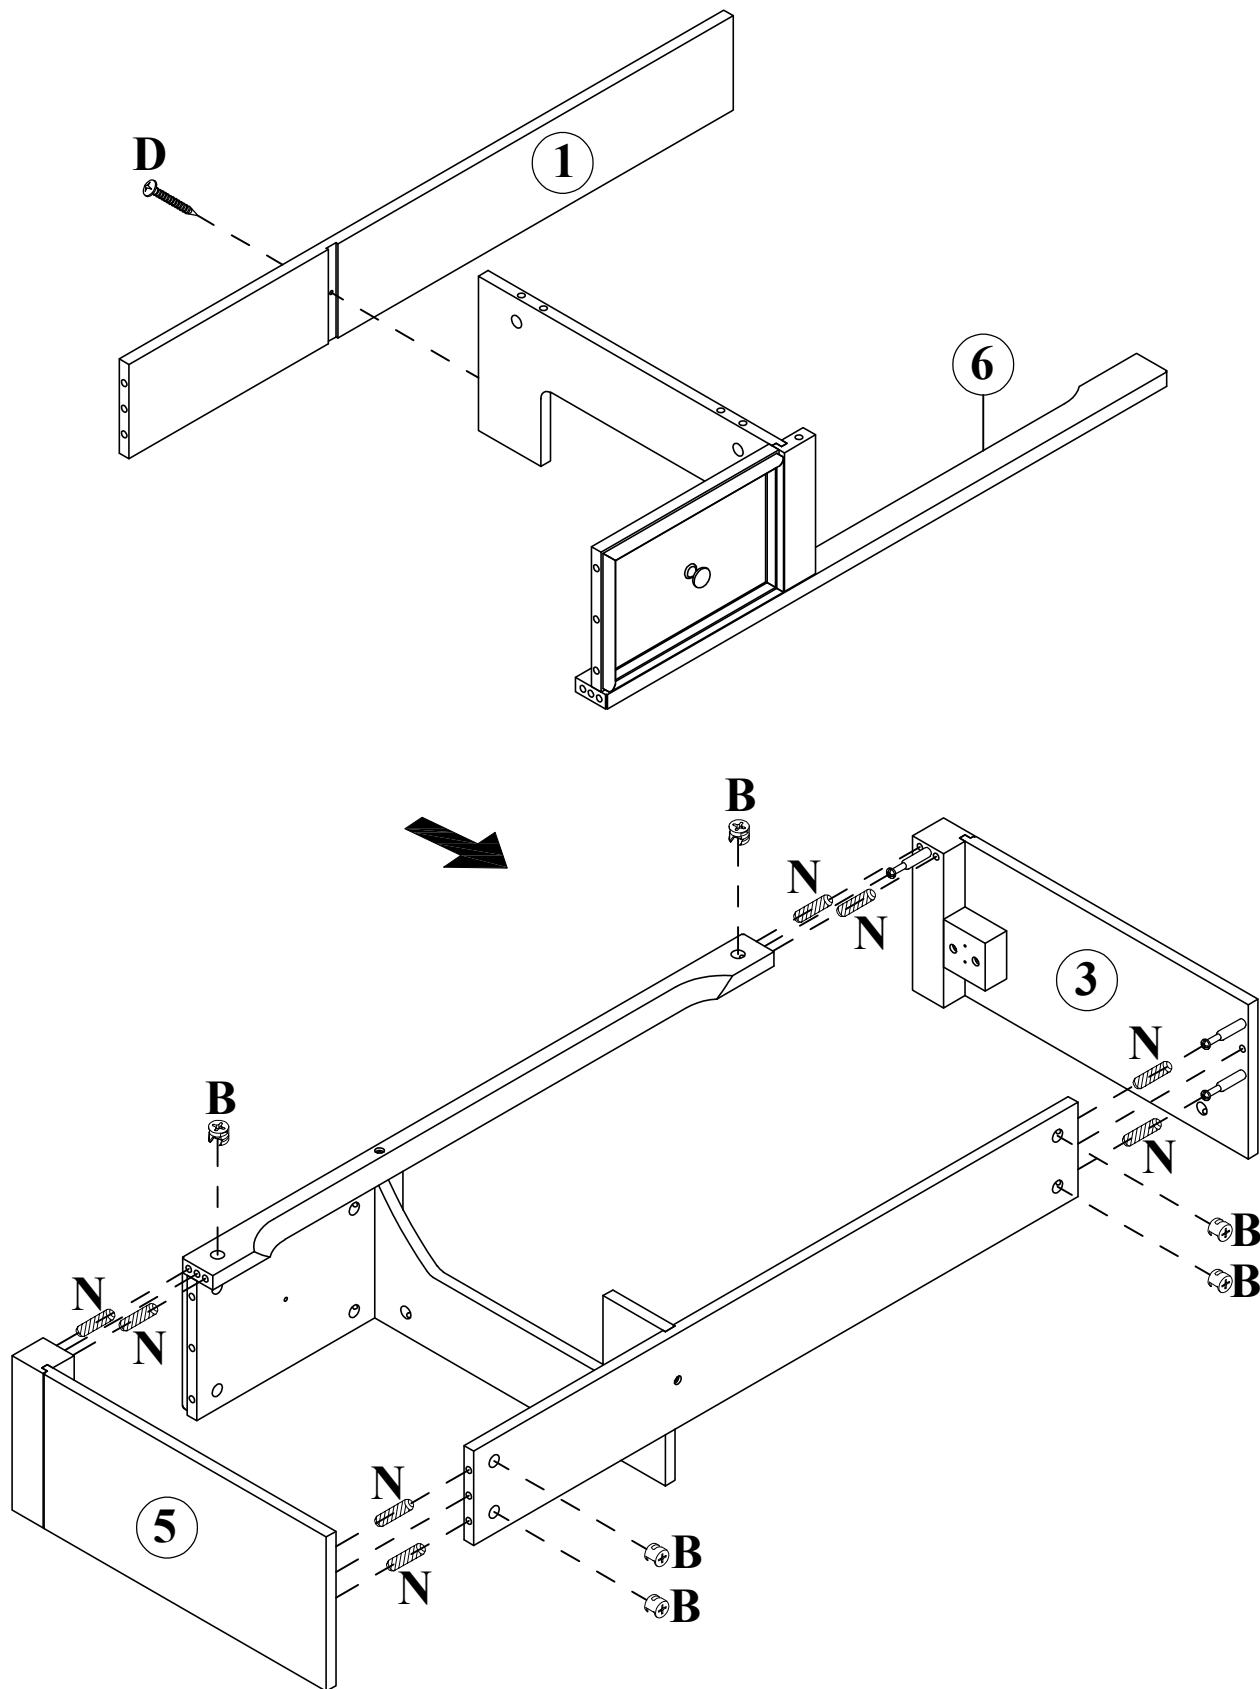

STEP: 6

B	N
	
6PCS	7PCS

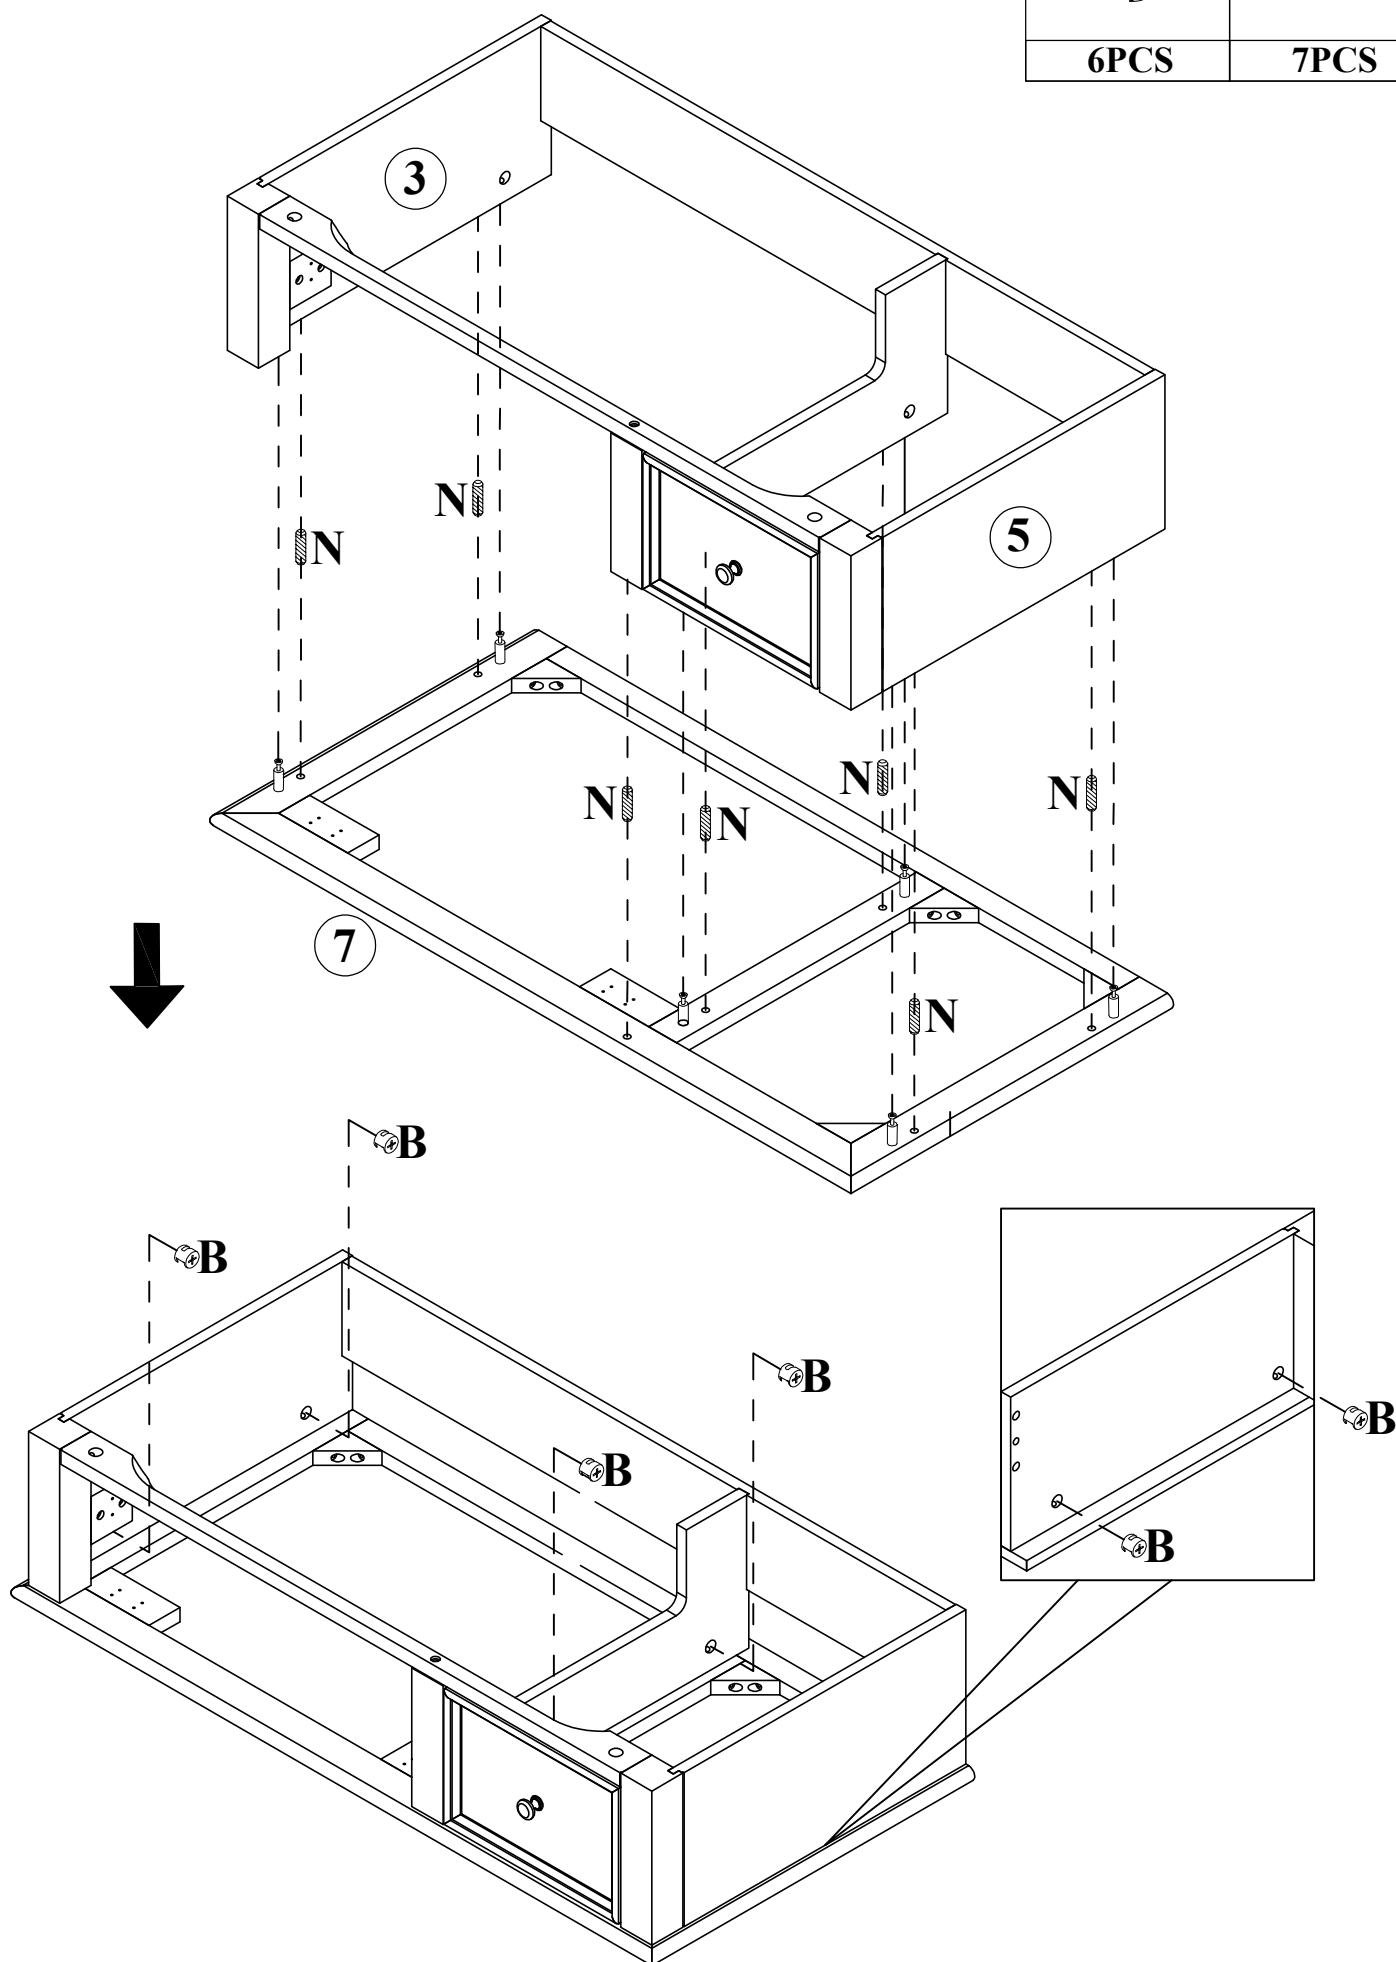


STEP: 7

A



4PCS

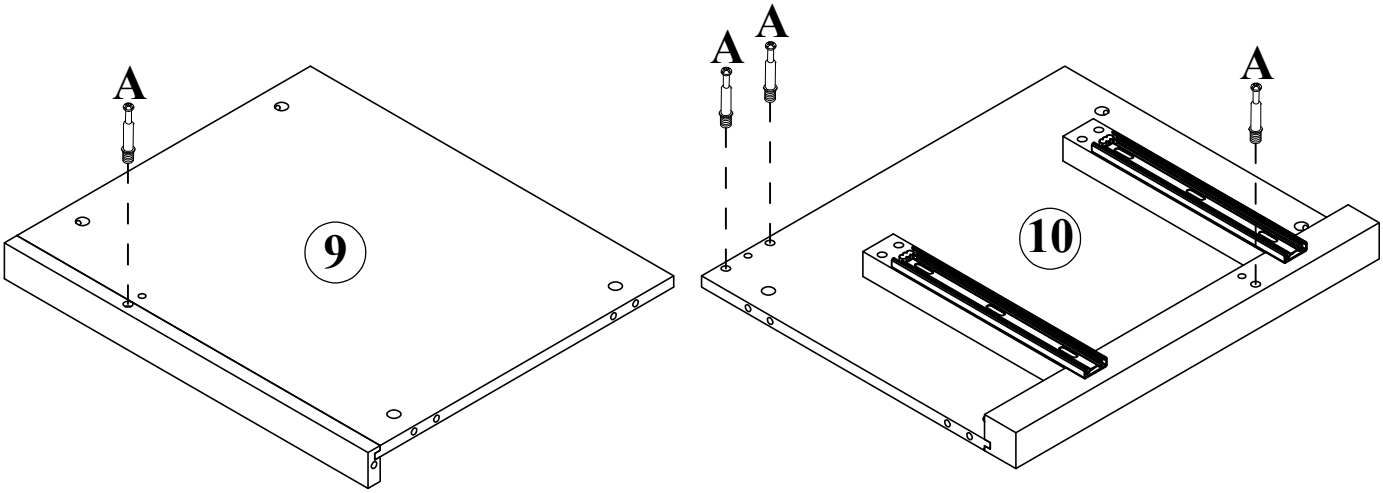


STEP: 8



D




1PC

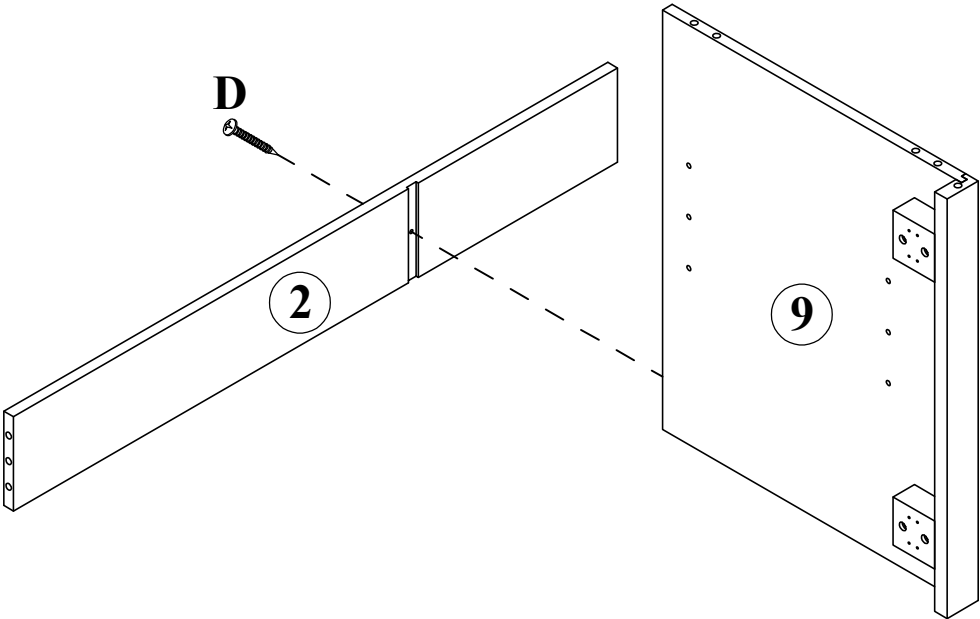


STEP: 9

B	N
	
6PCS	4PCS

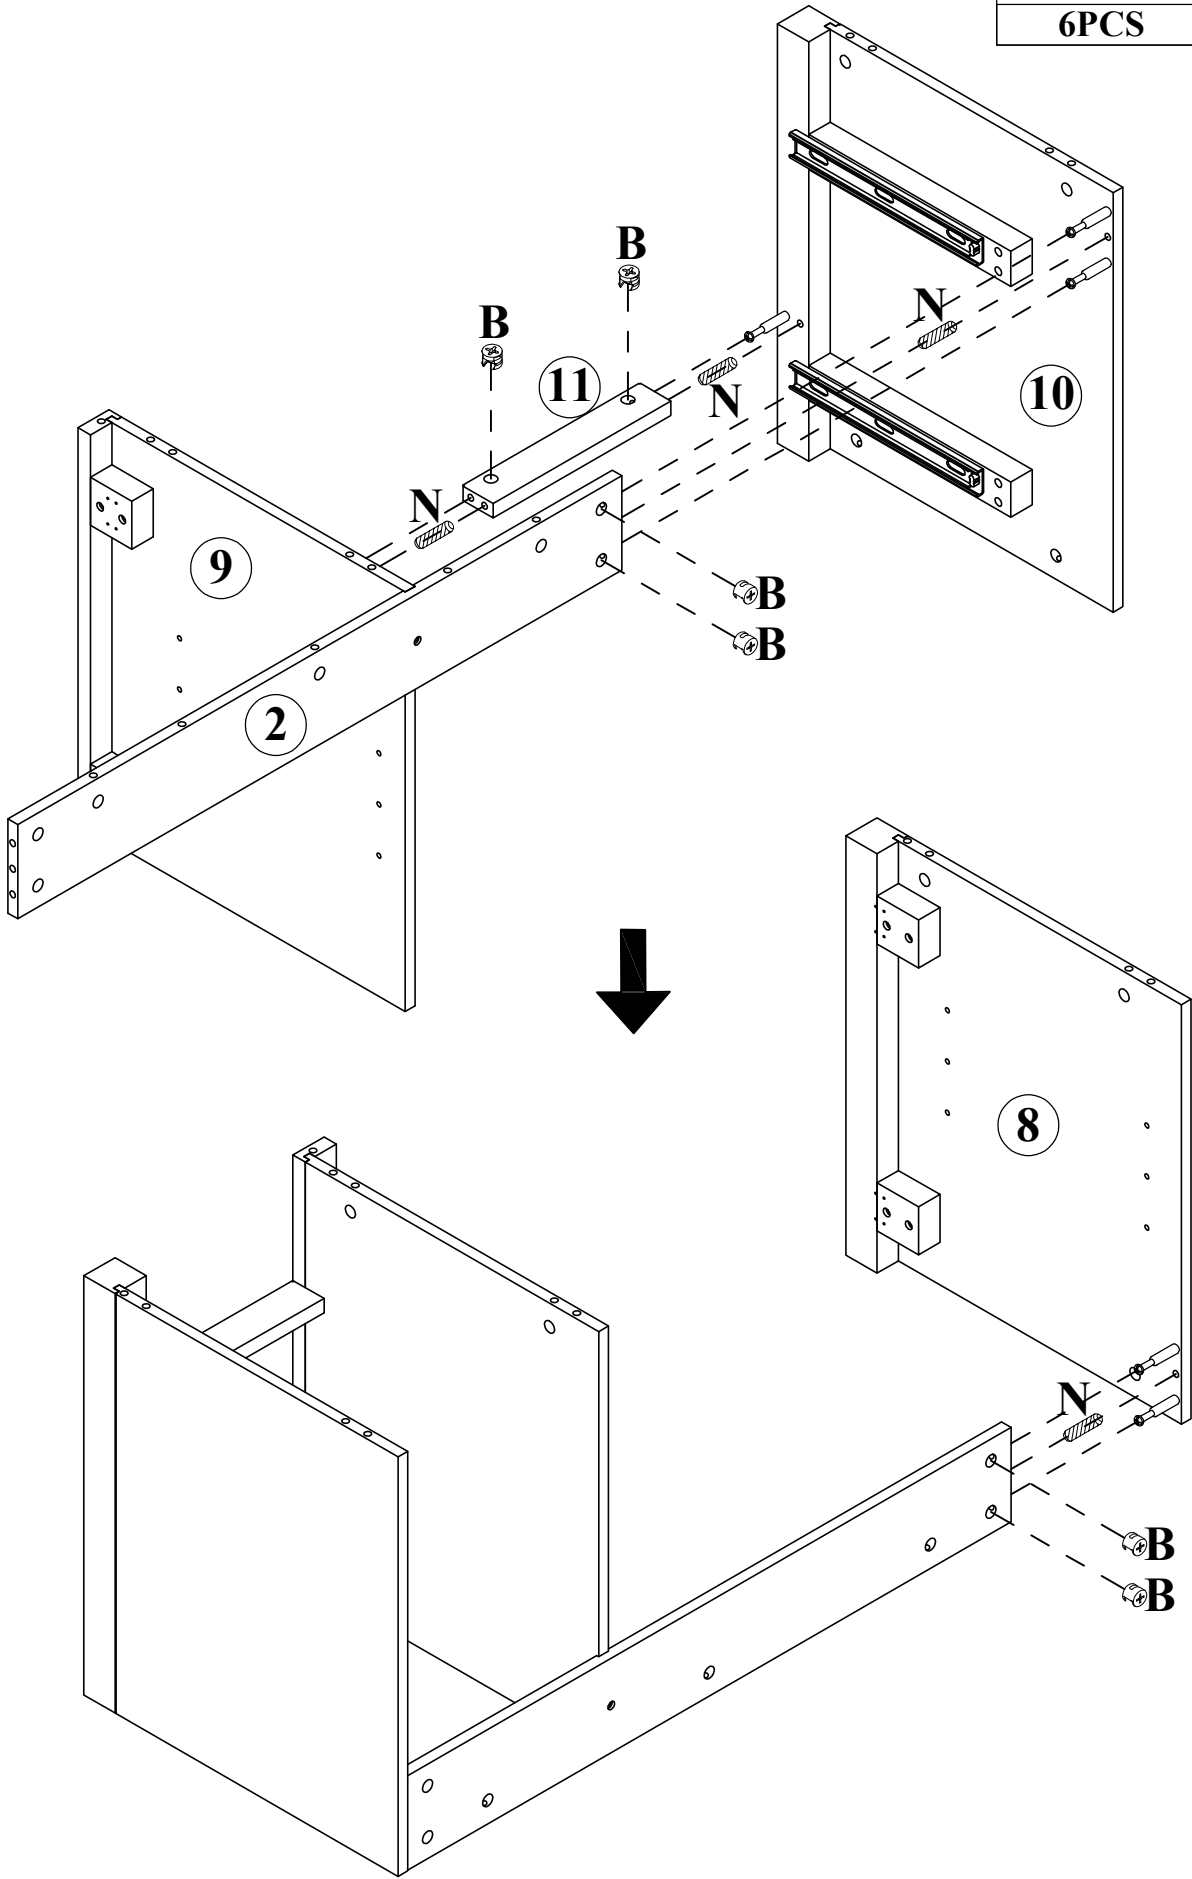

STEP: 10

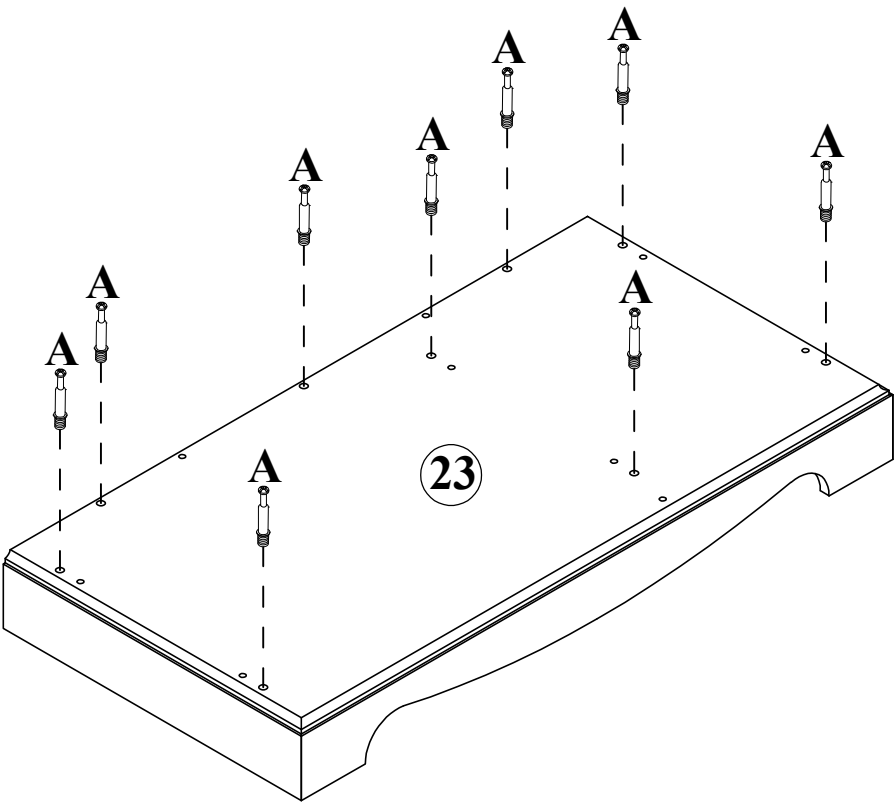


A



9PCS

STEP: 11

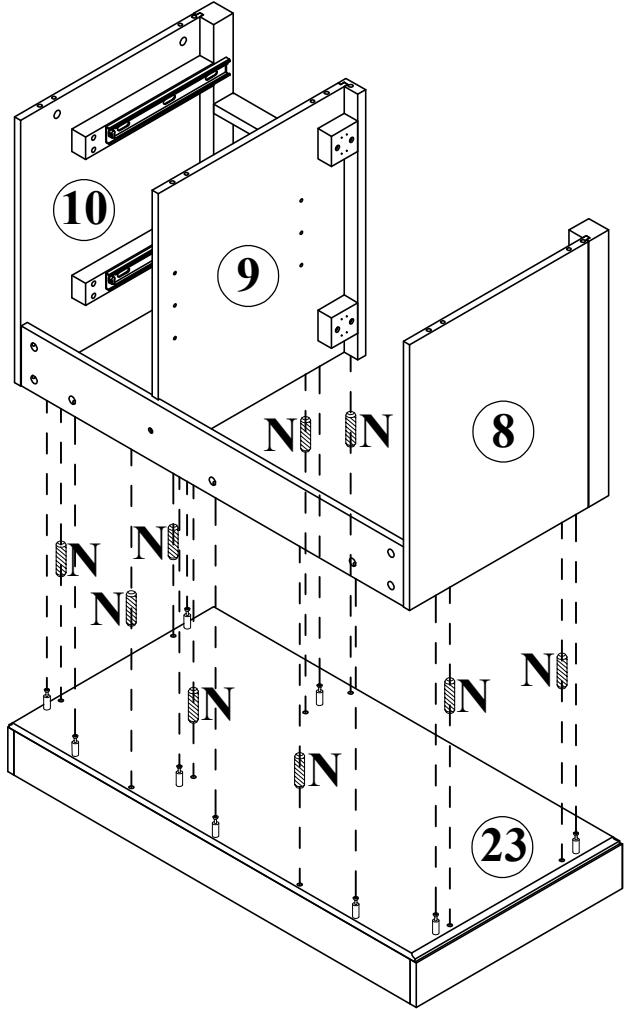

N






9PCS

STEP: 12


B




9PCS

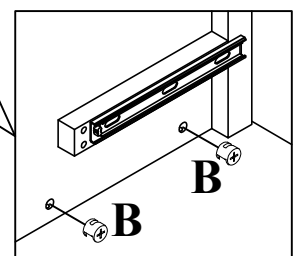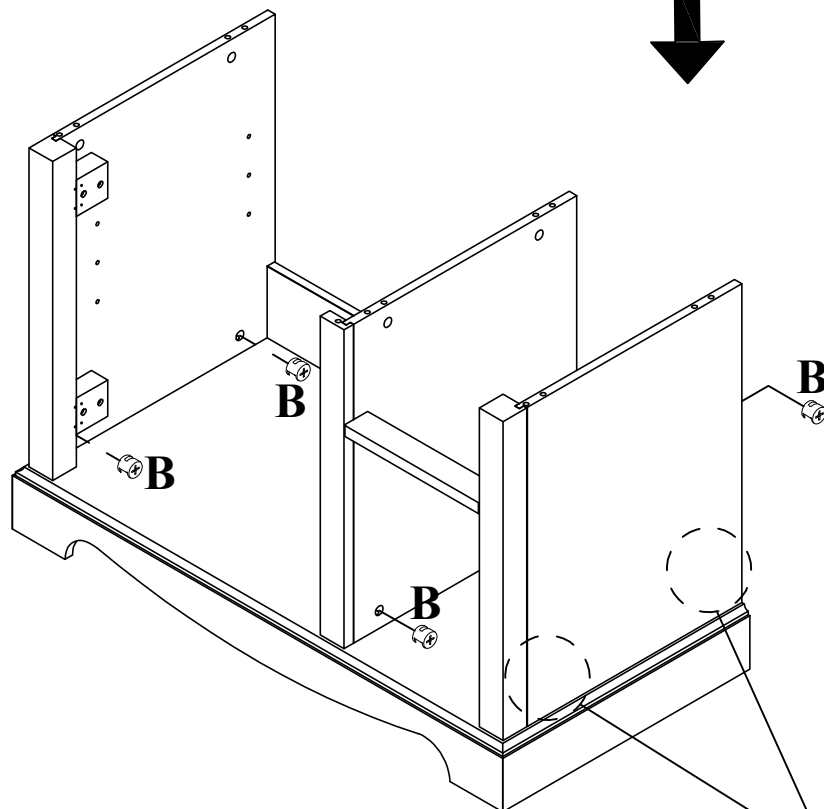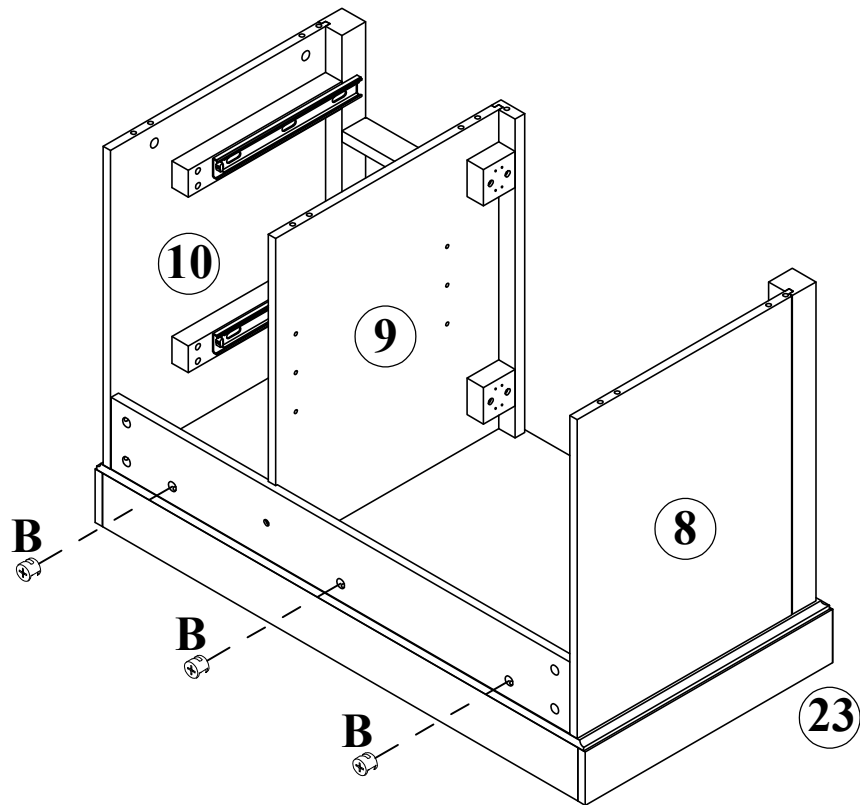

STEP: 13

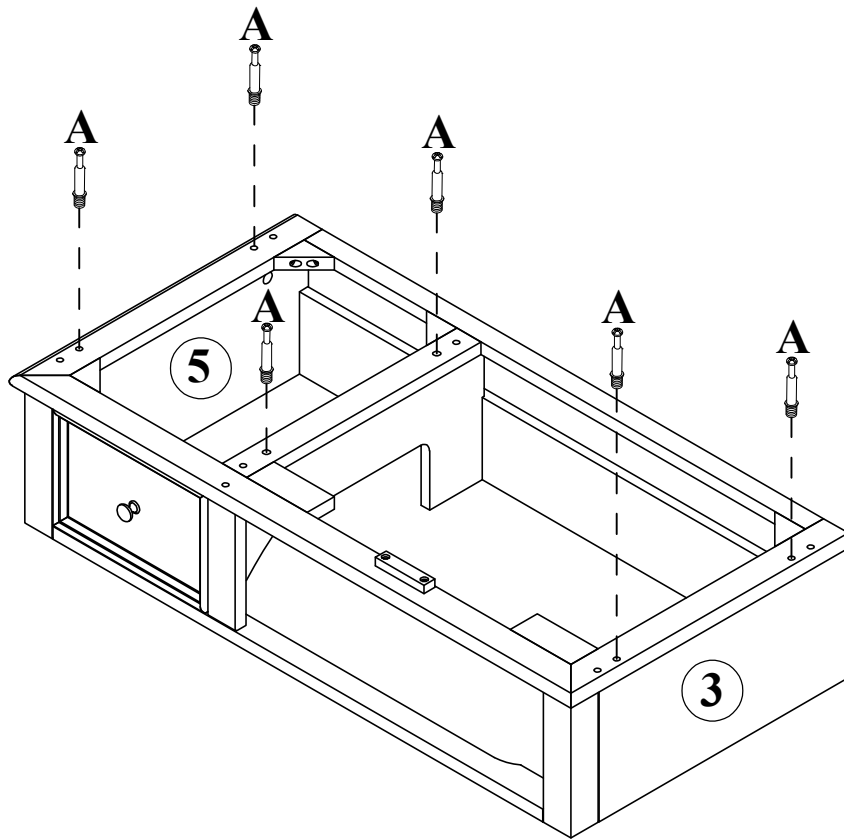


A




6PCS

STEP: 14

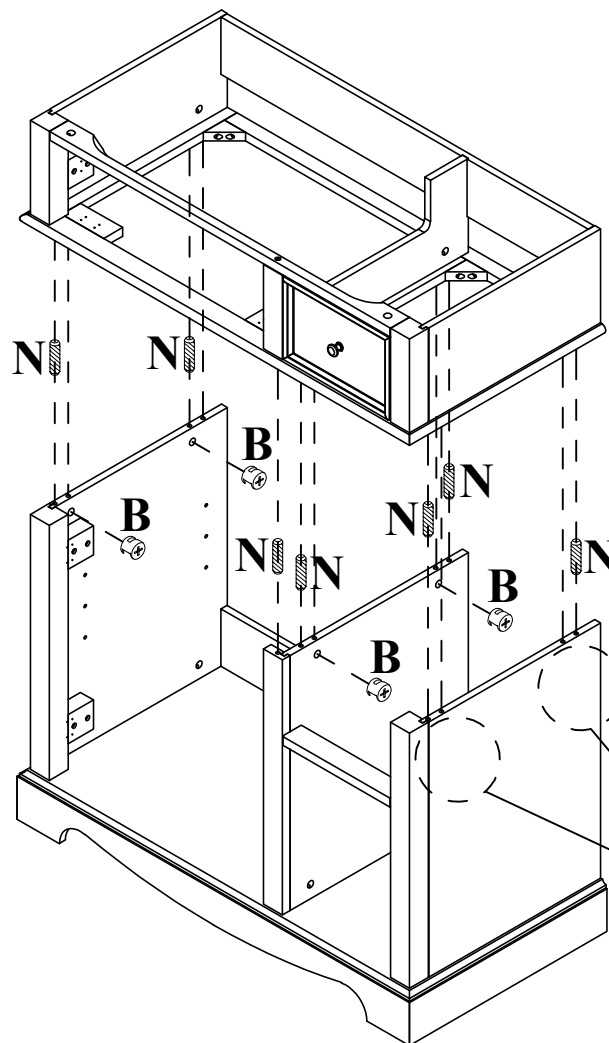

N




7PCS






B




6PCS

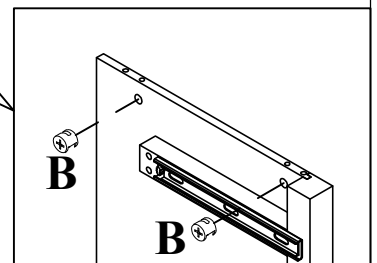





STEP: 15

F	H	I	J	C
				
2PCS	2PCS	2PCS	4PCS	2PCS

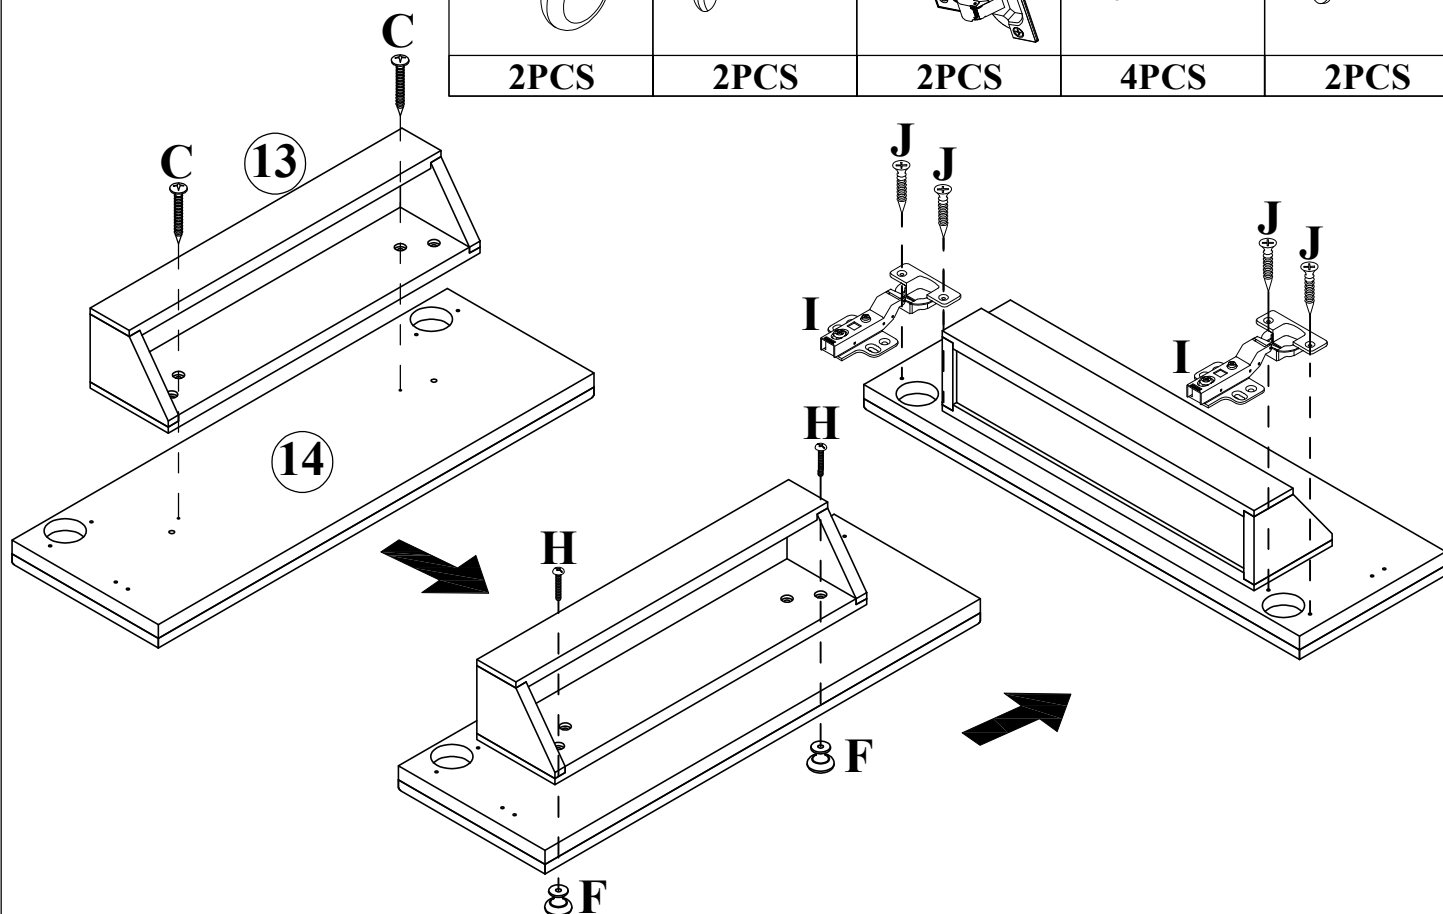


STEP: 16



J

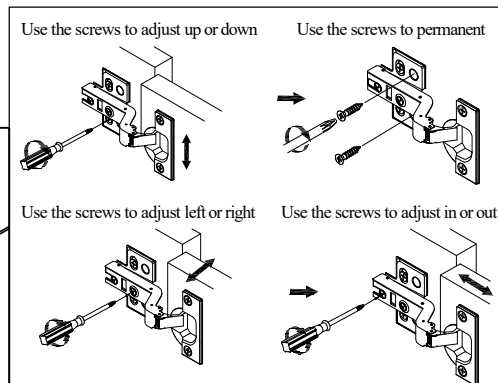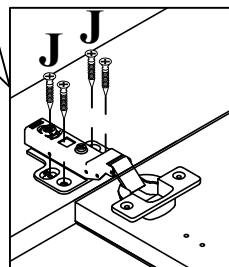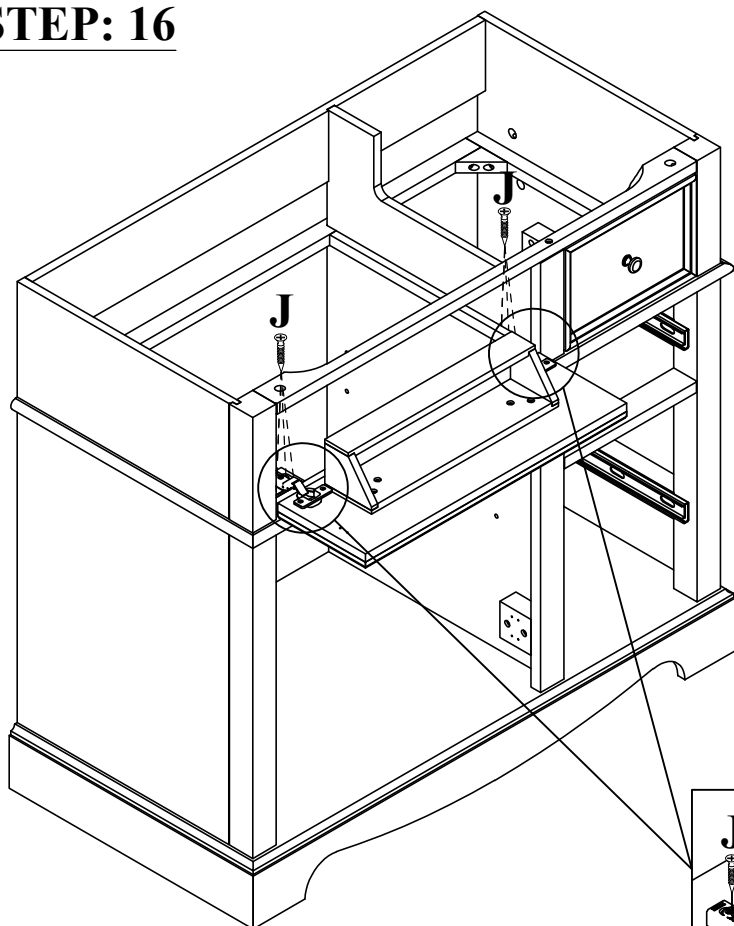8PCS

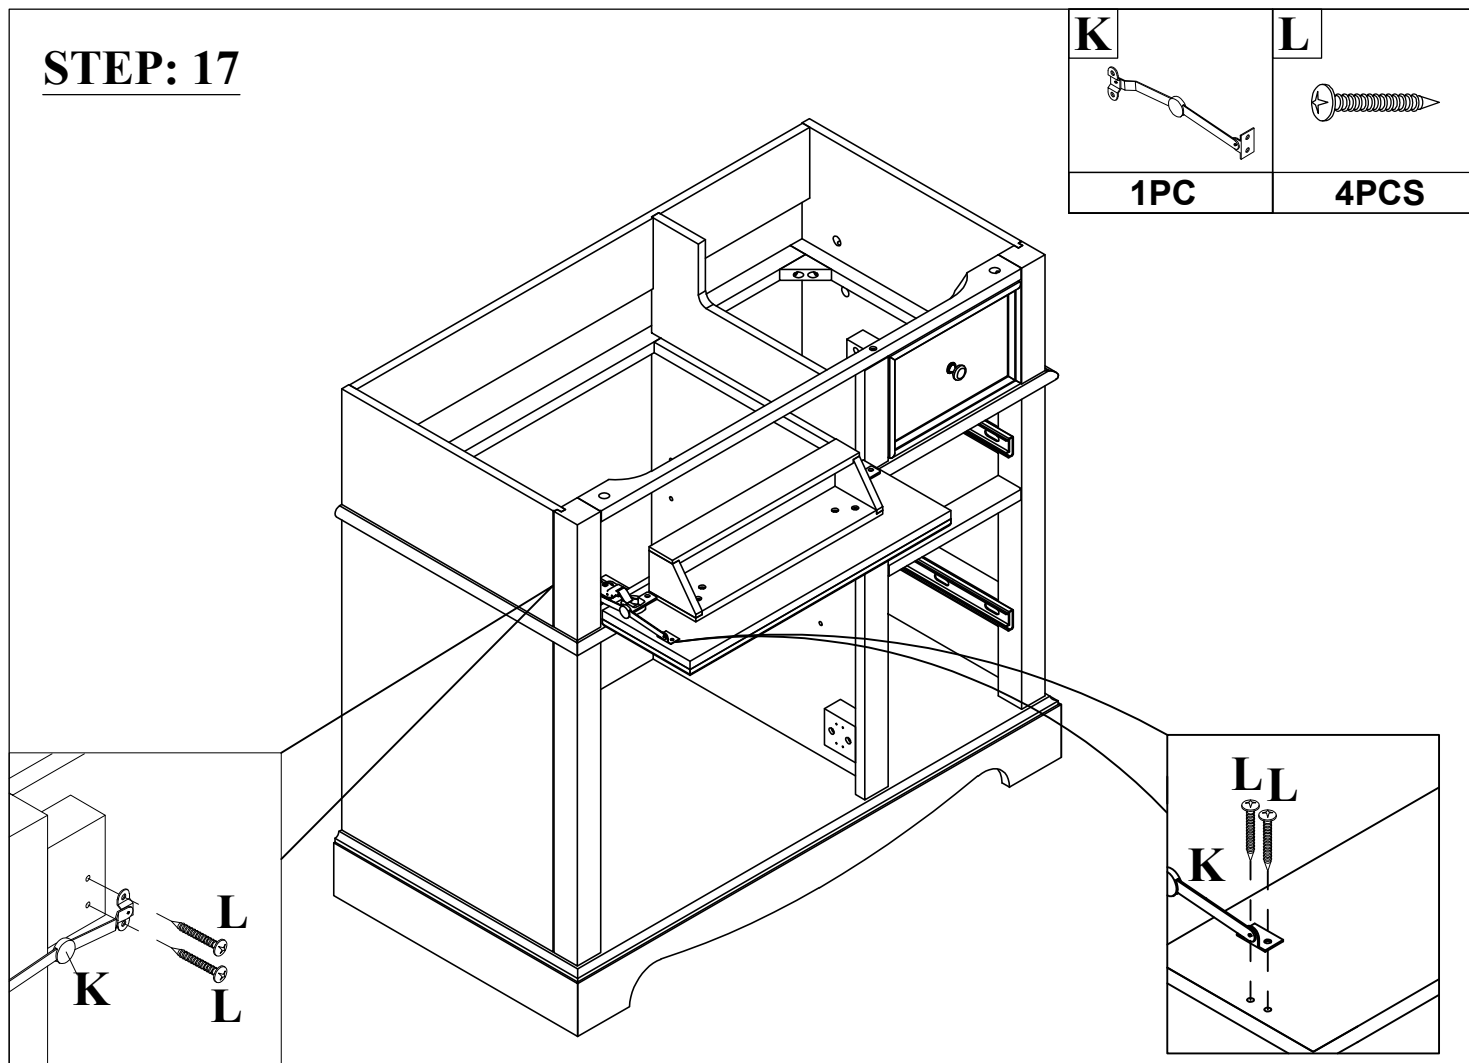

STEP: 17

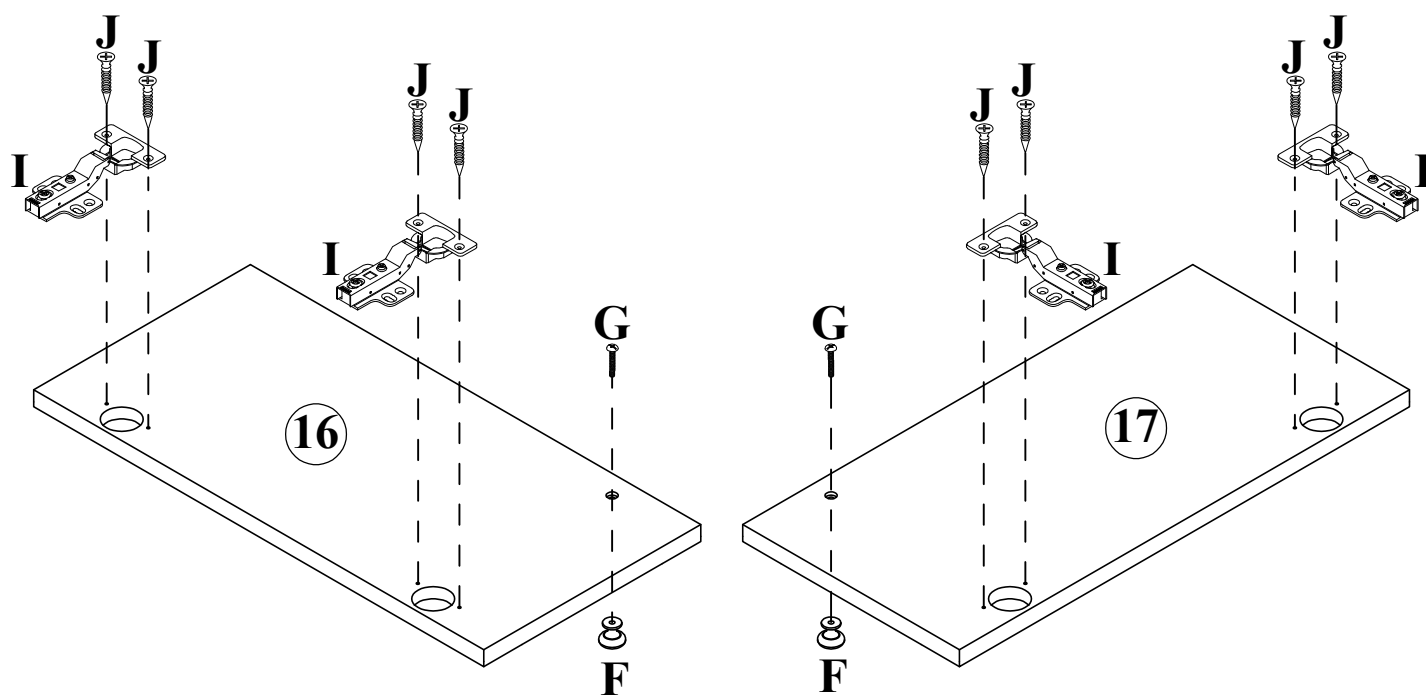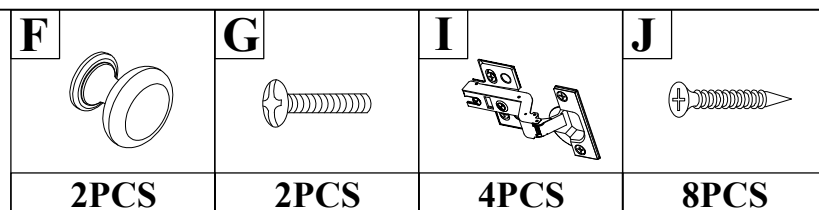

STEP: 18




STEP: 19


J




16PCS

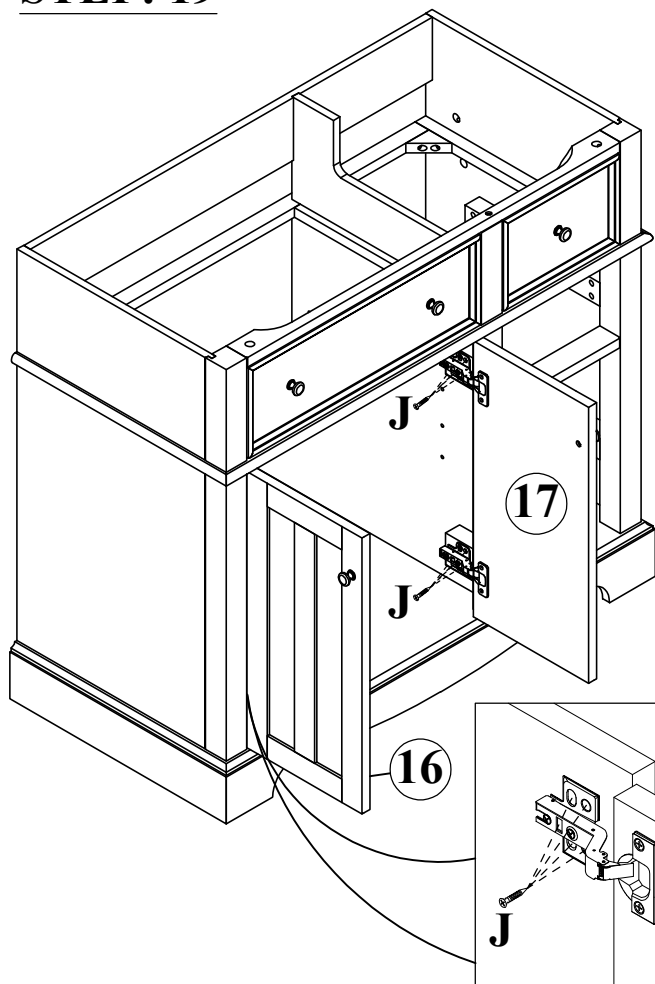

Use the screws to adjust up or down Use the screws to permanent

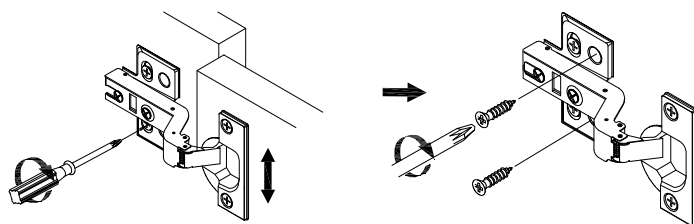


Use the screws to adjust left or right Use the screws to adjust in or out

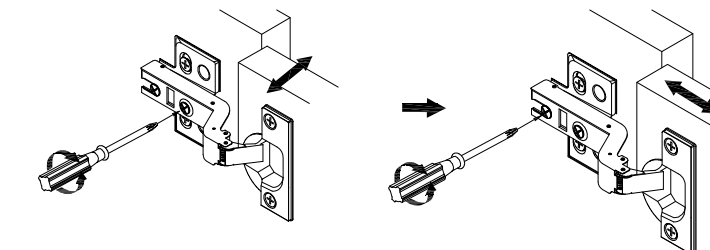


STEP: 20




M






4PCS

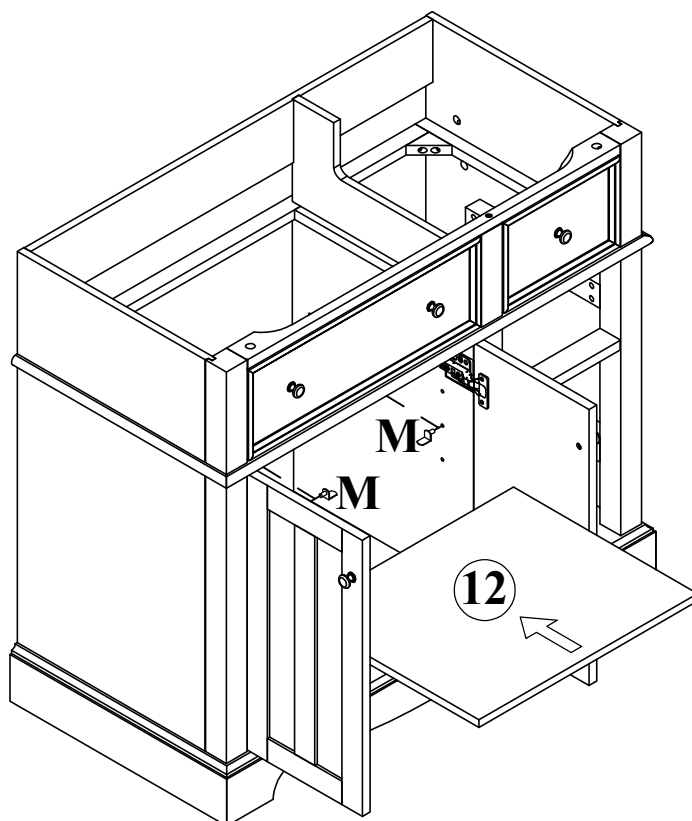








STEP: 21

F	H	E
		
1PC	1PC	8PCS

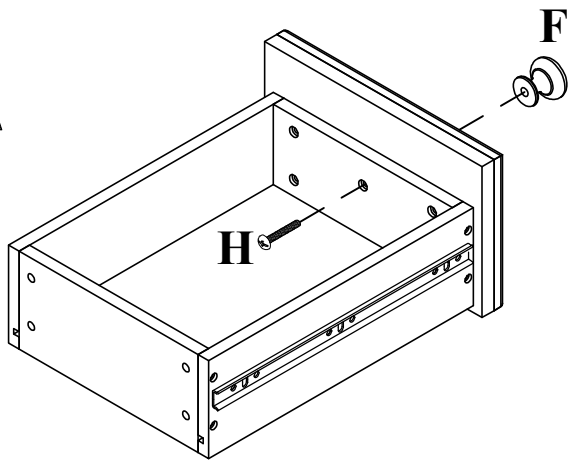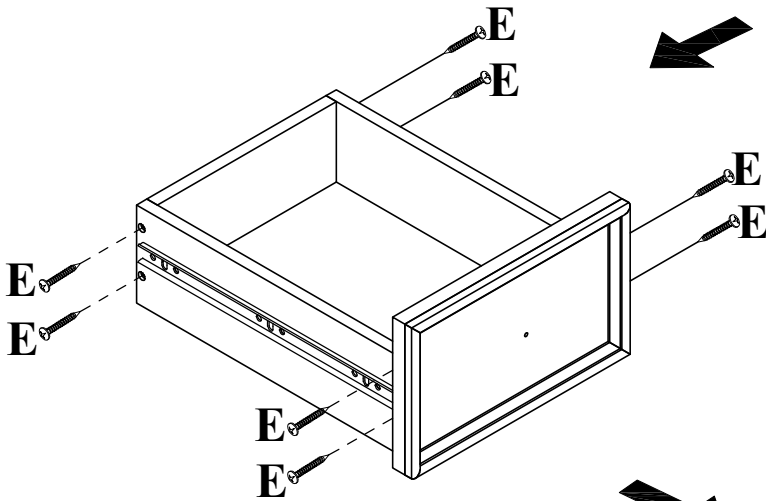
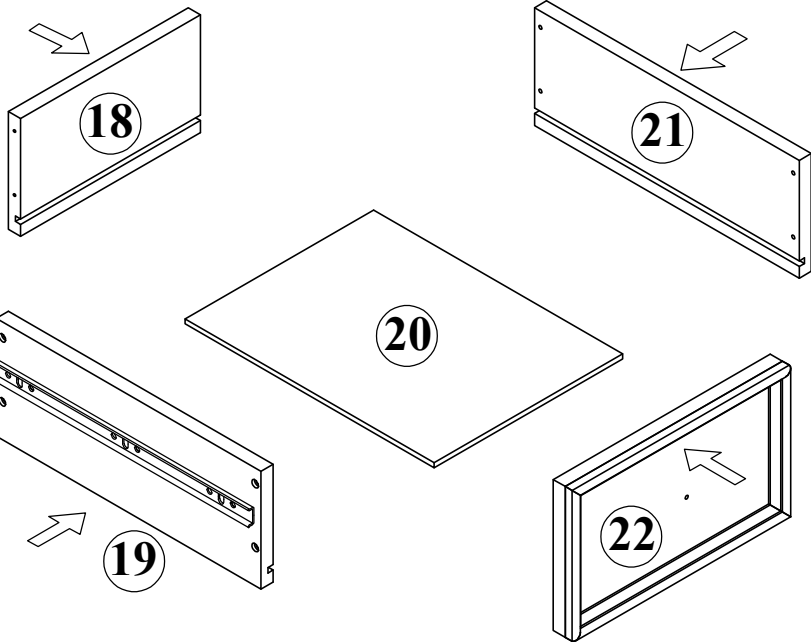


STEP: 22

F	G	H	E
			
2PCS	1PC	1PC	8PCS

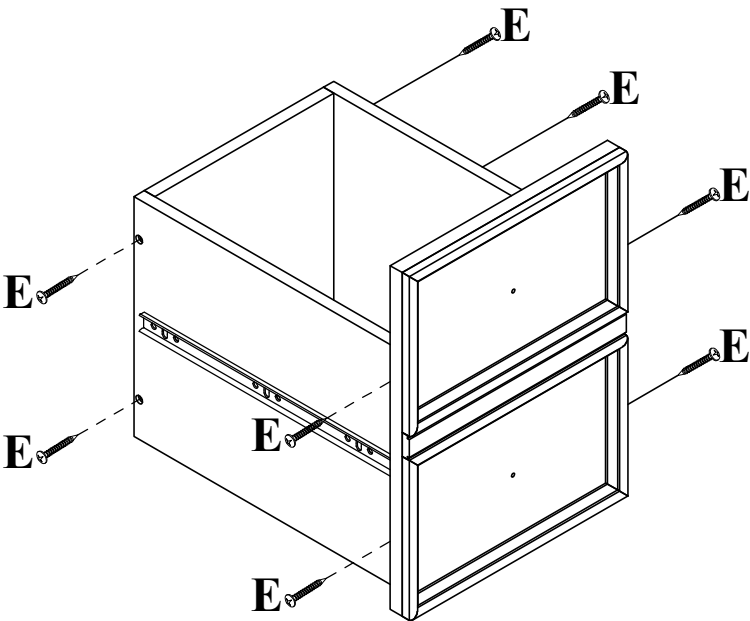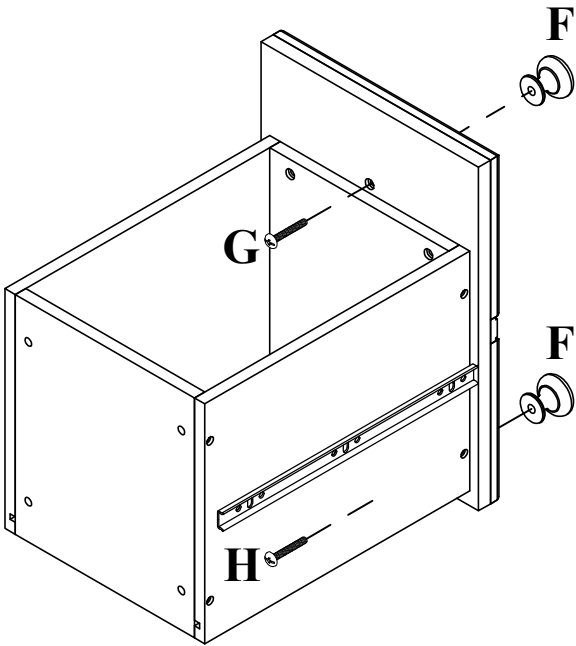
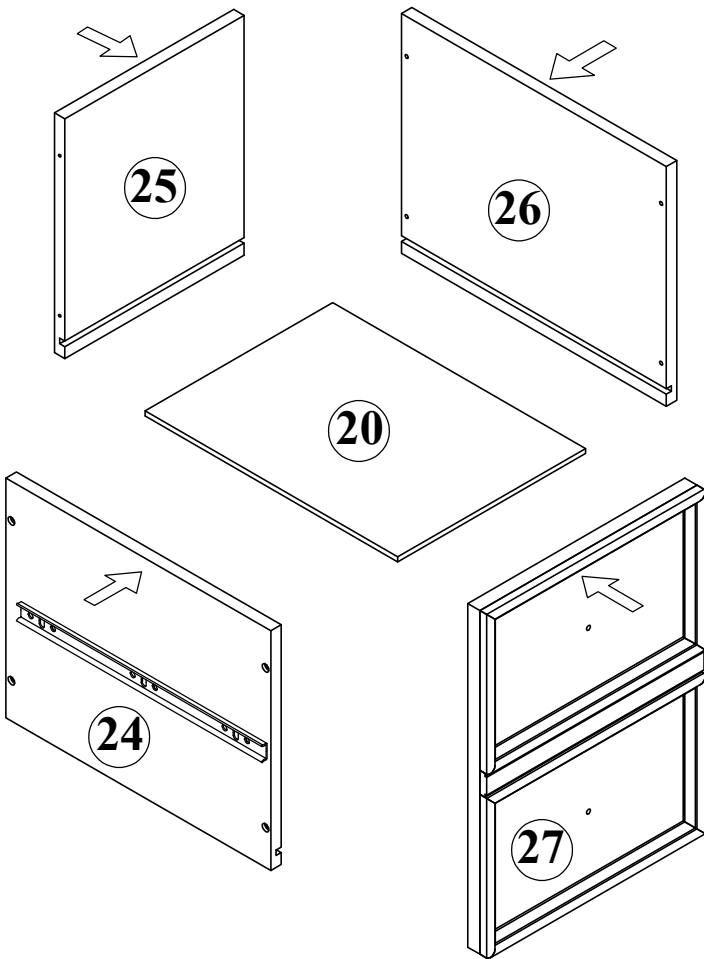


STEP: 23

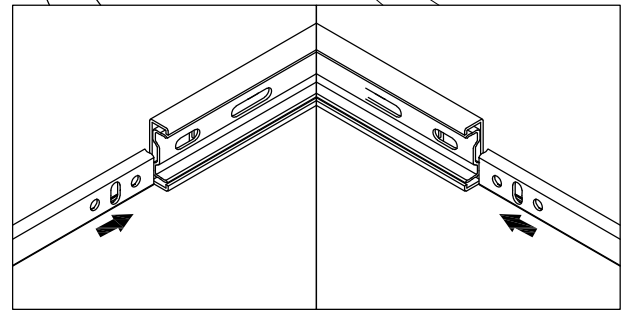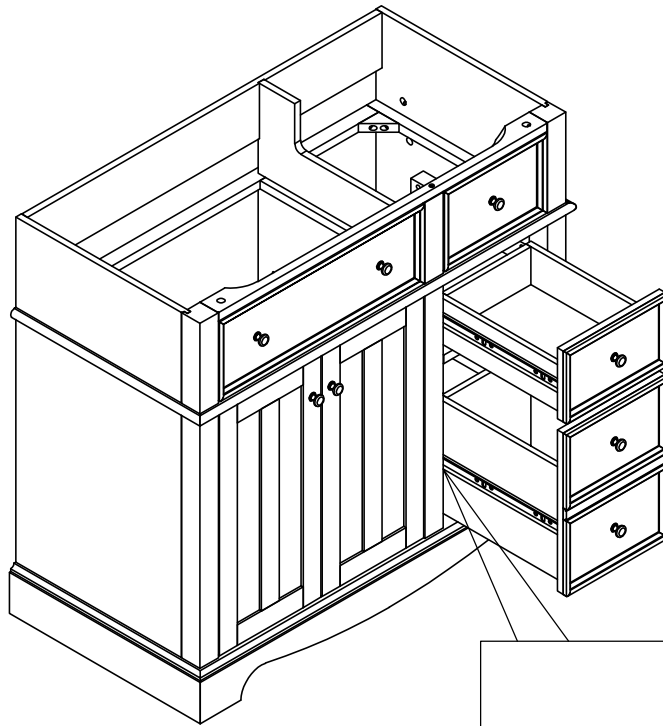


STEP: 24

Wall

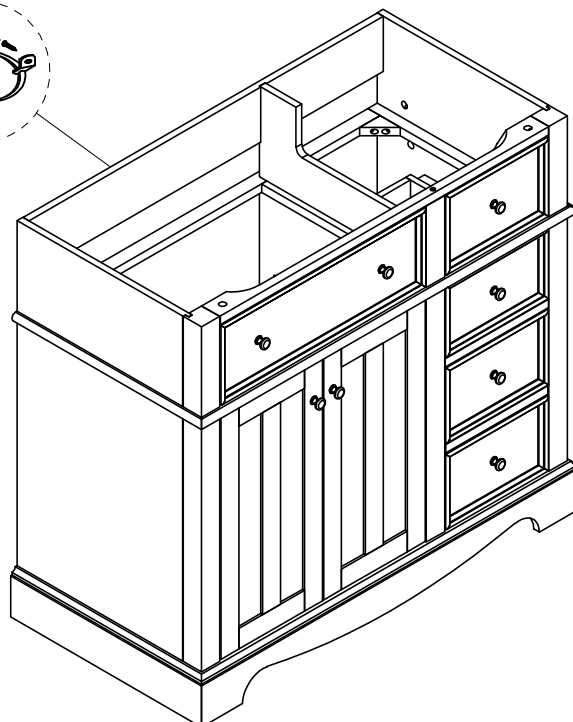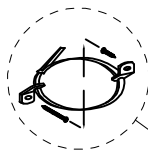


P

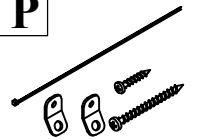

1SET

STEP: 25

Install the sink on the cabinet with glue.
Let stand for 24 hours

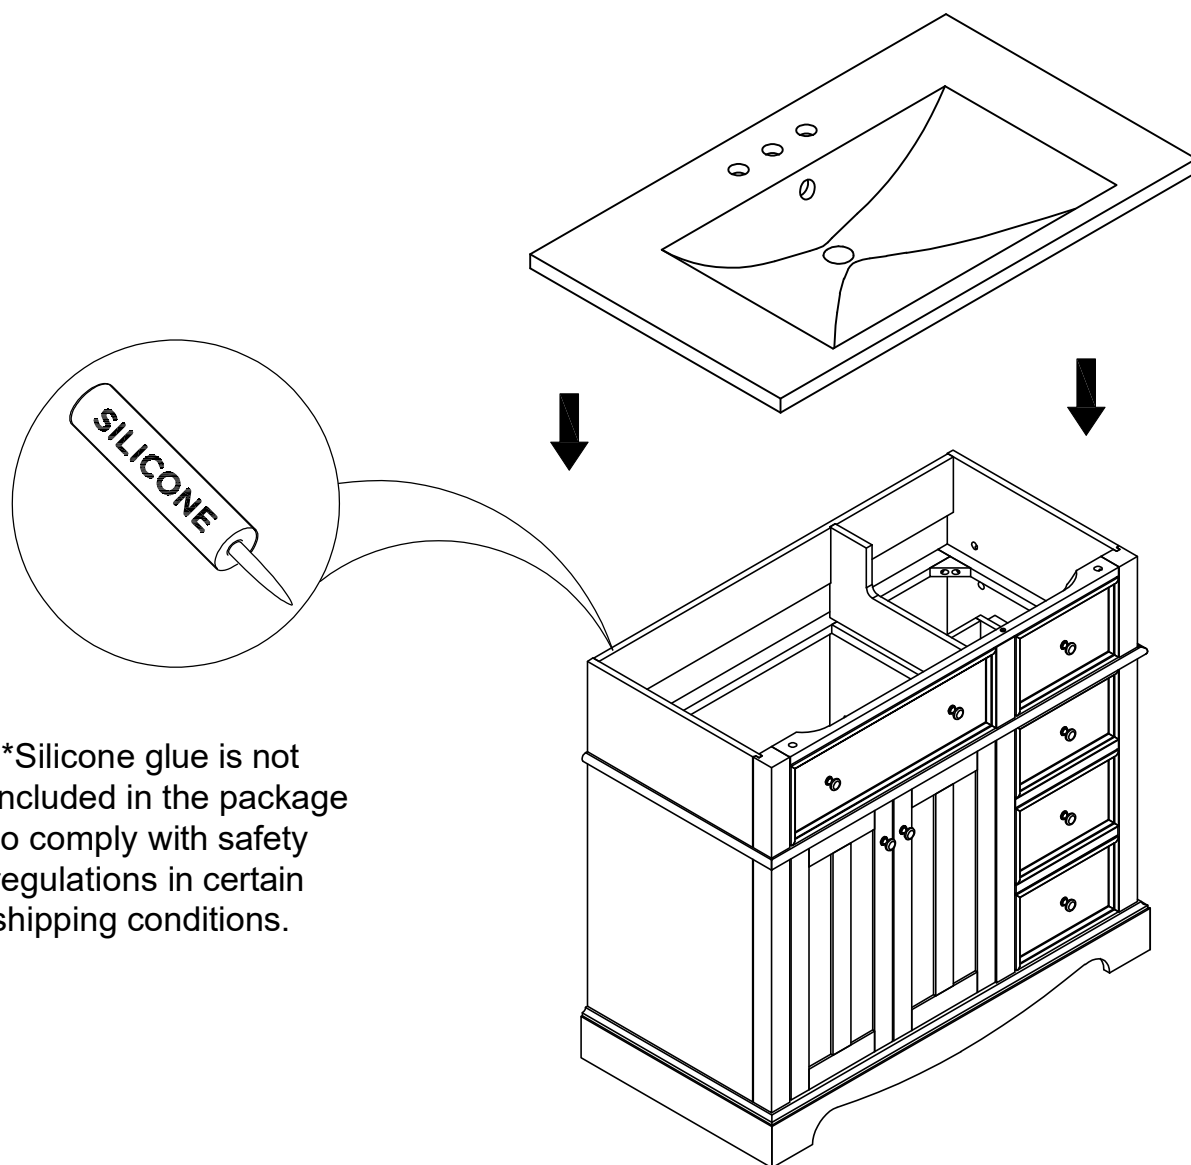

*Silicone glue is not included in the package to comply with safety regulations in certain shipping conditions.

STEP: 26

