


TENWAYS

AGO T
FRONT CARRIER
Installation Manual

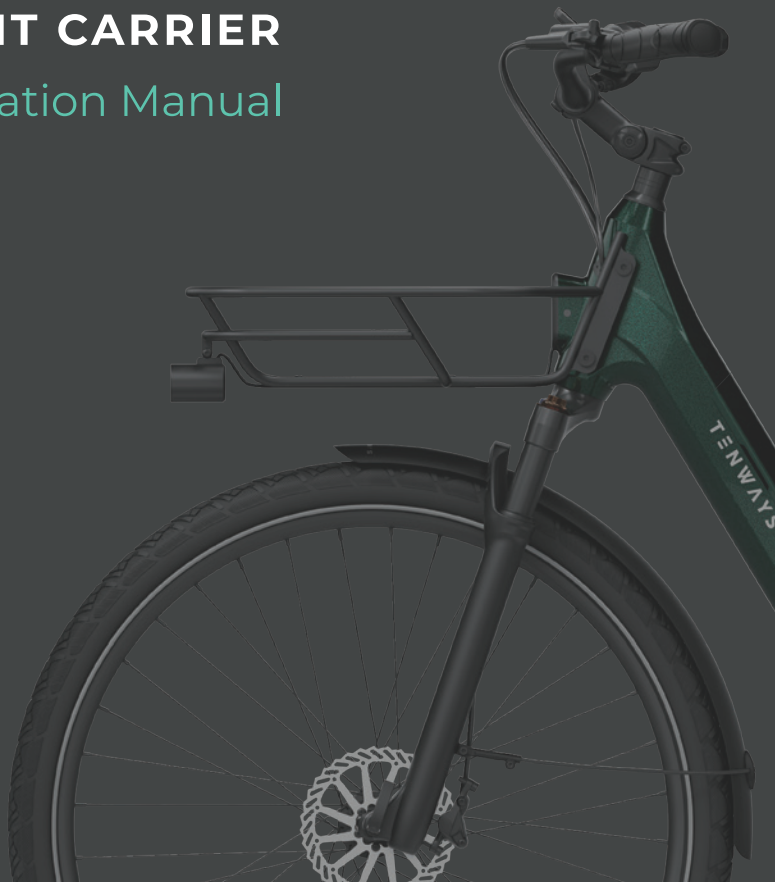

The headlight cable needs to be removed during the installation of the front carrier. Therefore, remove the e-bike battery before performing the following operations:

01.

INSTALL THE FRONT CARRIER

Tools

No.4 Hex Key



a.


Remove the protective plugs on both sides of the head tube.



b.

Take out the front carrier and accessory kit, use the No.4 Hex Key to tighten the screw, and install the flat washer, front carrier, and head tube in sequence.

(Torque: 4–5 Nm) Pay attention to the location of the front brake hose.

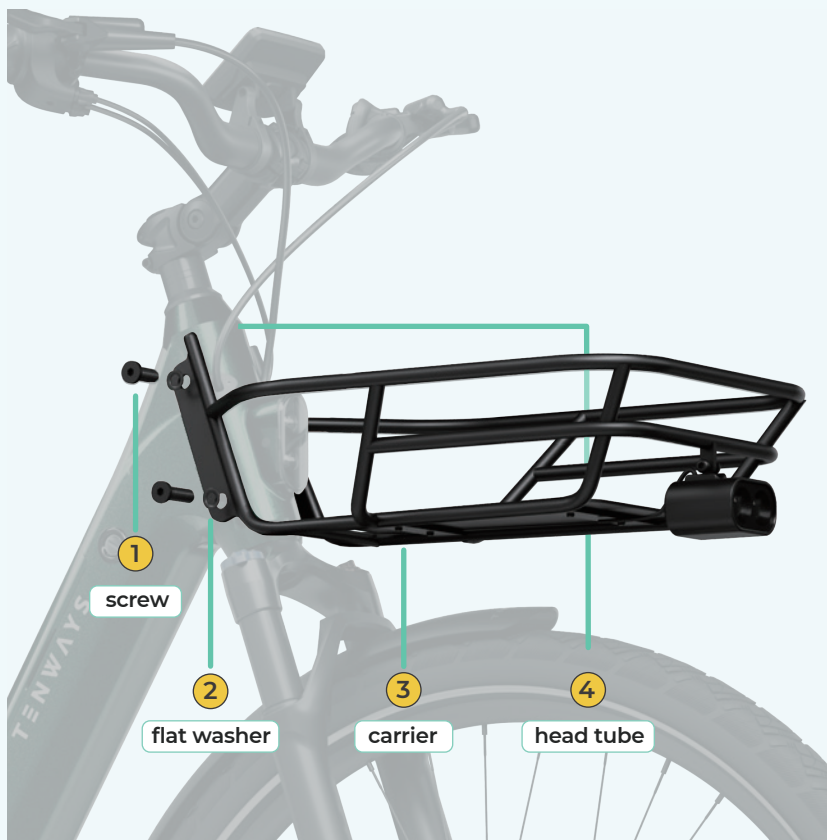

02.

REMOVE THE HEADLIGHT

Tools

Phillips head screwdriver



a.
Remove the protective sticker of the headlight screw and remove the screw by using the Phillips head screwdriver.

Note: Keep the protective sticker and screw for later use.

b.
Take out the headlight, remove the electrical tape of the headlight connectors, and disconnect the headlight.

Note: Avoid pulling out the lead wire when you disconnect the headlight.




03.

INSTALL THE HEADLIGHT AND PROTECTIVE COVER

Tools

Phillips head screwdriver




a.

Connect the headlight to the cables in the head tube based on cable colors. **Wrap the electrical tape around the connectors for 2 or 3 times.**

b.

Tidy up the headlight cable and tighten the screw by using the Phillips head screwdriver to install the protective cover in place. **(Torque: 1.5–2 Nm)** Paste the protective sticker back onto the screw.

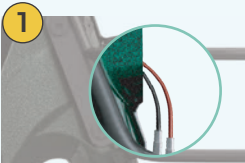

TENWAYS