




# POOLFORM

CONCRETE COUNTERTOP SOLUTIONS


## Proper Installation For Concrete or Gunnite Pool

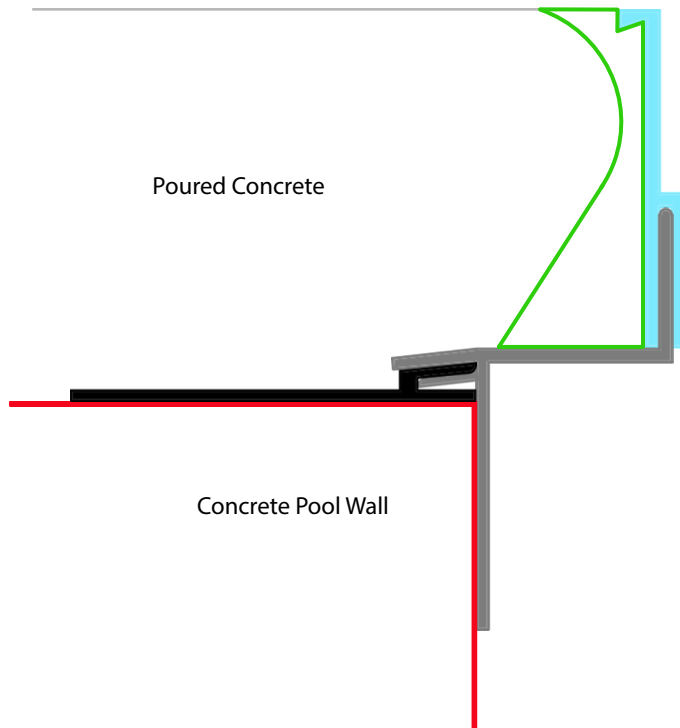

Receiver track should be mounted flush to edge of pool wall. Make sure the Z Poolform base is fully inserted into the receiver track as shown below.

- Receiver Track
- Poolform Base
- Poolform Backing
- Form Liner

## Proper Installation For Fiberglass Pool

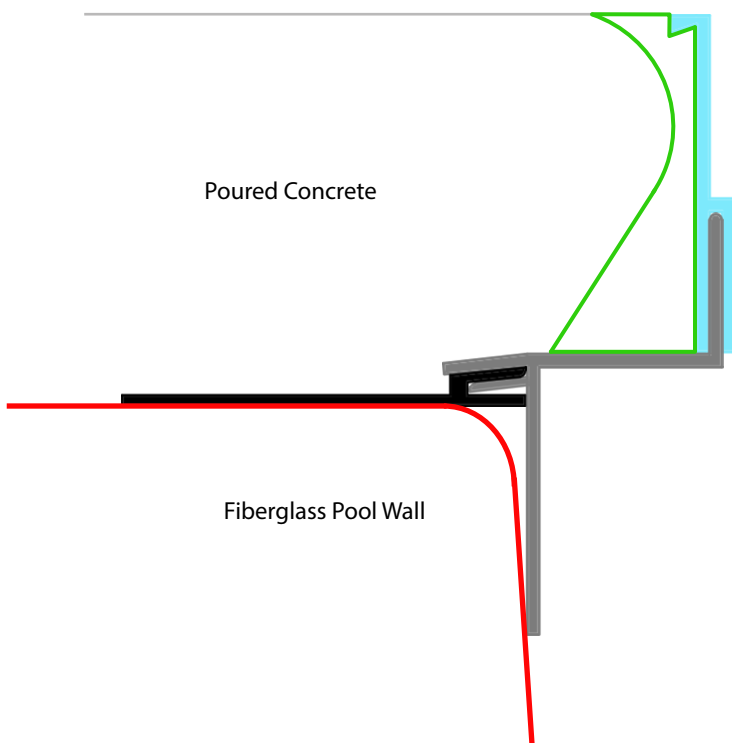

Receiver track should be mounted in a position that leaves enough room for Poolform to attach plumb. A jig can be made with a small piece of Poolform inserted into receiver track (see video for details). Make sure the Z Poolform base is fully inserted into the receiver track as shown below.

Scan For



Instructional Video

\*\* Installation for a **Vinyl Liner Pool** will look similar to the diagram above for a concrete pool except the Poolform will plug into the already existing liner track.