


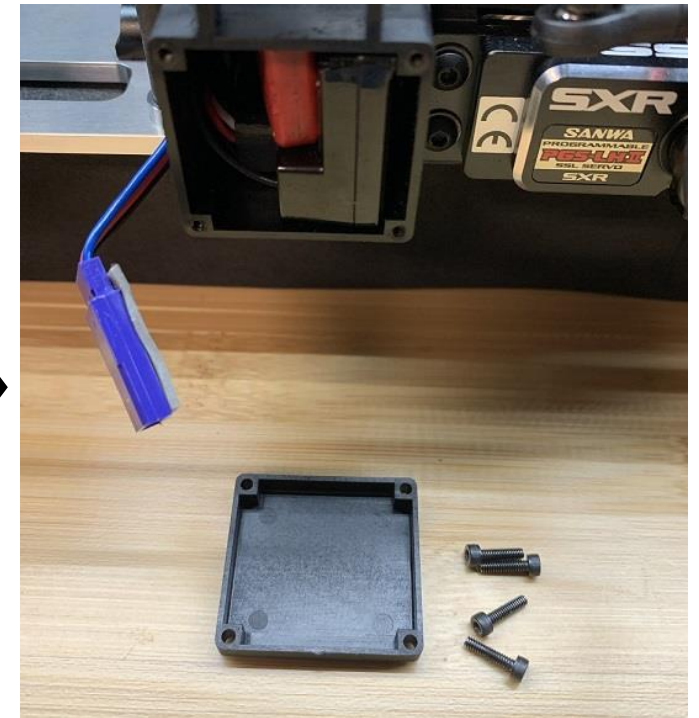
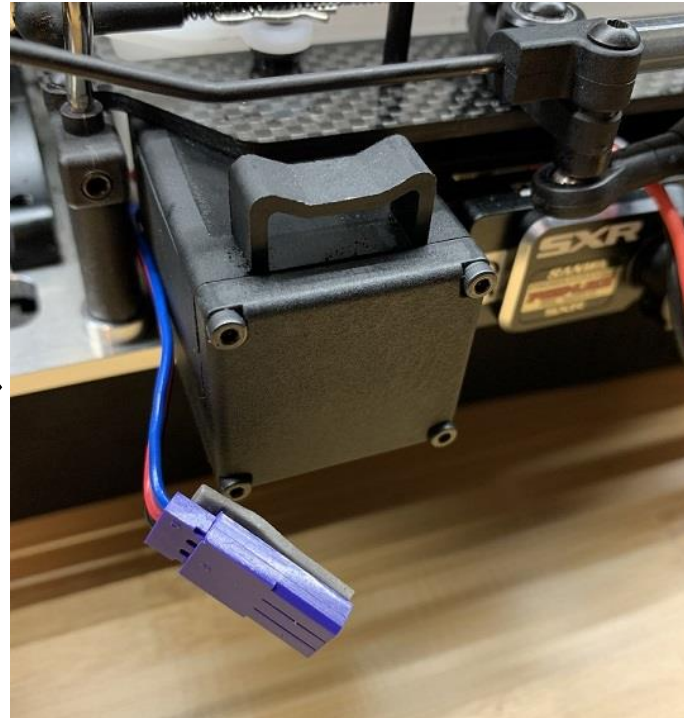
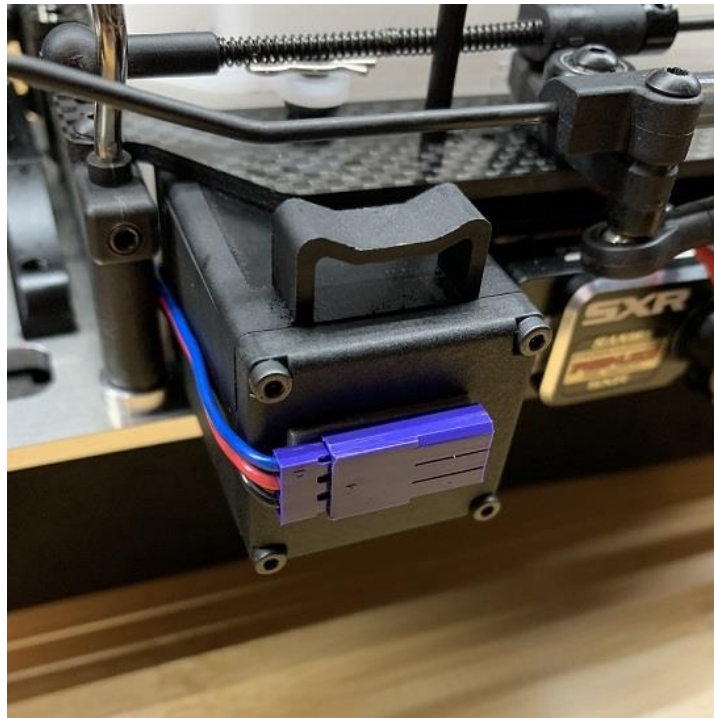


INFINITY IF18/IF18-II
ELECTRONICS BOX
RED1RC REPLACEMENT
COVER

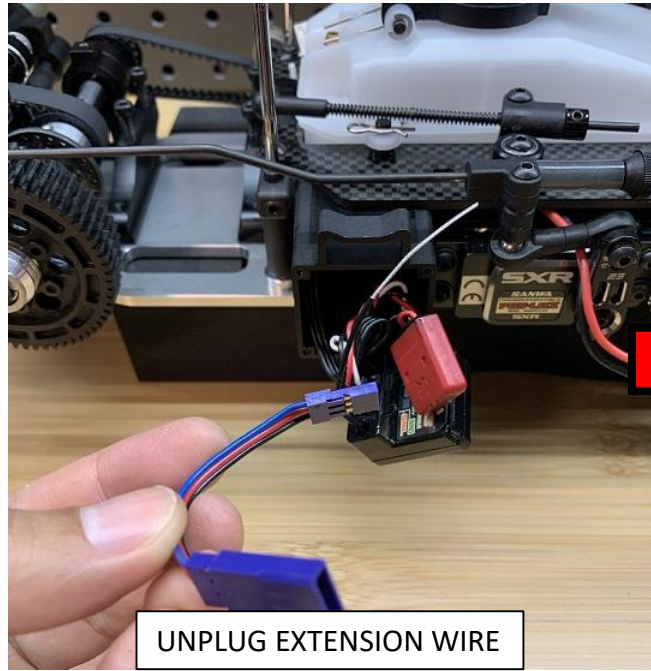


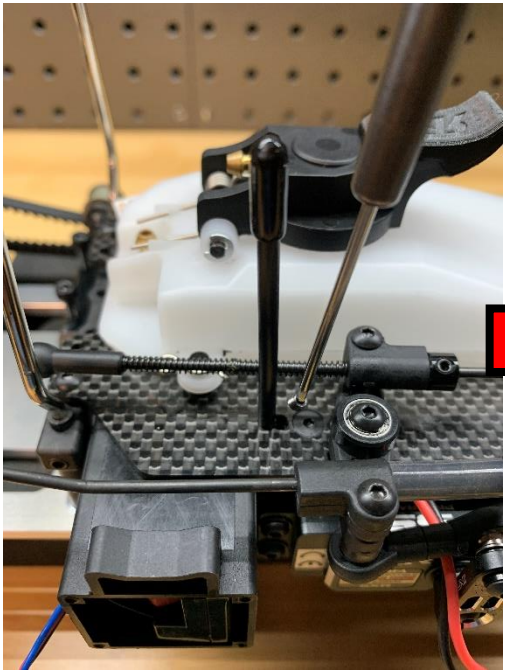




UNPLUG EXTENSION WIRE

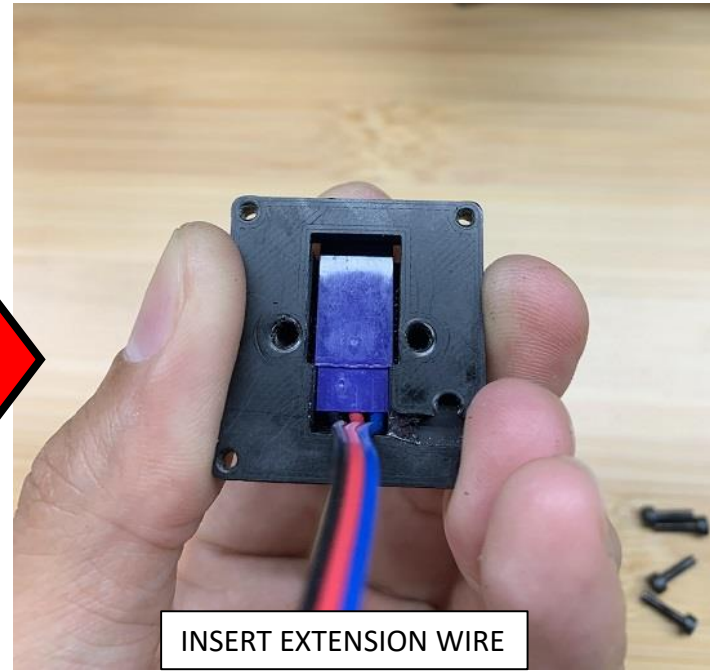


INSERT EXTENSION WIRE

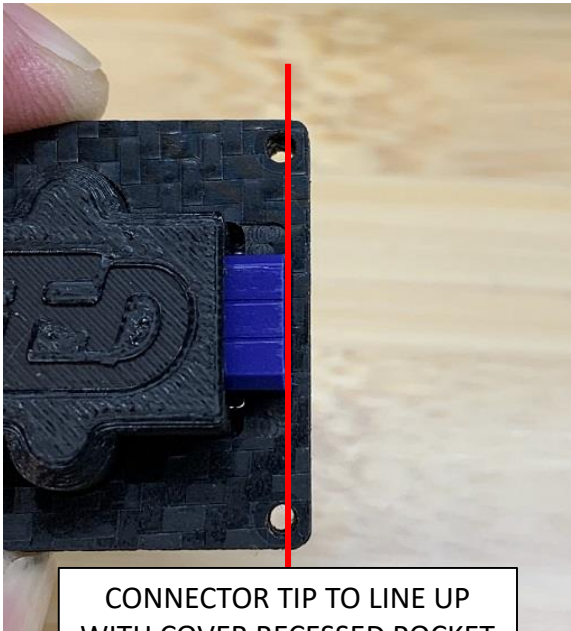


CONNECTOR TIP TO LINE UP WITH COVER RECESSED POCKET

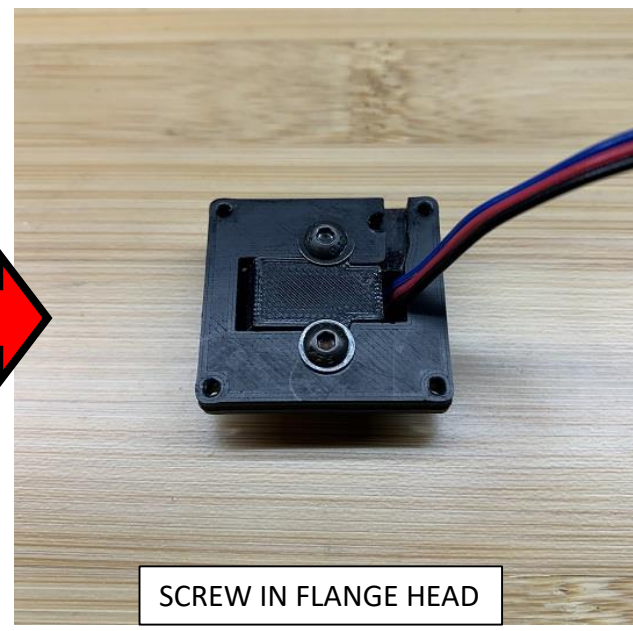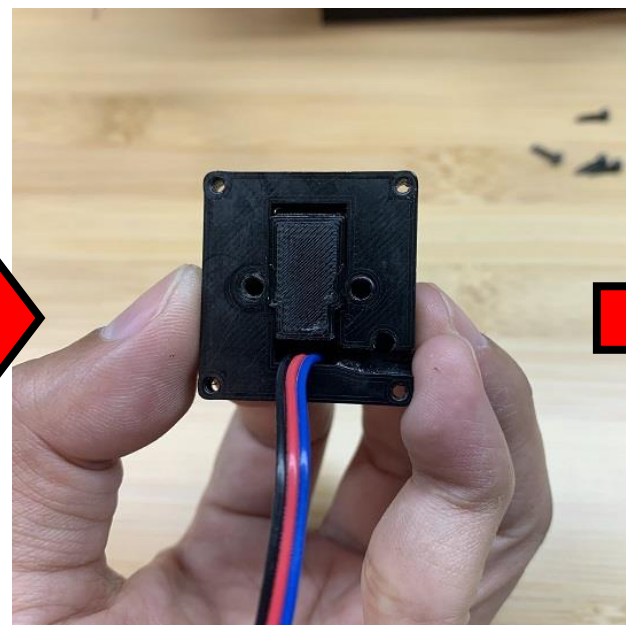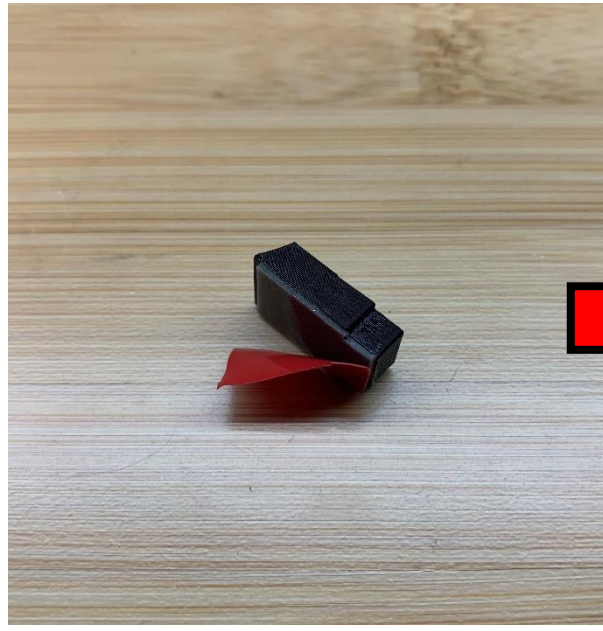


SCREW IN FLANGE HEAD

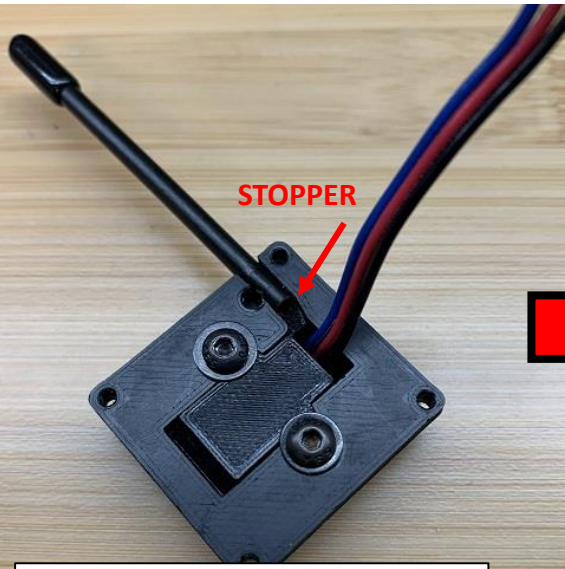


PLACE ANT. TUBE INTO CHANNEL

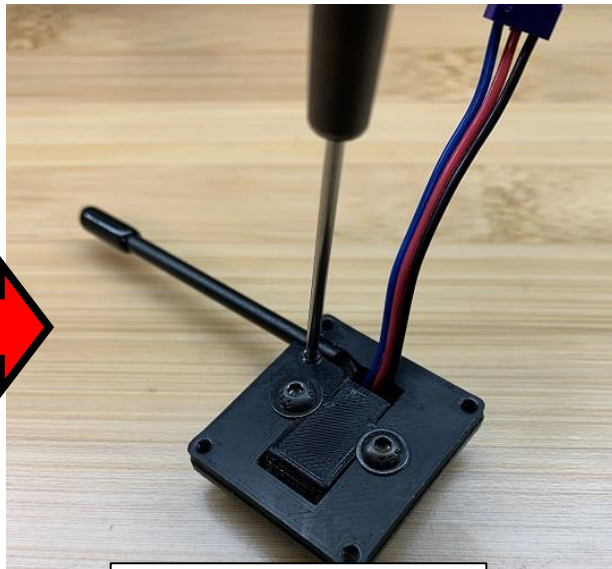


SECURE WITH SET SCREW

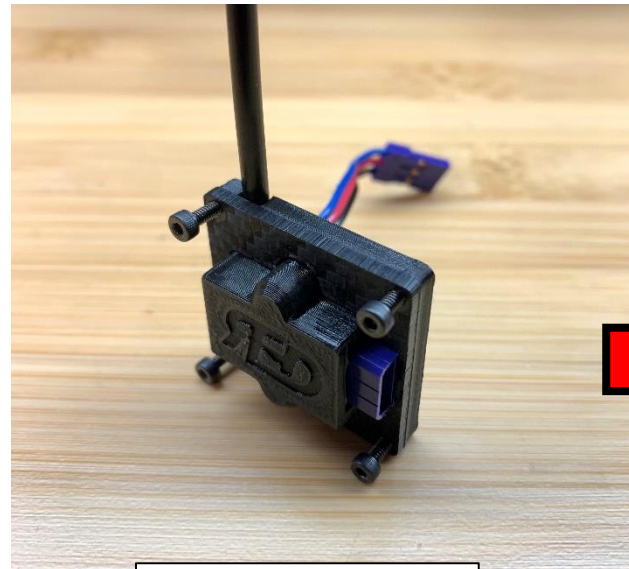



INSERT SMALL SCREWS

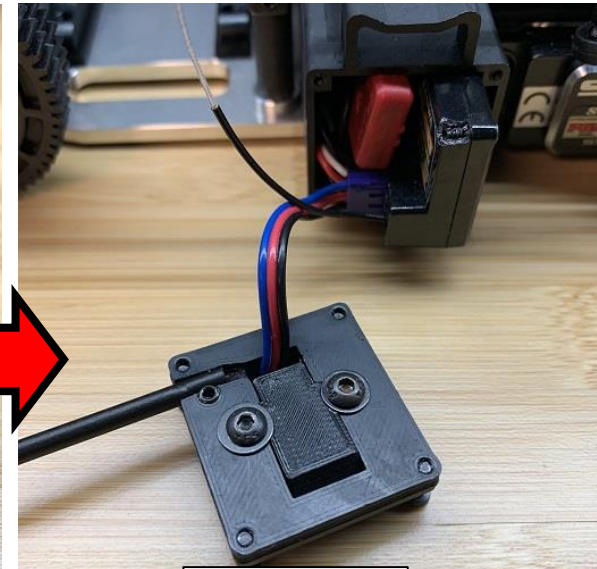


PLUG INTO RX

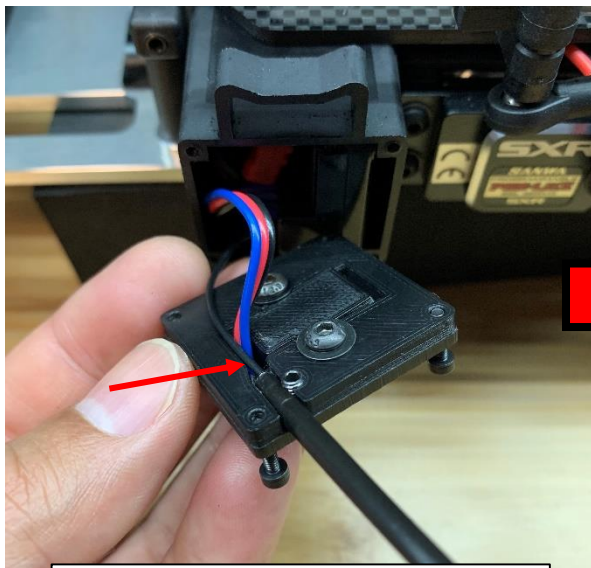

INSERT ANTENNA WIRE INTO TUBE

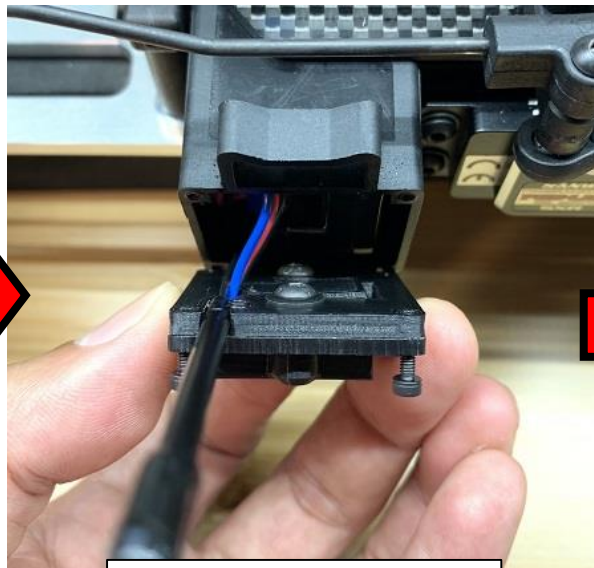

TUCK IN WIRES AND CLOSE

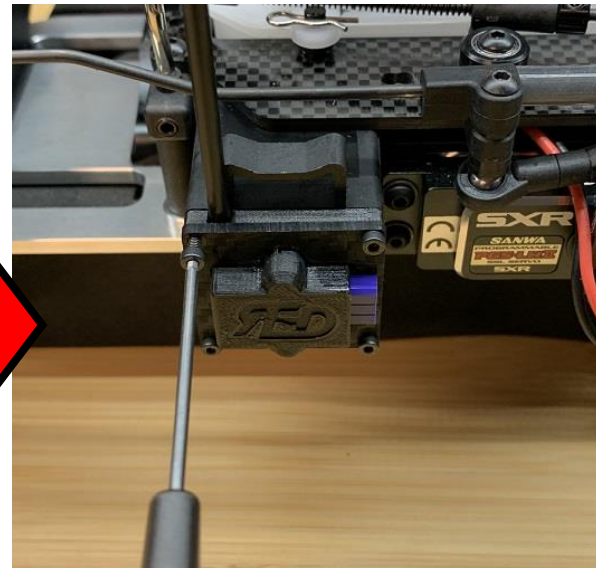

DONE