



# RED1RC

## XTREME SUPER DIABLO

### BODY STIFFENER

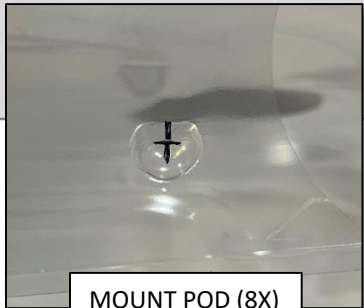

MOUNT POD (8X)

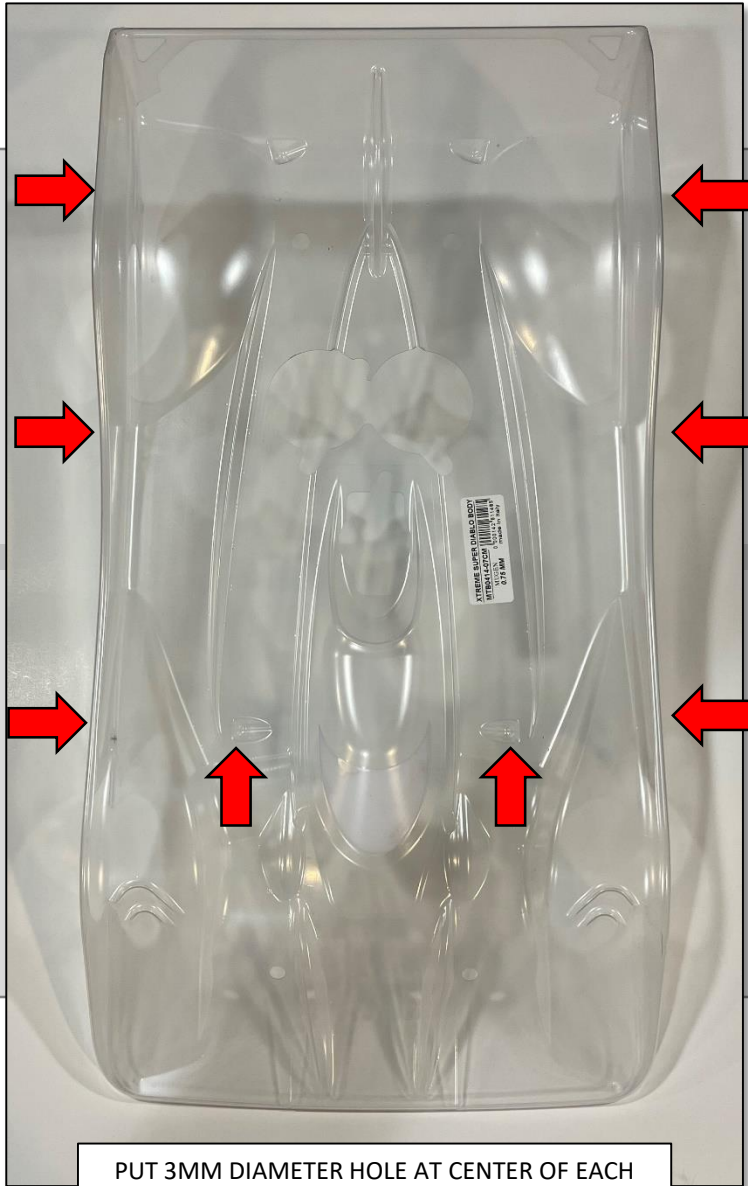

PUT 3MM DIAMETER HOLE AT CENTER OF EACH MOUNT POD (IN RED ARROWS) USING A REAMER.



MOUNT SCREWS ON SIDES



LOCATE HOLES, MARK/PUT HOLES ON BODY AND MOUNT SCREWS

