


TUBBY LEVER PULL 145MM

INSTALLATION INSTRUCTIONS


STEP 1 - FITTING THE LATCH

1. Prepare handle height on door, recommended height is between 900-1000mm
2. Draw a horizontal line on the door at your nominated height from edge of the door to 60mm in from the door edge.
3. Repeat the steps above on the other side of the door
4. Drill a 25mm latch hole on the door edge
5. Drill a 25mm hole through the door face

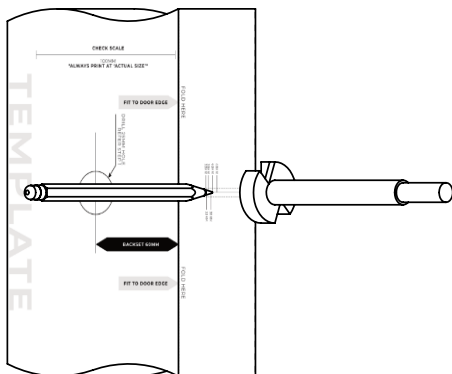


STEP 2 - FITTING THE LATCH

6. Mark and chisel door edge for the latch face plate, using the plate as your template.
7. Predrill the wood screw holes with the appropriate size drill
8. Insert the latch and fasten with the wood screws provided.

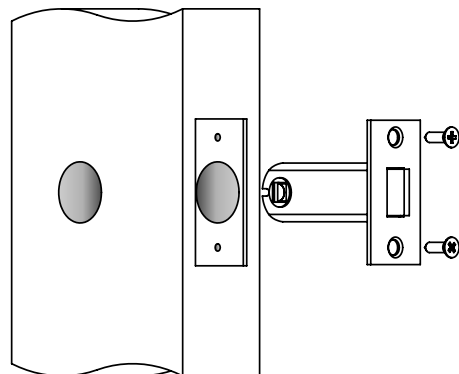

STEP 3 - FITTING THE LEVER


9. Screw the screw posts onto one side of the lever using the 2x 15mm M4 screws provided
10. Place the spindle halves in the levers and insert into the follower of the installed latch
11. Mark the screw holes whilst lever is inserted into the latch
12. Once holes are marked remove the lever from the latch and drill the fixing holes
13. Place one side of the lever back into the latch, and hold in position
14. Place the other side of the lever on the opposite side and fix the levers together using the 2x 35mm M4 screws
15. Check all fixings are tightened, then test the operation of the lever.
16. Screw the 4x brass face screws into position and gently tighten. It is recommended that you cover the head of the screwdriver with soft fabric or similar to prevent scratching the face screws when installing (or simply use fingers to tighten).

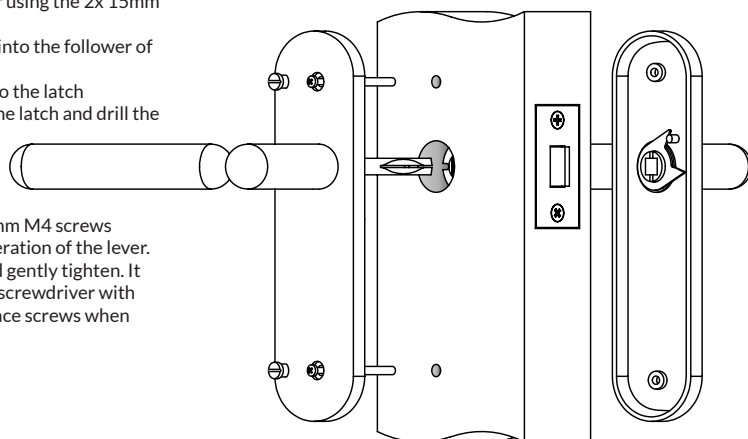



TUBBY LEVER PULL 145MM

INSTALLATION INSTRUCTIONS

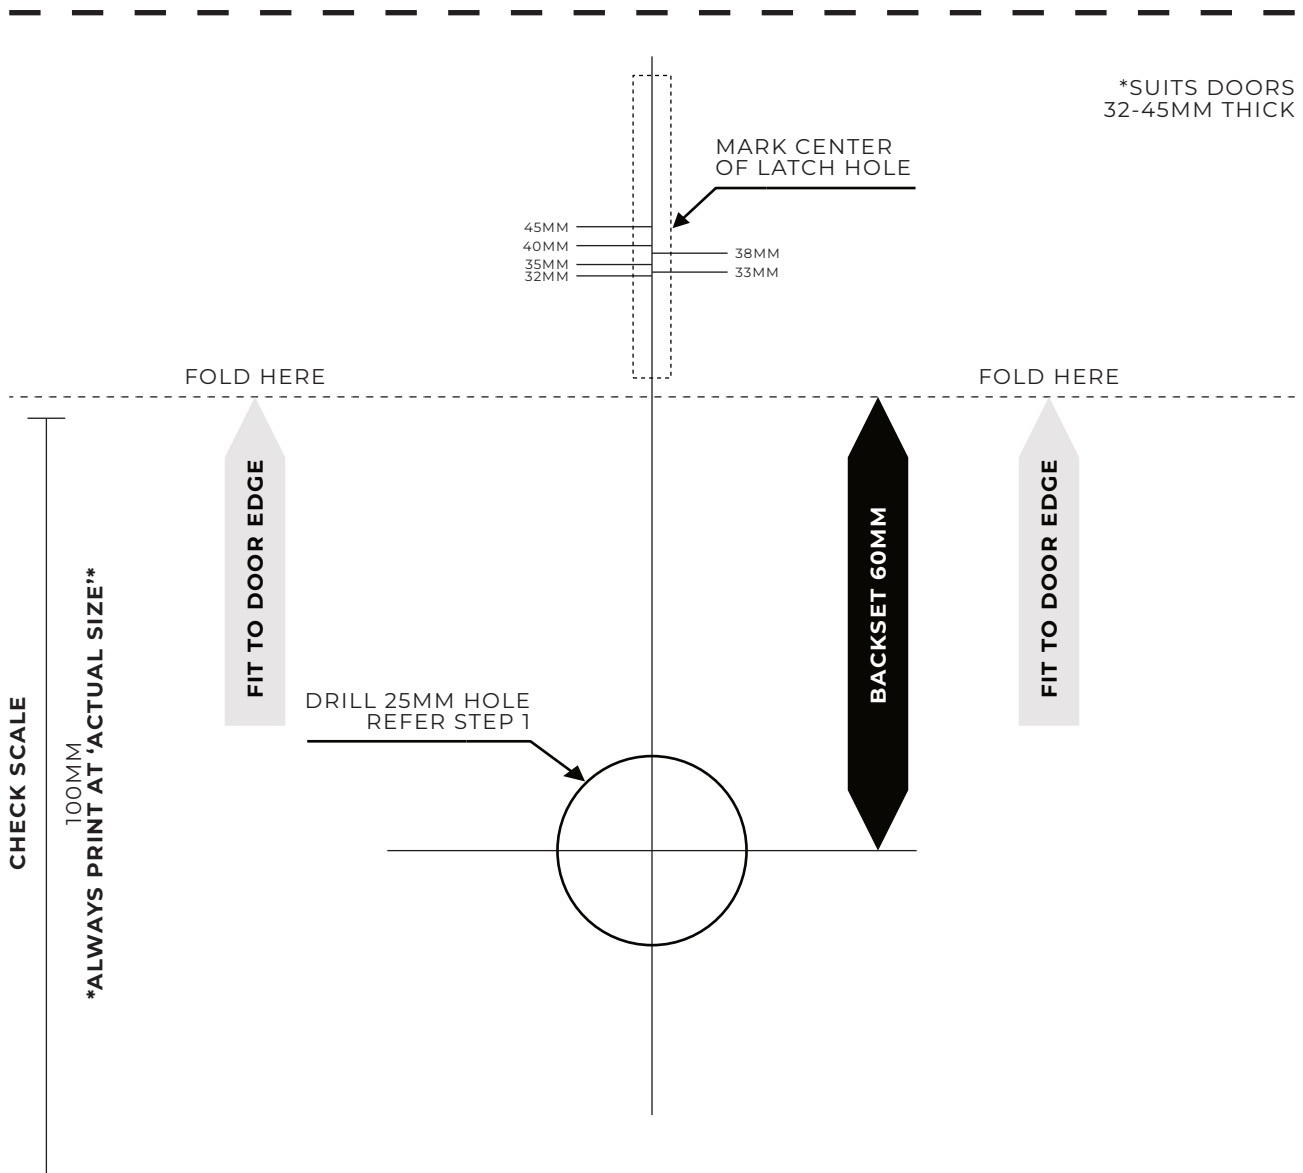

TEMPLATE