

270-degree Awning Installation Guide



1. Preparing brackets and 8 sets of bolts and nuts (round-head bolts).

Included Components:


- 2 x Main Brackets
- 2 x Support Brackets
- 8 x Round-Head Bolts
- 8 x Nuts
- 8 x Washers
- 1 x Allen Wrench

2. For each of the four holes, first place a washer, then insert a bolt. Repeat this process for all four holes.



3. Secure all four bolts by tightening the locking nuts. The other one follows the same process.

4. Slide four M8 hex bolts into the awning track.

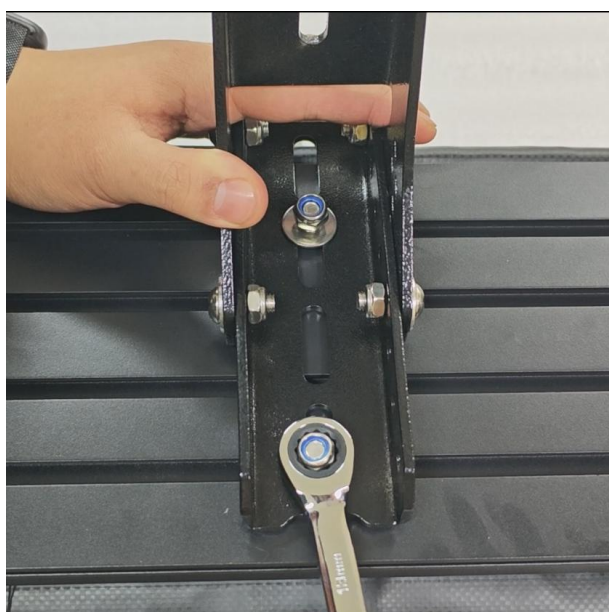

5. Place the brackets onto the bolts, then add the washers. Secure them by tightening the locking nuts.

6. Repeat the same process on the other side.



7. Slide the square bolts into the crossbar, then place both brackets onto the square bolts. Secure them tightly using locking nuts.

Thickness: 4.3 mm Diameter: 18.4 mm Length: 24.7 mm

