

HOW TO BUILD A SMALL POND

ITEMS YOU WILL NEED:

- 7 x 10 ft. PVC Pond Liner
- TotalPond® Complete Filter Kit with Pump
- 1/2 in. ID Vinyl Tubing
- TotalPond® Ceramic Frog Spitter
- TotalPond® Floating Lily Variety Pack (optional)
- Rocks and mulch for landscaping
- Rope or string
- Shovel





Step 1: Start by using a piece of string or rope to mark the shape and location of the pond. This pond is approximately 3 ft. x 6 ft., with a depth of 1.5 ft.



Step 4: Lay the liner. There should be at least a 10-12 in. overhang. If roots and/or debris are present, line the bottom with old carpet or sand to protect the liner from punctures.




Step 2: Once you are happy with the shape, start digging the first tier of the pond. We recommend having multiple levels in your pond to hold plants and accessories.



Step 5: Begin filling the pond. Adjust the liner edges, smoothing any wrinkles as it fills. Stop filling halfway.



Step 3: Begin digging the second tier of the pond. Keep some dirt for leveling if needed.

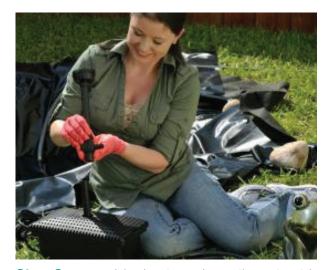

Step 6: Assemble the Complete Filter Kit with Pump using the nozzle head of your choice.





Step 7: Using 1/2 in. ID Tubing, connect the Ceramic Frog Spitter to the diverter valve on the assembled Complete Filter Kit with Pump.



Step 8: Place the Complete Filter Kit with Pump assembly in the center of your pond and continue filling the pond with water.



Step 9: Add Chlorine Remover before adding any fish or plants to water. Chlorine Remover detoxifies heavy metals from water and instantly removes chlorine and chloramines.



Step 10: While the pond is filling, secure the liner with stones. Add a ledge of decorative rocks around the perimeter to hide the liner edge. The ledge can be a couple of inches deep.



Step 11: Fold the liner under or trim the excess. Then landscape around your pond with plants and mulch to disguise the liner edge.



Step 12: Add floating lily pads to your pond for a personal touch (these can be real or fake). Enjoy!

