


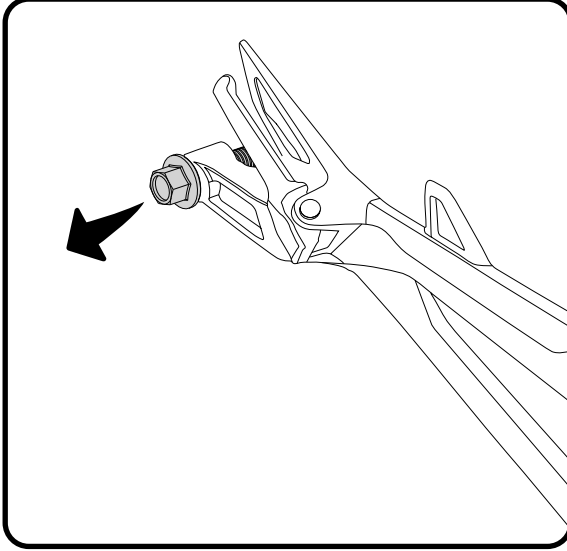
Montaj Kılavuzu • Mounting Instructions

NC 700 X/S - 750 X/S 2012-2021 Uyumlu Egzoz Koruma Takozu • NC 700 X/S / 750 X/S 2012-2021 Compatible Exhaust Guard Wedge



No	Adet • Qty.	Parça • Parts	No	Adet • Qty.	Parça • Parts
A	1x	 (Egzoz Koruma Takozu) (Exhaust Guard Wedge)	C	1x	 (M8 Pul) (M8 Flakes)
B	1x	 (8x90 İmbus Civata) (8x90 Imbus Bolt)	★	1x	(Orjinal Somun) • (Original Nut)

Gerekli Aletler • Required Tools	
	(6 Alyan) • (#6 Allen)

1



2

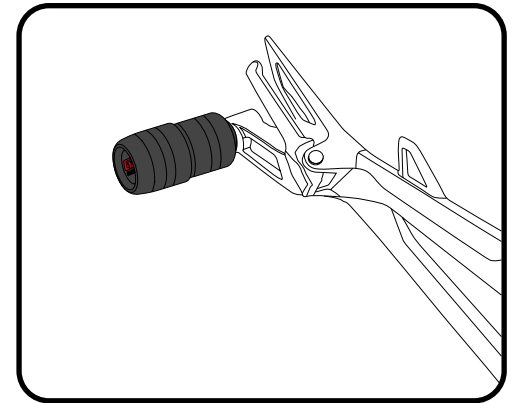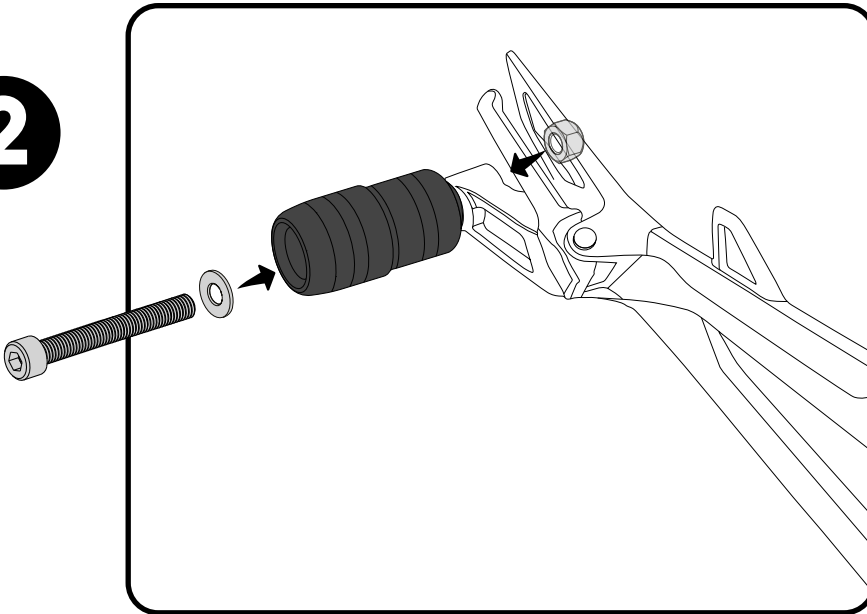

Montaj Talimatları

- 1- Aşama 1'de gösterildiği gibi motosikletin üzerinden çıkan orjinal civatayı sökün.
- 2- Takozu aşama 2'de gösterilen yere konumlandırın. 8x90 imbus civatayı pulla beraber takozun içine yerleştirin ve 6 numara alyan ile sabitleyin.

Mounting Instructions

- 1- Remove the original bolt from the motorcycle as shown in step 1.
- 2- Position the wedge where shown in step 2, insert the 8x90 imbus bolt with the flake into the wedge and fix it with the number 6 allen.