


Sandmaster – COMPACT

Installing the Sand Flow Cube Upgrade Kit

Replacing the T-Junction on the Sandmaster compact and with the Sand Flow Cube upgrade kit provides a more efficient flow of Air/Oxide ratio giving better sandblasting results.

- 1) Ensure the Pressure pot is depressurized.
- 2) Disconnect the Sandblasting Hose to the right of the T-Junction.
- 3) Disconnect the Airline just below the ball valve.
- 4) Disconnect the T-Junction from the Pressure Pot, ensure you have a container ready to capture the oxide in the pot.

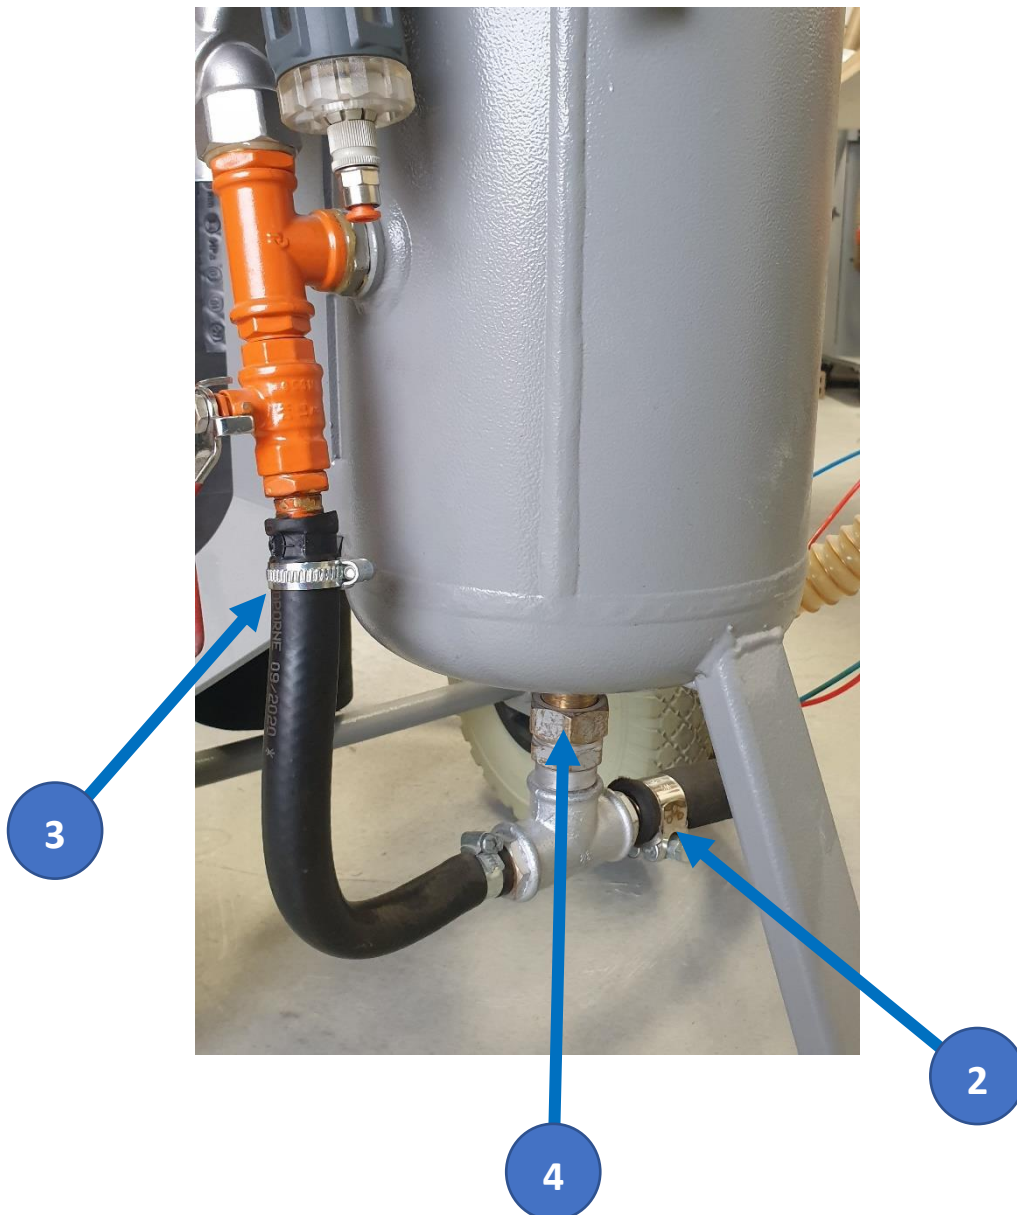




T-Junction Removed



Sand Flow Cube Upgrade Kit

Installation

- 1) Connect the Sand Flow Cube to the bottom of the pressure pot.
- 2) Connect the Black hose to the bottom of the ball Valve.
- 3) Connect the Sandblasting Hose to the Right side of the Sand Flow Cube.

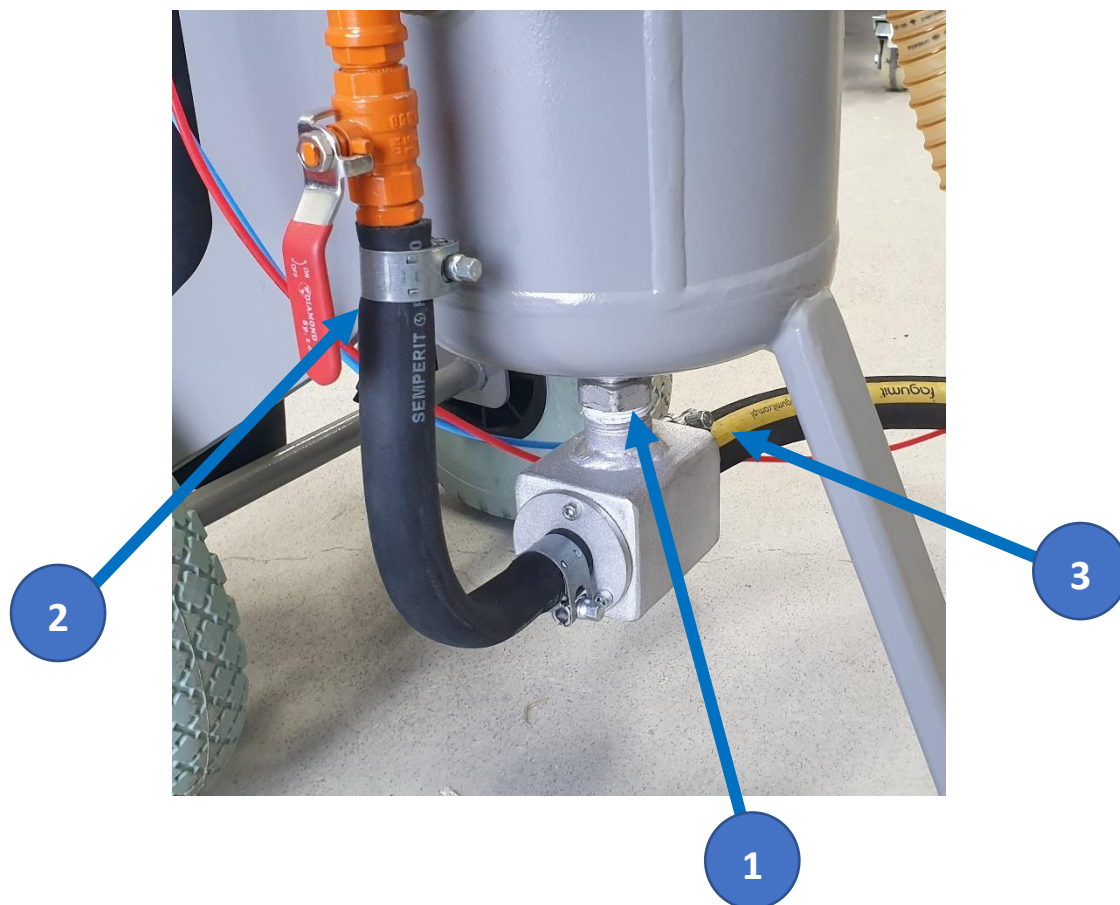

Refill the Pressure pot with Oxide, Pressurize and you are ready to Sandblast.