
a step-by-step guide



a step-by-step guide

Materials Needed For Your Artificial Grass Installation

- Artificial Grass
- Class II Road Base
- Weed Barrier Geotextile Fabric
- Galvanized Nails (6"-60D or 5"-40D)
- Seam Tape and Turf Glue
- Artificial Grass Infill (If Needed)

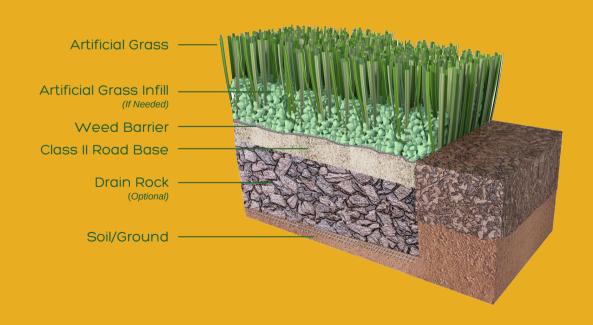

a step-by-step guide

Tools Needed For Your Artificial Grass Installation



- Tape Measure
- Shovel
- Pick
- Grading Rake
- Wheelbarrow
- Plate Compactor or Dirt Tamper
- Gloves
- Utility or Carpet Knife
- Scissors
- Hammer
- Drop Spreader
- Power or Push Broom



















a step-by-step guide




Remove Existing Sod

Remove 2-4 inches of your existing lawn and dirt.



Add The Base

Evenly spread 2-3 inches of road base over the area.

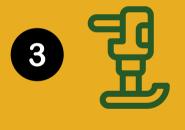

Compact The Base

Lightly wet the road base and go over it with a plate compactor.



Lay The Weed Barrier

Lay the weed barrier to prevent vegetation from sprouting through the turf.

a step-by-step guide



Roll Out The Turf

Roll out the artificial grass and position where needed.



Cut To Size

Cut the artificial grass to fit the area.





Secure The Seams

Correctly fit the seams and join them with seaming tape and glue.





Secure The Turf

Stretch the artificial grass and then place galvanized nails every six inches along the perimeter.

a step-by-step guide





Spread The Infill

If needed, use a drop spreader to evenly disperse the proper amount of infill.



Broom The Infill And Turf

Use a power or push broom to brush the artificial grass.





Enjoy Your Artificial Grass

Kick back, relax, and enjoy your brand new Artificial Grass!

You won't have to worry about mowing your lawn anymore.

a step-by-step guide

Tips

- Prior to installation lay artificial grass out under the sun for at least 1-2 hours to allow artificial grass to acclimate. This will make the backing less stiff and the artificial grass easier to be swept.
- Always stretch and install artificial grass taut.
- Do not overlap seams.
- Lay all rolls in the same direction so the blades of grass all point in the same direction.
- Never drive nails into base too far because this will create a noticeable dip.
- Make sure base surface is as level and as smooth as possible.
- Create a slight grade for optimal drainage.
- In some cases the infill is optional. Never use regular sand for infill. Use only manufacturer recommended infill material.
- Optional: Fit a treated wooden frame around the border of the area to be covered with artificial grass.

a step-by-step guide

Disclaimer

This guide is for informational purposes only. LaSiempreVerde.com has no control over the conditions under which Buyer uses the product. Therefore, LaSiempreVerde.com does not and cannot warrant the quality of results that may be obtained by its use. LaSiempreVerde.com does not warrant that the product will meet Buyer's requirements or that the use of the product will meet Buyer's needs. LaSiempreVerde.com is not responsible for problems caused by improper use, handling, or installation of the product by third parties made after the delivery of the product. LaSiempreVerde.com is not liable for any injury or damage caused by the product due to misuse or improper installation.