


Rockslide installation (GE4) (FIG.1)

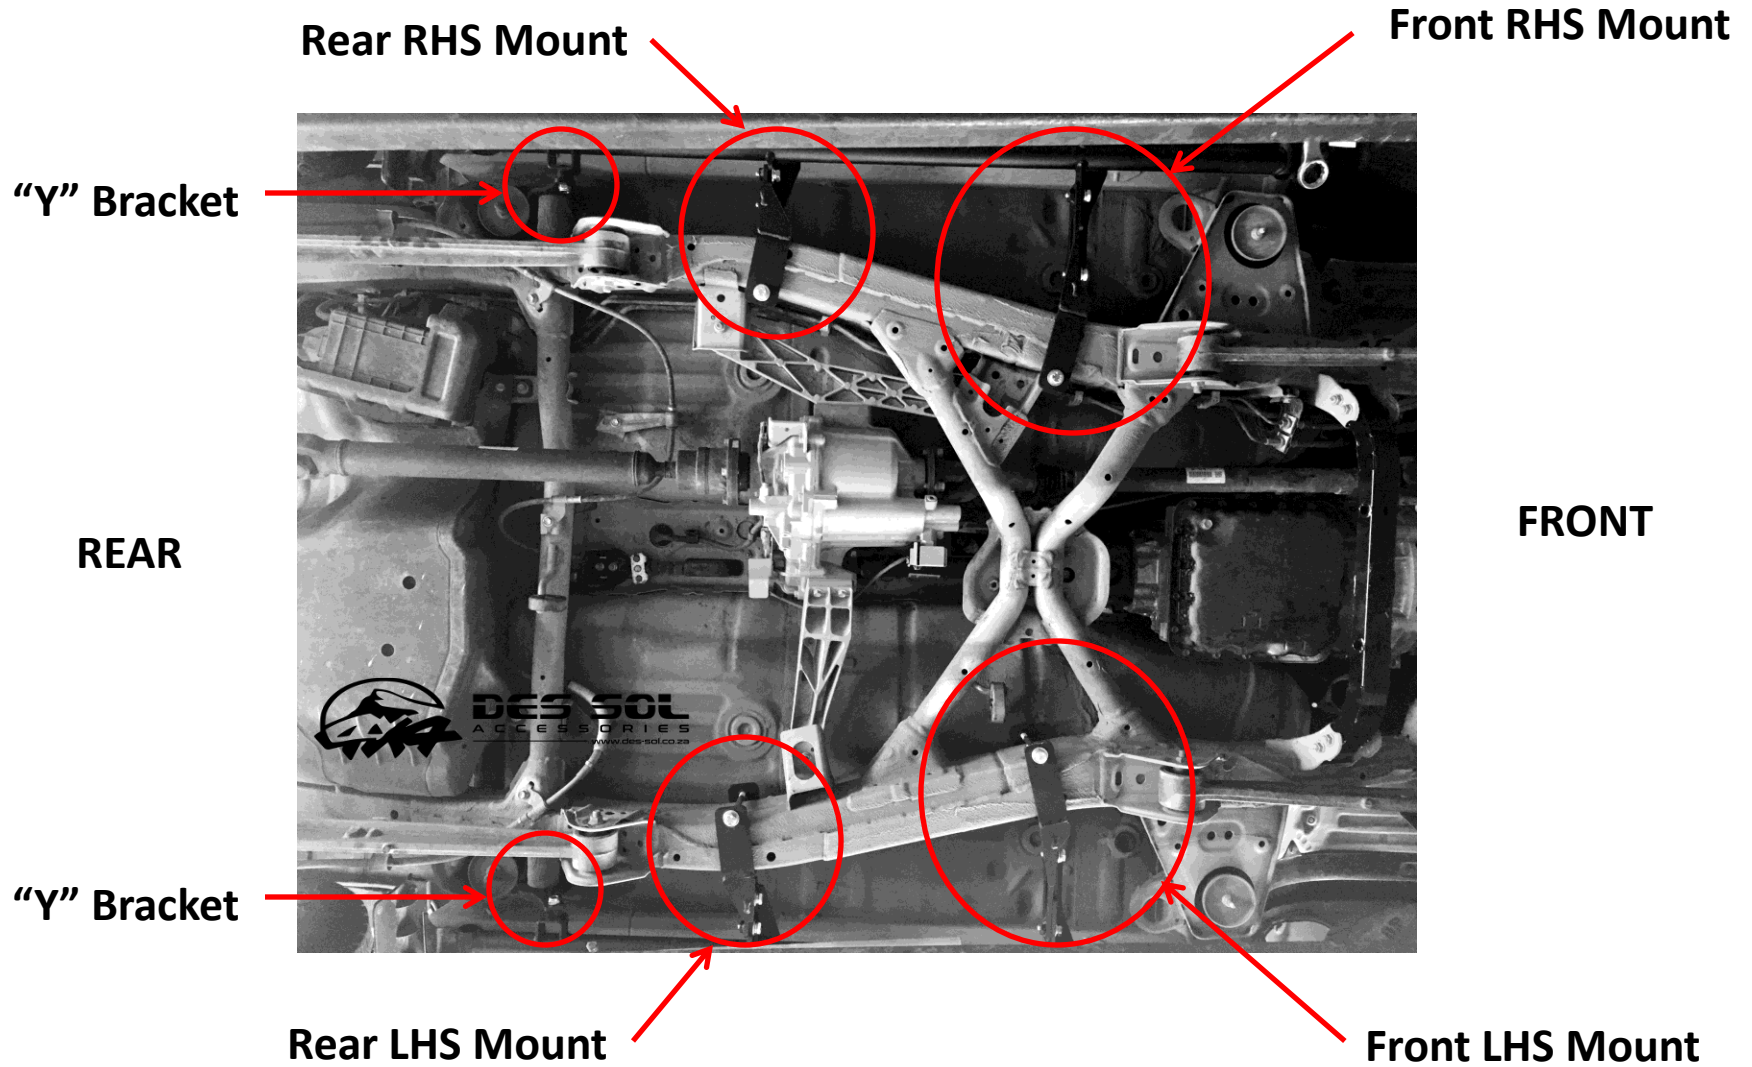

See Figure 1

1. Mount front RHS mounting bracket first. Insert the long bolt and ensure that it touches up against the TC front RHS mount (this will determine your positioning) – Do Not Tighten
2. Insert your rear RHS mounting bracket - Use the drainage as reference (Half covered) and insert long bolt – Do Not Tighten
3. Fit the RHS Rockslide and insert the bolts – Measure the gap between the wheel arch and rockslide must be 65mm-70mm (See FIG.2)
4. Insure that the rock slider is level with an even gap between the side sill and the arch – 15mm-20mm (see FIG.3)
5. Tighten the main mounting brackets, recheck the slider is level and has a consistent gap – tighten and recheck. Adjust if necessary
6. Fit the “Y” bracket over the chassis tube, add large spacer on the slider then fit the bottom of the “Y” bracket on the slider and tighten.
7. Repeat steps 1-6 on the left hand side using FIG.1 as a location reference.



65mm-70mm



FIG.3

15mm-20mm

