



Wildog Accessories

INSTALLATION INSTRUCTION

PRODUCT DESCRIPTION:

- Suzuki Jimny Front



PRODUCT SAFETY & LEGAL DISCLAIMER

• IMPORTANT READ ALL INSTRUCTIONS CAREFULLY BEFORE INSTALLING. FAILURE TO DO SO MAY CAUSE PERSONAL INJURY OR DAMAGE TO PRODUCT AND/OR PROPERTY.

- Review the product package and contents prior to beginning the installation.

Take care when opening the packaging and removing items. If a return is needed you will want to return the product in its original packaging if possible.

- This instruction guide is provided as a GENERAL installation guide, some vehicles vary dimensionally and may require additional steps.
- Test fit the product on the vehicle prior to any third party modifications and or finishing. The manufacturer and/or distributors do not accept responsibility for third party charges, labor and or third part replacement modifications. Some modifications may void the factory warranty.
- Exercise due-diligence when installing this product. The manufacturer and distributors of this product do not accept any responsibility for vehicle damage or personal injury resulting from the installation of this product. Careless installation and operation can result in serious injury or equipment damage.
- This product is for general off-road use. All liability for installation and use rests with the owner/operator.





Wildog Accessories

INSTALLATION INSTRUCTION

PARTS INCLUDED IN THE LIST:

A	Complete & assembled bumper	1
B	Winch plate	1
C	Chassis Stiffeners	2
D	Tightening bracket	2
E	Radiator plate	1
F	Wheel Covers	2
G	M8 x 70 Hex Bolts	4
H	M8 x 35 Hex Bolts	7
I	M8 x 25 x 2 Washers	25
J	M8 Nyloc Nuts	11
K	M10 x 40 Hex Bolts	8
L	M10 x 25 x 3 Washers	16
M	M10 Nyloc Nuts	8
N	M12 x 40 Hex Bolts	4
O	M12 x 30 x 3 Washers	4
P	Sets of light connectors	2

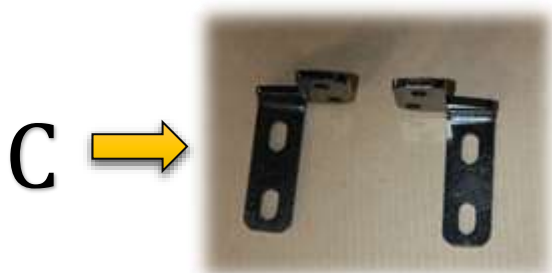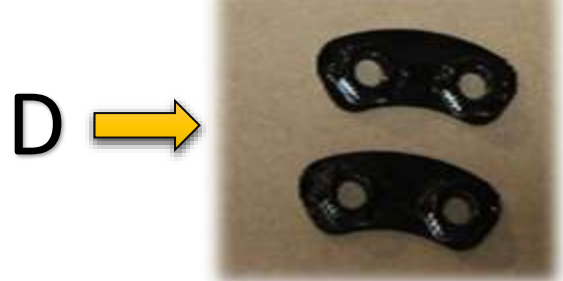



Wildog Accessories

INSTALLATION INSTRUCTION

G →



L →



H →



M →



I →



N →



J →



O →



K →



P →





Wildog Accessories

INSTALLATION INSTRUCTION

Please insure that all parts and fasteners are accounted for before starting the fitment , if any parts are not included please give us a call on [065 100 62525](tel:06510062525) or [074 227 1524](tel:0742271524) and we will gladly assist you .

ESTIMATED TIME FOR INSTALLATION:

3-4 hours

Please follow the necessary steps to complete your fitment.

BEFORE

AFTER



STEP 1

Remove the following from the vehicle:

- Plastic bumper
- Standard grill.






Wildog Accessories

INSTALLATION INSTRUCTION

STEP 2


- The holes indicated on the chassis flange should be enlarged to 12mm.
- All drilled or cut parts should be coated to prevent corrosion.

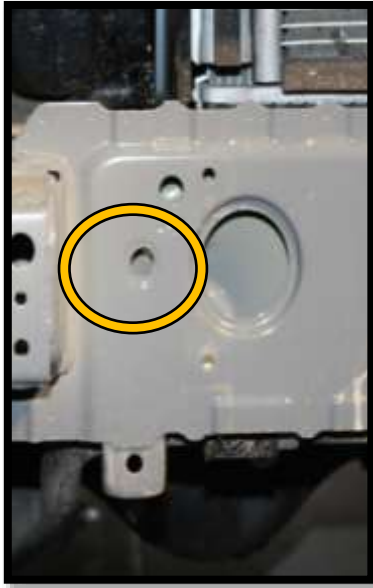

ENLARGE TO
12 MM



- Apply the Tightening bracket on the inside of the chassis mount behind the opening enlarged to 12 mm.

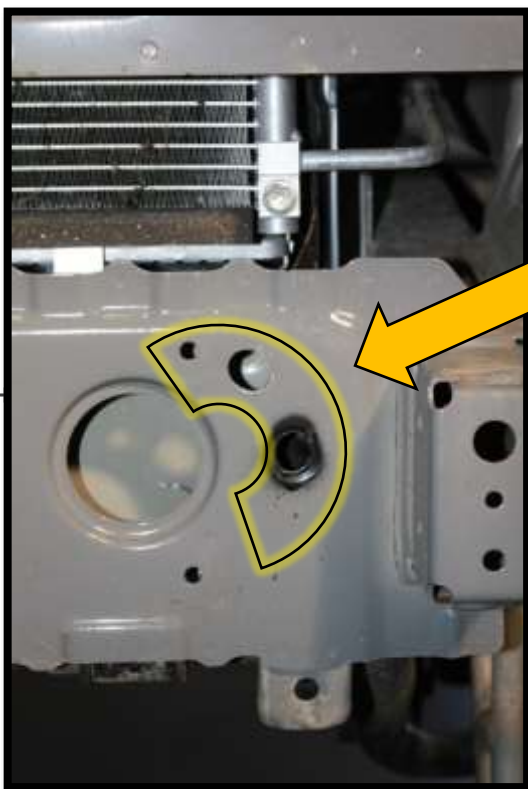




Wildog Accessories

INSTALLATION INSTRUCTION



- Insure that the winch plate's vertical brackets are in alignment and centred with the vehicles chassis before tightening all fasteners.
- Torque the chassis mount fasteners to (95 NM).
- Spray and mark each fastener afterwards.

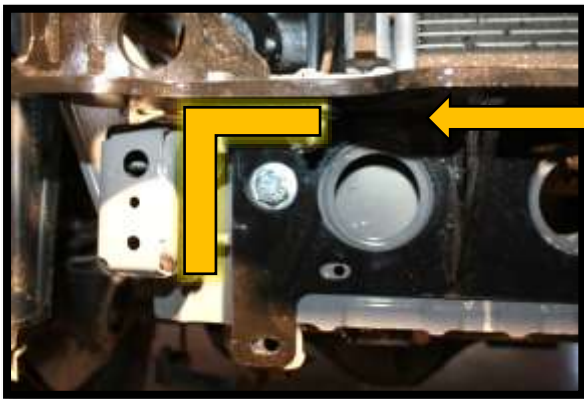

- Bolt the chassis stiffener to the winch plate and tightening bracket.
- Remove the light boxes from the bumper to fasten the bumper to the winch plate.





Wildog Accessories

INSTALLATION INSTRUCTION

- Ensure that the bumper is not pinching the lights or the fenders when fastening all bolts.



- When the Bumper is fitting correctly drill two holes (M10) for the locating bolts to be added and fastened.
- Fasten the light boxes after the fitment is complete.



- **STEP 3**
 - Do not cut any wires, Only peel back to small pieces of wire coating , Attach the female and male lugs to the fog lights harness , cover and tidy all open wires and loose parts.
 - Do not remove the original light fitting.
 - Connect the fog lights to the harness





Wildog Accessories

INSTALLATION INSTRUCTION

STEP 4

- Fasten the wheel covers to the bottom of the bumper.



- Cut the inner fender liners evenly with the bumper, and tuck them in neatly behind the bumper.
- When looking at the front of the vehicle the left inner fender liner should be fastened with cable ties for safety.



- Please ensure that all parts and fasteners are fitted and tightened before letting the vehicle leave your premises.
- Retention all fasteners after 3 months or 500KM of installation to ensure all parts are still fastened and safe for the client.

Here is too many safe adventures.



Wildog Accessories

INSTALLATION INSTRUCTION

A Warranty form is included with all Wildog Accessories orders placed, please insure that it is completed with every fitment and retention of the bumper if there is no Warranty form completed your 1 year Warranty on the bumper will be voided.



Wildog Accessories (Pty) Ltd

www.wildog.co.za
sales@wildog.co.za
17 Akwamaryn Street
Klerksoord Pretoria

Contact numbers:
0651006252
0742271524

Jobcard

Date:

Fitment Centre Reference:

INSTALLATION AND WARRANTY FORM											
CUSTOMER DETAIL											
Customer Name		_____						Postal Code		_____	
Address		_____						E Mail Address		_____	
Telephone No		_____		Cell Number		_____		_____			
DISTRIBUTOR / FITMENT CENTRE DETAIL											
Company Name		_____						Contact Person		_____	
Address		_____						Technician Name		_____	
Telephone No		_____		_____		_____		_____			
VEHICLE DETAIL											
Vehicle Make		_____		Model		_____		Year		_____	
Registration No		_____		VIN Number		_____		Odo/Speedo Reading		_____	
ACCESSORIES FRONT			ACCESSORIES REAR				ACCESSORIES				
Bumper	Yes	No	Bumper	Yes	No	Bash plate	Yes	No			
Winch	Yes	No	Spare wheel carrier	None	Single	Dual	Lower c/arms	Yes	No		
PDC's	Yes	No	PDC's	Yes	No	Transfer c/p	Yes	No			
Radar box	Yes	No	Towball	Yes	No	Rock Sliders	Yes	No			
Bolt on towbar	Yes	No	Wiring harness	Yes	No	Roof rack	Yes	No			
Other	_____		Other	_____		Other	_____				
Surface coating _____			Surface coating _____								
INSTALLATION DETAIL											
Torque checks		_____		NW		_____		Torque checks		_____	
Lock bolts		_____		NW		_____		Lock bolts		_____	
Rubbbers		_____						Rubbbers		_____	
Led lights		_____						Led lights		_____	
COMPONENTS FITTED											
Front	Winch plate	Yes	No	Rear	Spine	Yes	No	Fitment Centre		_____	
	Stiffners	Yes	No		Shell	Yes	No	Technician Name		_____	
	Bumper Shell				Resistors	Yes	No				
	Radiator plate	Yes	No		Recovery points	Yes	No				
	Lights	Yes	No		Bumper step	Yes	No				
	Resistors	Yes	No		Lights	Yes	No				
Other		_____		Towball		Yes	No	Signature : Fitment Centre (At Re-Check)		_____	
Serial #		_____		Trailer plug		Yes	No				
				Other		Yes	No				
				Serial #		_____		Signature : Customer (At Re-Check)		_____	
CUSTOMER DECLARATION					OTHER						
Signature : Customer (At Fitment)					Signature : Fitment Centre (At Fitment)					Copy 1 - Customer copy after 500km Copy 2 - Re-check Copy 3 - Customers Copy at Installation Copy 4 - To be returned to Wildog Acc - Remain in book for Fitment Centre Records	

It is essential to complete this card in full. Return to Wildog accessories via email to validate this warranty. No warranty form, no claim. Warranty will be void if retention is not done