

6-Ballon Bud Kit Assembly



Please inflate all balloons within 30 days of purchase to comply with Warranty Guidelines.

1.1


BALLOON/MANIFOLD ASSEMBLY

*** IMPORTANT ***

Edges of inflation ports are sharp and could cause injury or puncture balloons.

Twist as you push deflated balloons onto openings of each inflation port. Make sure balloons are seated all the way at the base of the manifold.

NOTE: See step 1.2 for color pattern example.

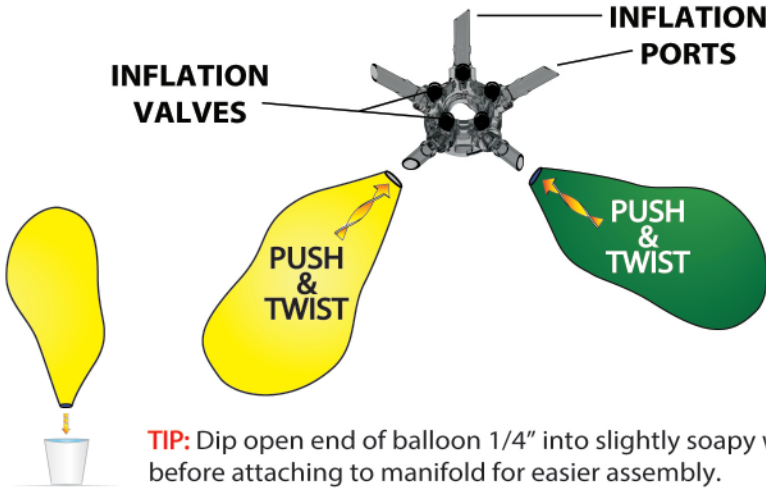

TIP: Dip open end of balloon 1/4" into slightly soapy water before attaching to manifold for easier assembly.

Attach all balloons to manifold before moving to step 1.2



1.2

BALLOON LAYER INFLATION

With the color pattern and placement of choice, and the angle of the ports slanting upward, moisten the needle and insert by pushing into the black inflation valve. Inflate balloons to approximately 8.5" in diameter or 26.7" circumference.

NOTE: Inflating to a universal size is more important than the same tightness of the balloons. Insert the needle to release air as needed to achieve uniformity.

Needle-style Inflation Tip
(Included with kit)

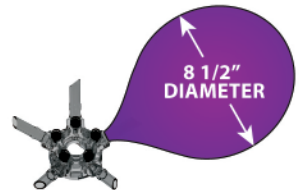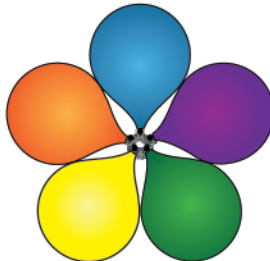

(26.7" Circumference)

DO NOT OVER-INFLATE!

WARNING!



**BALLOON MAY BURST
AND CAUSE INJURY!!!**

**USE EYE PROTECTION
WHEN INFLATING!!!**

BALLOON SIZING BAND 


(Band included with kit)

1.3

18" BALLOON INFLATION


Remove the air plug from the balloon. Inflate to a maximum diameter of 18" and replace the plug.

REMOVE PLUG

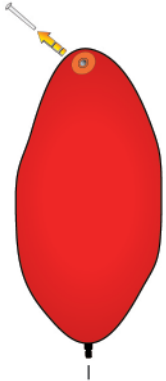

18" BALLOON

INFLATE BALLOON

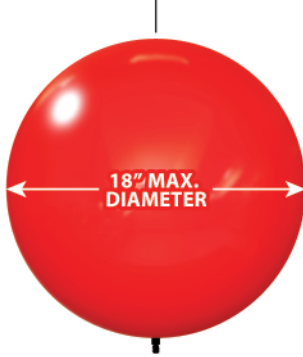


REPLACE PLUG



1.4 BALLOON LAYER/18" BALLOON ATTACHMENT

With the Threaded Plug facing upward on the 18" balloons, push the Hanger Cap onto the Threaded Plug and place the layer of balloons over the Hanger Cap with the inflation valves on the Manifold facing upward.

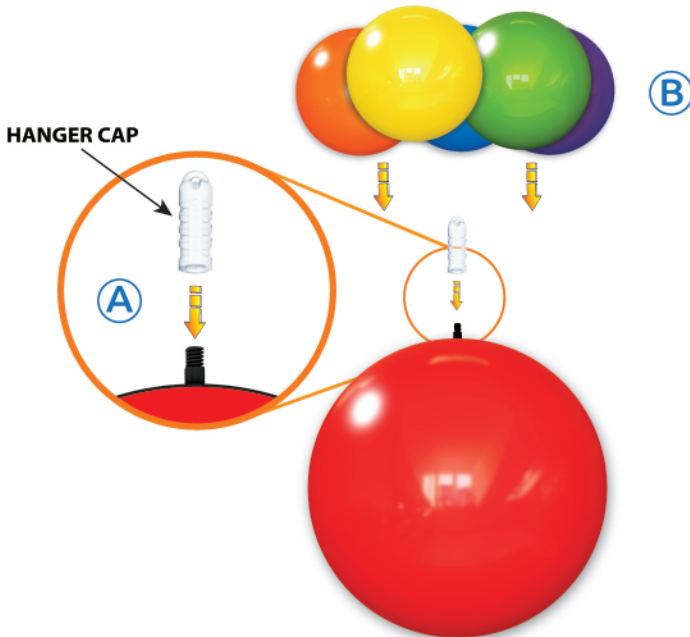

1.5 HANGER CAP/J-HOOK ATTACHMENT

Tie one end of the monofilament to the J-Hook and the other end to the magnet. Slide the J-Hook through the Hanger Cap


NOTE: Measure monofilament prior to hanging for desired hanging height.



15' Monofilament for hanging



15lb Strength magnet for hanging

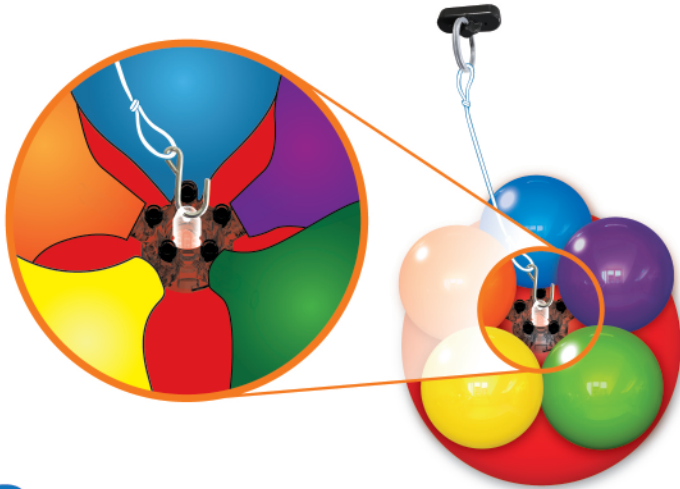

1.6 MAGNET/CEILING PLACEMENT

Attach the 6-Balloon Bud Kit to any metal surface with the included magnet and monofilament. If the ceiling is not accessible by ladder, refer to the Install/Removal How-To Guide that is provided with the Install/Removal Head.



Install/Removal Head
(Sold separately)

