Ceiling Column Kit Assembly

4-Layer & 2-Layer



1.1


BALLOON/MANIFOLD ASSEMBLY

* IMPORTANT *

Edges of inflation ports are sharp and could cause injury or puncture balloons.

Twist as you push deflated balloons onto openings of each inflation port. Make sure balloons are seated all the way at the base of the manifold.

NOTE: See step 1.2 for color pattern example.

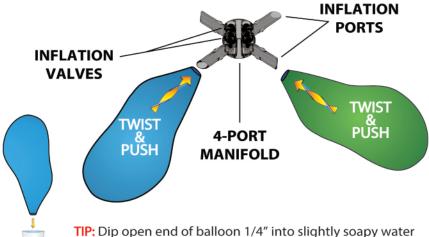

before attaching to manifold for easier assembly.

Attach all balloons to manifolds before moving to step 1.2


1.2

BALLOON LAYER INFLATION

Make sure each of the 4-port manifold levels has the correct color combination, with the same pattern for the spiral configuration. Using a needle-style inflation tip, moisten the needle and insert by pushing into the black inflation valve. Inflate balloons to approximately 8.5" in diameter or 26.7" circumference. Repeat assembly and inflation process with the remaining manifolds.

NOTE 1: Inflating to a universal size is more important than the same tightness of the balloons. Insert the needle to release air as needed to achieve uniformity.

NOTE 2: All four manifolds should have the same pattern to achieve the desired spiral configuration. The colors shown are for demonstration purposes only.







DO NOT OVER-INFLATE!




(26.7" Circumference)



1.3

30" BALLOON INFLATION


Screw the Spine Screw Plug into the deflated 30" balloon until completely seated in the balloon. Inflate through the black inflation valve until the balloon is tight.

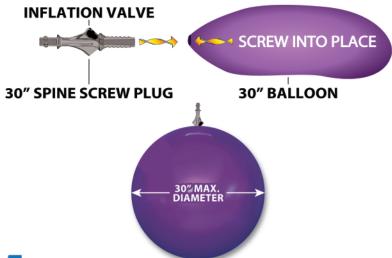

1.4 SPINE/BALLOON/MANIFOLD ASSEMBLY

Attach the 6" Spine Connector to the 30" Spine Screw Plug by twisting to click-lock into position. Place one of the inflated layers of balloons onto the Spine Connector and slide all the way down onto the 30" balloon.


NOTE: Repeat these steps with two more layers for the **4-Layer Kit**, leaving one layer for step **1.5**

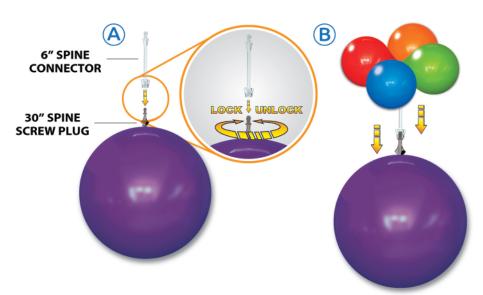

1.5 FINAL ASSEMBLY & J-HOOK ATTACHMENT


Connect the Spine Hanger to the top 6" Spine Connector and place the final layer of balloons over so the hanging loop is accessible. Tie one end of the monofilament to the J-Hook and the other end to the magnet.

NOTE: Measure monofilament prior to hanging for desired hanging height.

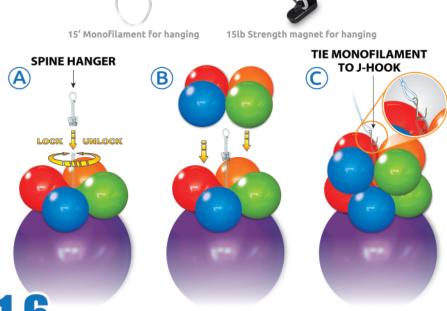

MAGNET/CEILING PLACEMENT

Attach the Ceiling Column Kit to any metal surface with the included magnet and monofilament. If the ceiling is not accessible by ladder, refer to the Install/Removal How-To Guide that is provided with the

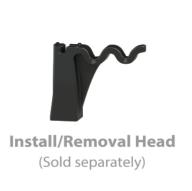

Install/Removal Head.

