

STEP
2

Signicade Balloon KIT ASSEMBLY

Push-Button Kit




Please inflate all balloons within 30 days of purchase to comply with Warranty Guidelines.

WHAT YOU'LL NEED

See Step ① For Inflation



**Inflated Balloon, Cup
& Stem Assemblies**

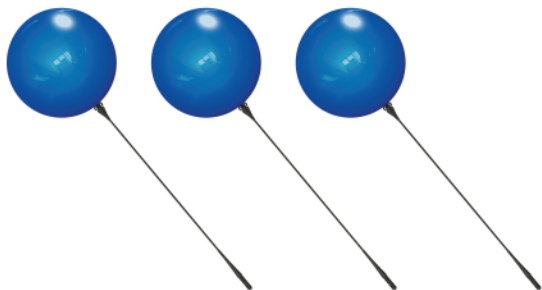

**Signicade®
3-Balloon Bracket**



or

**Inflated Balloon, Cup
& Stem Assembly**



**Signicade®
1-Balloon Bracket**



or

**Inflated Balloon, Cup
& Stem Assemblies**



**Signicade®
1-Balloon Bracket**



**PermaShine®
Adapter**




IMPORTANT Complete step ① on separate card before beginning the hardware assembly steps below.

DuraBalloon® 3-Balloon Signicade® Bracket Kit pictured

2.1 Open the bracket and clamp it around chosen shoulder of your Signicade® sign. Clasp near top and slide down so it tightens and fits snugly around the shoulder.

2.2 Once the bracket is clamped properly, insert the pin to lock the bracket into place.

2.3 Insert stems and snap-lock into ports on bracket.

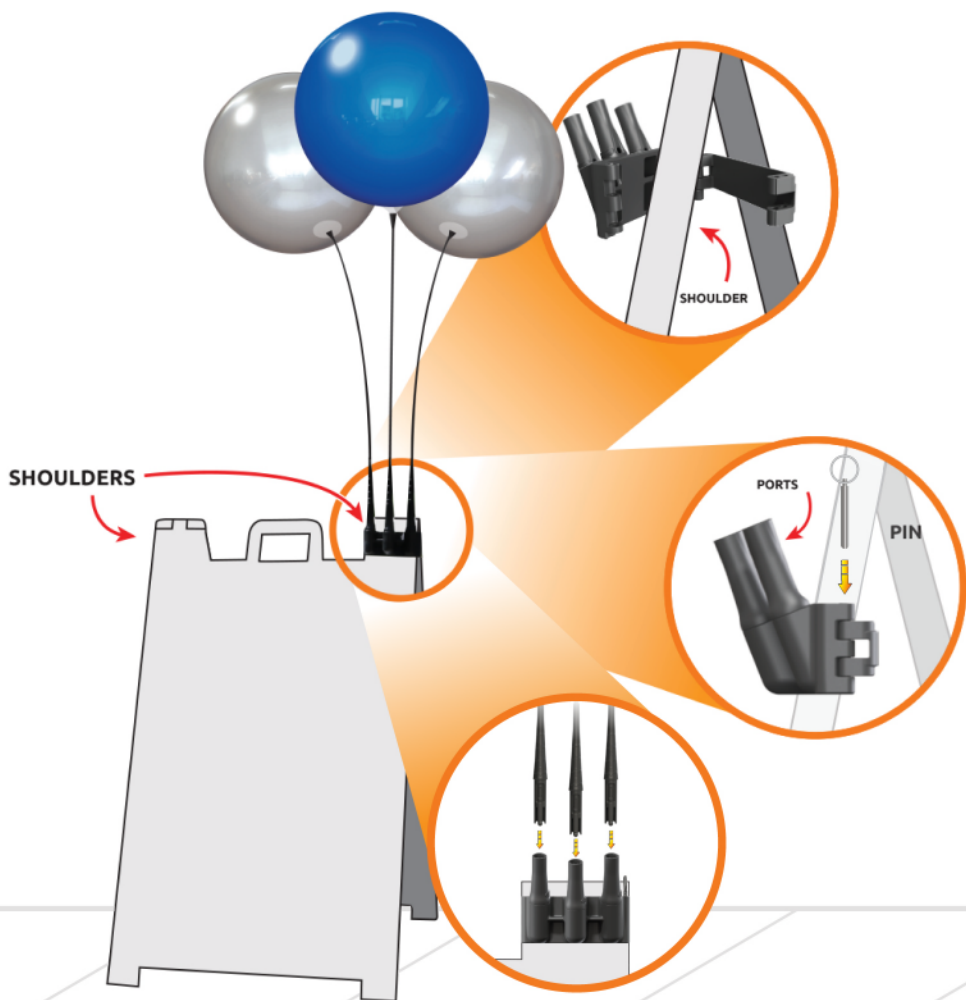

BOUQUET KIT ONLY


See Bouquet Kit Assembly Before Proceeding



Once you have completed the Bouquet Kit assembly, slide the Bouquet Adapter into the single port on the bracket, locking it into place with the push-button directed towards the hole on the bracket. Then, slide each stem into the holes on the adapter port as shown below in the Stem Placement diagram.

STEM PLACEMENT

- 1-Long Stem
- 2-Short Stem
- 3-Short Stem
- 4-Short Stem

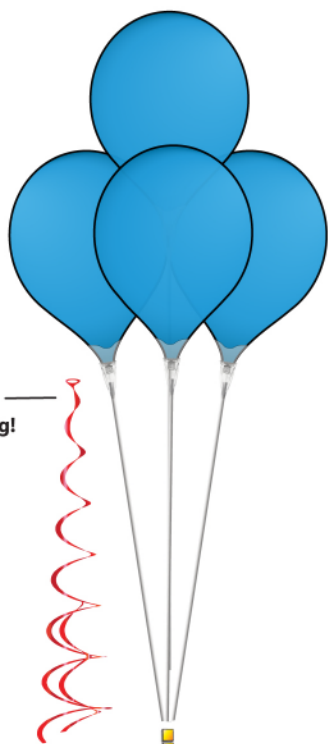

Ribbons are optional but are very eye-catching!



Bracket shown not attached to Signicade® for example only.

