

# Evolution Wine Tower

Installation Instructions for WT-47, WT-72, and WT-92 models (including extensions).



## Included Parts:

- (2) Acrylic Panels [Extension Kits include (1) additional Panel]
- E1 Wine Rods (varies by size)
- E1-Screws (included with Base kits)
- E1-Studs (included with Extension kits)
- Threaded Insert (included in all Wine Rods)
- 4mm Allen Key

## Optional Tools

- Drill (with torque setting)
- 4mm driver tip
- A handy friend

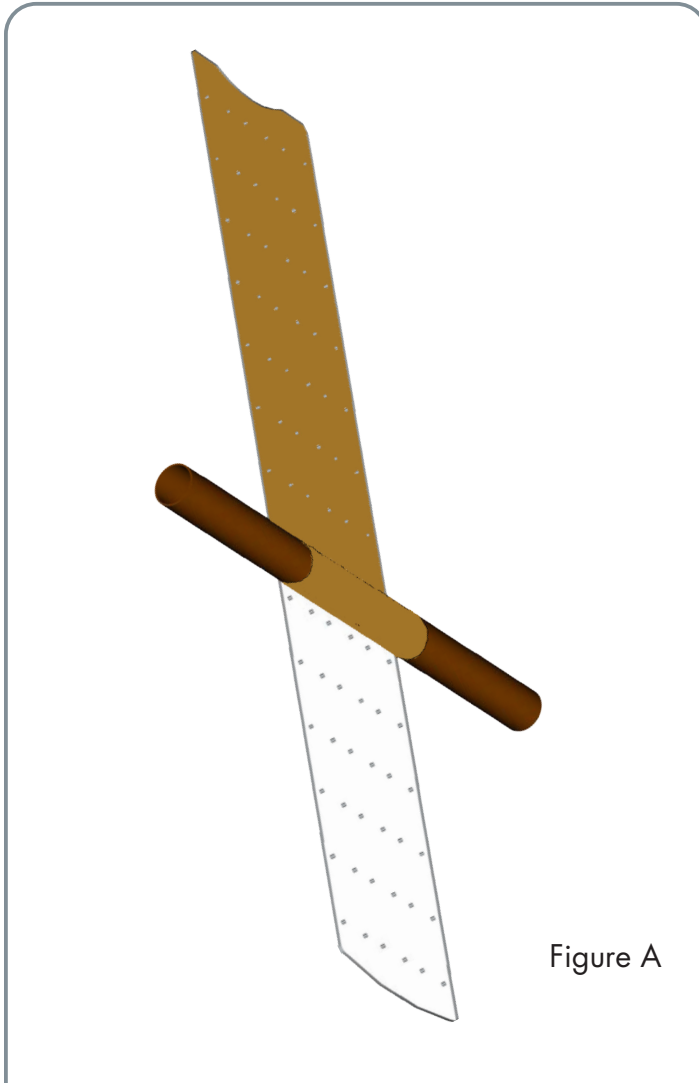


Figure A

The following instructions detail the process to build one Base Unit or a Base Unit with Extension Kits of the Evolution Wine Tower 47, Wine Tower 72, or Wine Tower 92 models.

## 1. Prepare the Panels

Remove the protective paper film from both sides of the panels. Acrylic can scratch relatively easily, so avoid using anything sharp, such as a razor blade, to remove the film.

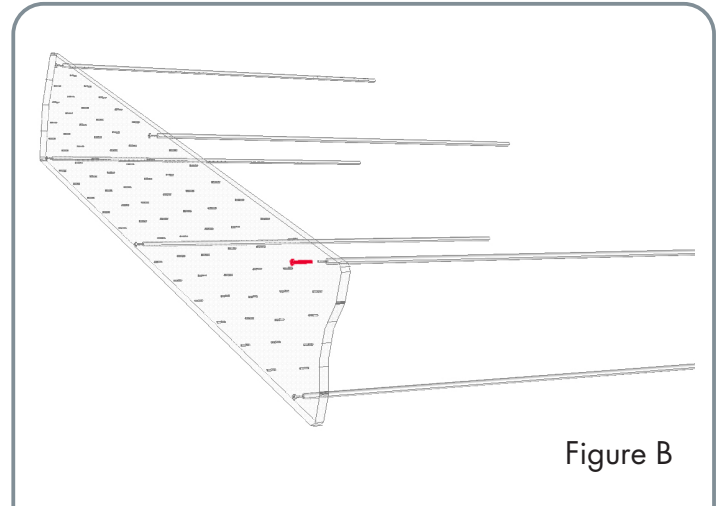


Figure B

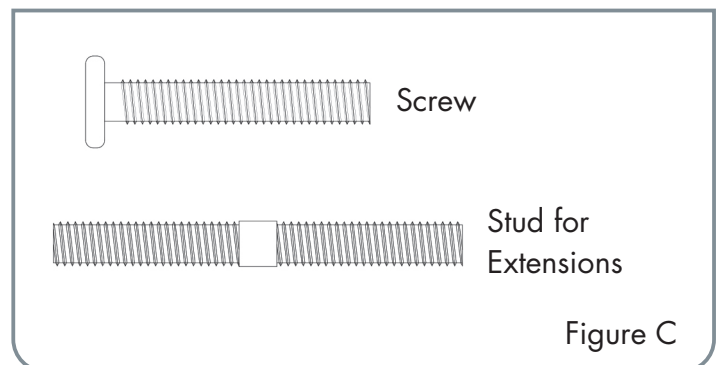


Figure C

## 2. Attach Rods to First Panel

Lay one panel down on its narrow edge on a clean soft surface, such as a furniture blanket or carpeting, being careful not to scratch the panel. Starting with the two bottom corners, insert one screw through the hole in one of the bottom corners. Align the screw with the threads on the end of a rod and fully tighten, being careful to not over tighten (Figure B). Repeat this process for all other Wine Rods.

**Pro Tip:** A cordless drill with a 4mm driver tip will save considerable time during assembly. Be sure to use a low torque setting, typically around #3, on your drill's clutch, to prevent damaging any components from over tightening.