

INSTALLATION INSTRUCTIONS

BMW 7 E38 - SINGLE XENON





Instructions

The red line marks the part that have to be modified in order to fit the entire assembly



Mount the bracket as followed

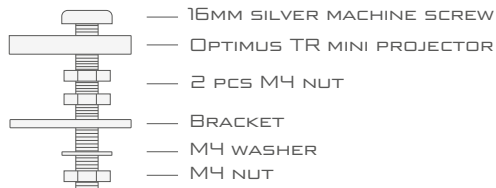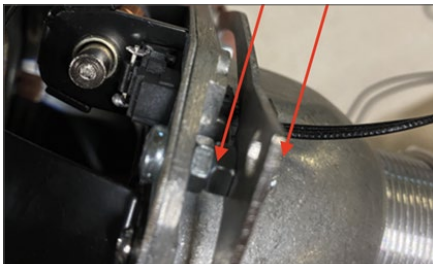

More info?

For more info about retrofitting and wire connections please scan the QR-code or visit <https://retrofitlab.com/pages/installation-instructions>

