


BMW 3 E46

SMD - Angel Eyes

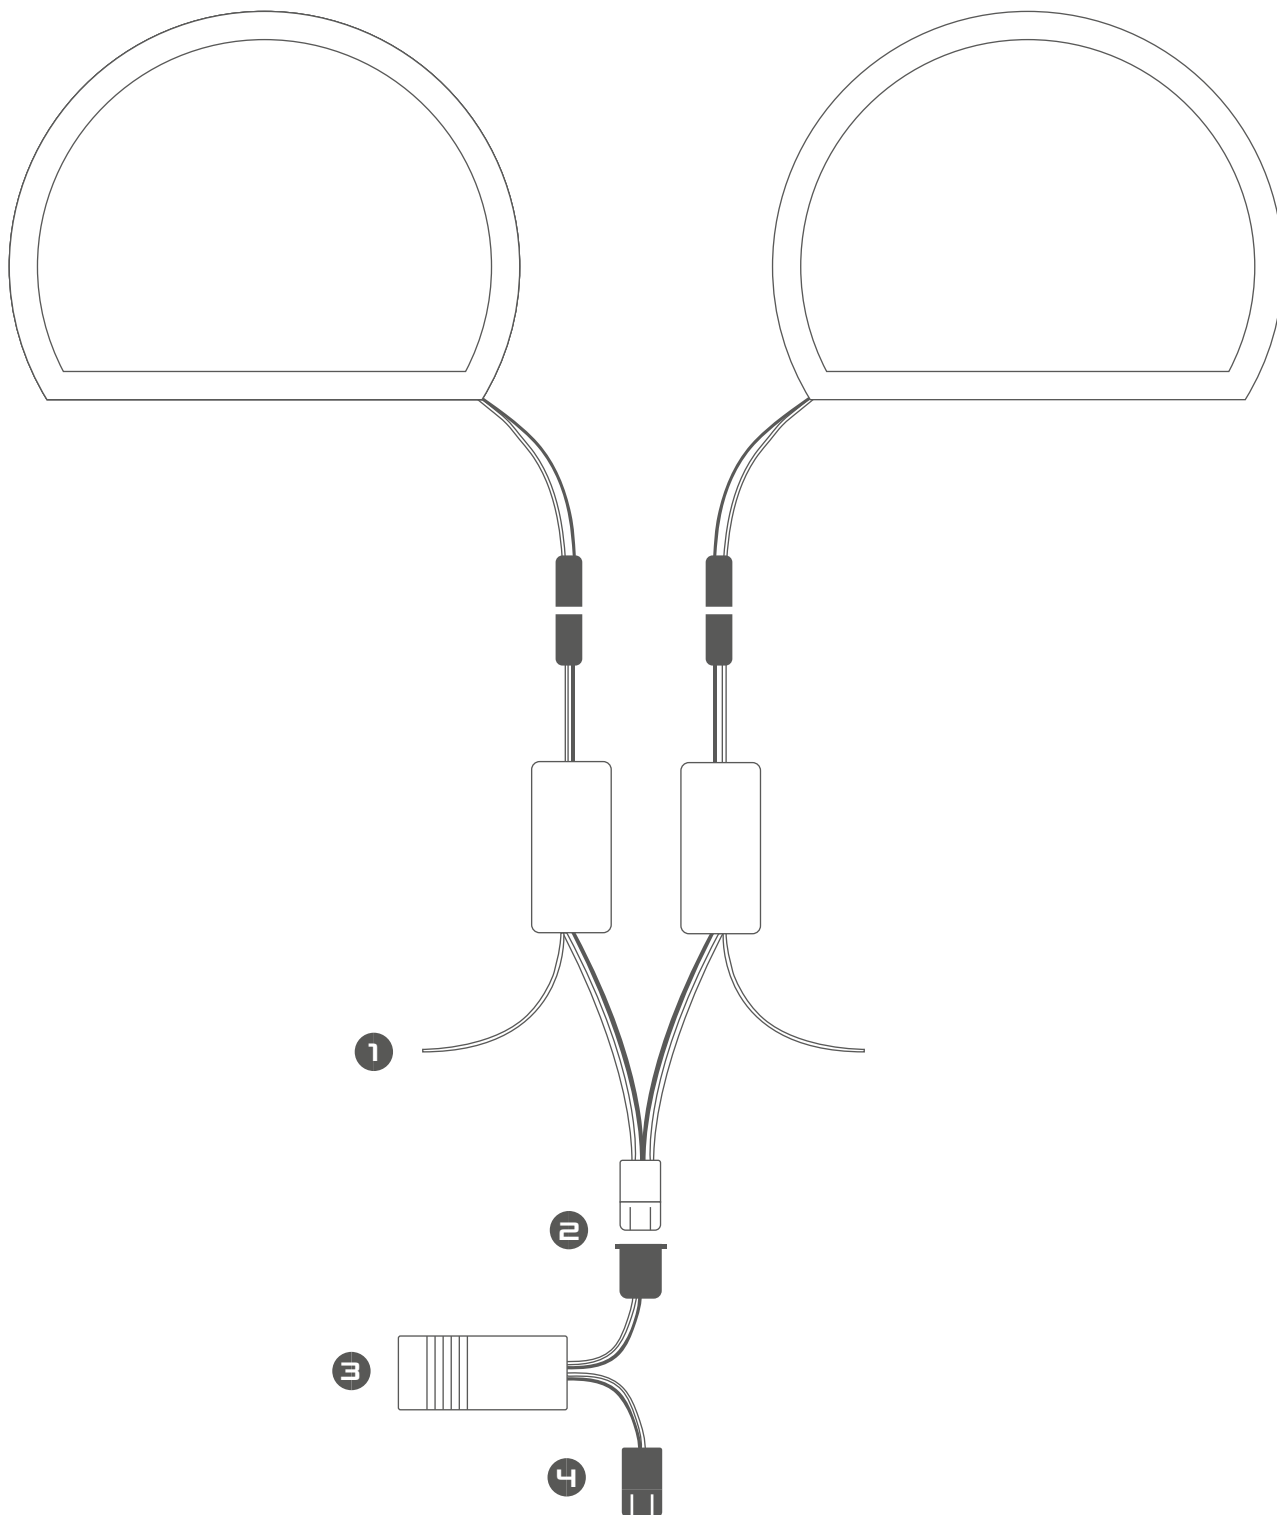

1. **White wire (dim function)**
Connect to the source of your low beam.
You can use the wires splicers that comes with this kit.
3. **SWS/ T10 canbus canceller**

2. **White Sw5/ T10 connector (dim function)**
Connect to the Sw5/ T10 canbus canceller (3)
4. **T10 connector**
Connect to your parking light/ daytime running light/ city lights (Sw5/T10)