


## WIRE HARNESS LAYOUT - LED SHROUDS (DRL + TURN SIGNAL)

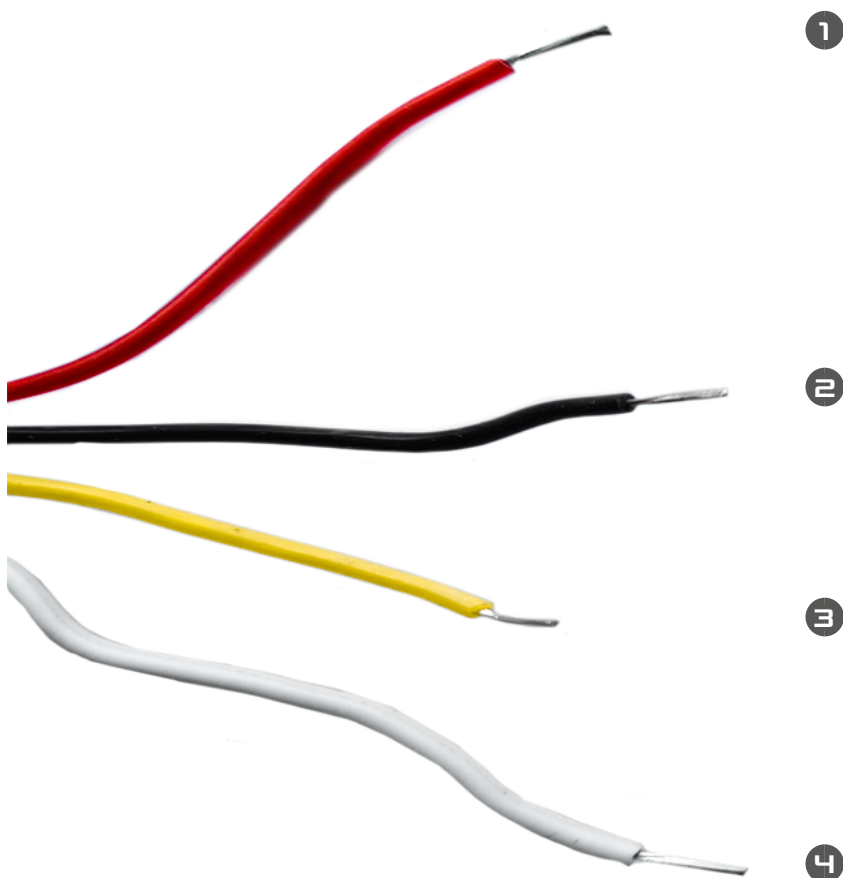

1. Connect to positive (12v+) of the daytime running light
2. Connect to negative (-) of the daytime running light
3. Connect to positive (12v+) of the turn signal
4. Connect to the Positive (12V+) of the low-beam signal\*

*\*THIS WILL DIM THE DRL WHEN LOW-BEAM IS ACTIVATED. IN CASE OF HID/XENON WITH A BALLAST, THE + BEFORE THE BALLAST NEEDS TO BE USED.*